



LIPPERT
COMPONENTS®


Formerly  Atwood® Mobile Products

LITERATURE NUMBER **MPD 85920**

JACK FOOT EXTENSION INSTALLATION

Effective 12/04/07

Use ONLY on Atwood® Electric & Manual Ball Screw Truck Camper Jacks

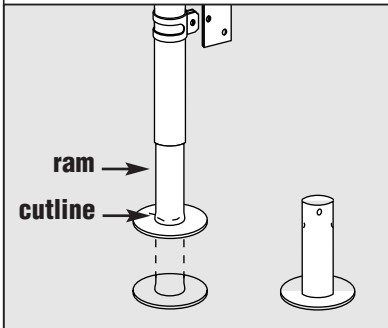

For complete camper jack instructions
consult MPD 87903.

6. Drill .406" (13/32") diameter holes in the ram.
7. Install the ram insert inside the ram, within 1" above the .406" (13/32") hole and silicone seal in place. This is to keep dirt or other contaminants out of the screw.
8. Re-mount jack on camper.

TO USE

Extend jacks 8" past the outer housing.

Mount the 6" Extension to the modified jack with the supplied lock pin.

Follow the Jack Operation directions per the Camper Jack IOM - MPD 87903.

NOTE

Extensions may be removed from jack when camper is being transported.

STORAGE

1. **Only** remove the Extension from the jack once the load is off the jack and the foot is off the ground.
2. Store extensions in camper for later use.
3. Fully retract jacks.

INSTALLATION

1. Remove jack from camper.
2. Extend ram 8" past end of outer housing.
3. Cut the jack foot off within a 1/4" from the weld. Care must be taken to insure this cut is within 2" from perpendicular to the centerline of the ram.
4. Slip the Extension over the end of the ram until the ram bottoms out on the extension detents.
5. Use the .406" (13/32") diameter holes in the extension as a template to make holes in ram. The ram must be bottomed out against the extension detents.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.