

DOORS

Purpose

This document describes the procedure to replace the vertical mullion in the center of the screen door of an RV entry door.

Resources Required


- Cordless or electric drill or screw gun
- Rubber mallet or flat screwdriver and hammer
- Appropriate drive bits
- PN 645028 replacement vertical mullion

Procedure

1. Remove both top screws on each side of the screen's horizontal mullion (Fig. 1).
2. Pull out enough of the screen spline in order to provide room to maneuver during the replacement procedure, about 4" past the vertical mullion (Fig. 2).
3. Pull out on vertical mullion to remove it (Fig. 2).

NOTE: Verify that the existing mullion mounting points are clear of debris, prior to the installation of the new replacement mullion.

4. Install replacement vertical mullion by tapping it softly to seat it.
5. Replace the spline using a rubber mallet or a flat screwdriver and hammer to reinstall.
6. Reinstall the top horizontal mullion screws (Fig. 1) on both sides of the screen.

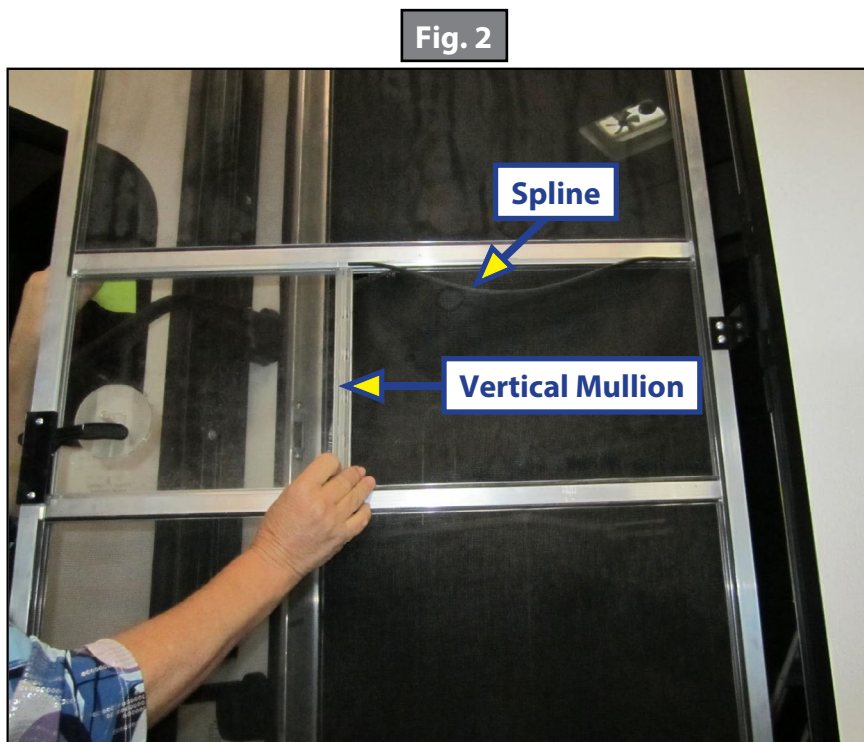

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.