


## DOORS

**NOTE:** Addendum to Entry Door OEM Installation Manual.

Fig. 1

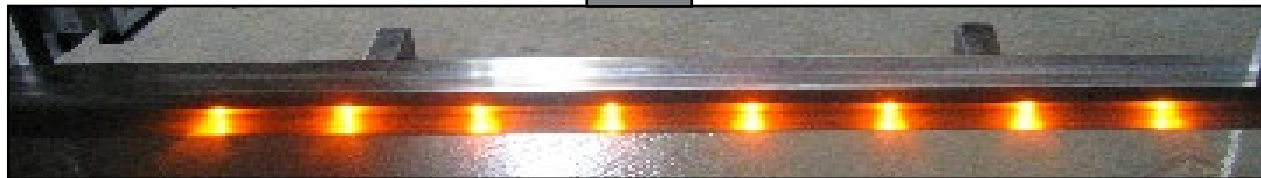

## Wiring

Red to 12V DC - 16 gauge minimum

Black to ground - 16 gauge minimum (Fig. 2)

18 gauge back loop - N/A - For normal light operation loop **MUST** remain connected as delivered.

OEM to provide 3A fuse per RVIA standards.

Fig. 2


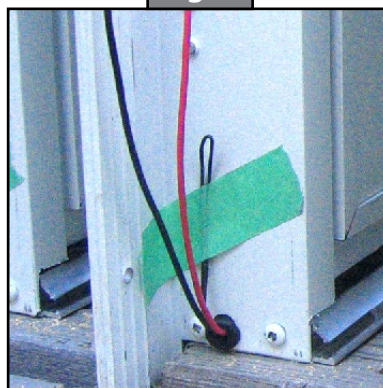


Fig. 3

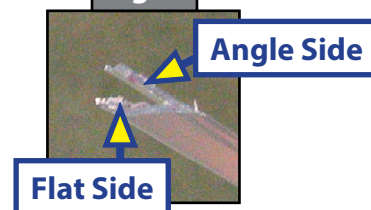

## Lens Installation

Lens to be installed flat side down; angle side up.

| Part Numbers           |                        |
|------------------------|------------------------|
| <a href="#">211410</a> | Clear Threshold (Lens) |
| 213821                 | Undercover             |
| 205512                 | Outer Frame            |
| <a href="#">216500</a> | LED Light Strip        |

Fig. 4



Moving left to right, press beveled edge into threshold groove.

Fig. 5



Continue pushing top edge into groove, snapping into place.

Fig. 6



Finish by snapping edge completely to the end of threshold.

---



---

# This manual is provided courtesy of **RV Tech Cheat Sheet**



**Professional resources for the whole RV industry — free.**

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.

---



---

**[rvtechcheatsheet.com/manuals](https://rvtechcheatsheet.com/manuals)**

**Find thousands more RV manuals, wiring diagrams and parts lists**

**RV techs:** share fixes, ask questions and learn from each other.

**Join our free Facebook group →**

---



---

Follow proper safety practices. If in doubt, consult a professional RV technician.