



LIPPERT
COMPONENTS®


Formerly  Atwood Mobile Products

LITERATURE NUMBER **MPD 85351**

MOTOR REPLACEMENT

Effective 12/04/07

For Atwood® Electric Ball Screw Truck Camper Jacks and Power Tongue Jacks

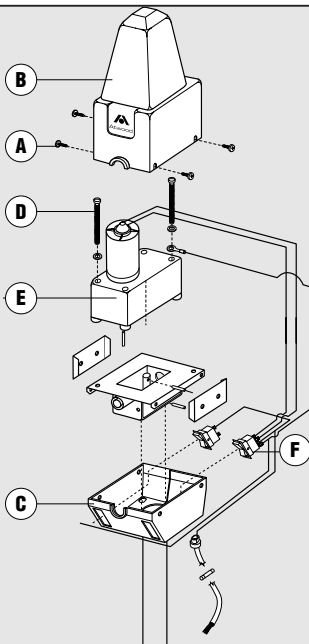

Atwood Electric Ball Screw Truck Camper Jacks are designed to be used in sets of four with one at each corner of the truck camper. Power Tongue Jacks are designed to be used on the tongue of a RV travel trailer.

REMOVAL PROCEDURE

1. Disconnect electrical lead from jack to camper.
2. Remove four screws-(A) located on each side of cover-(B). Remove top cover. Slide bottom cover-(C) down jack leg.
3. Remove two screws-(D) attaching motor-(E) to jack. Disconnect two electrical wires on motor from switches-(F). Lift motor off of jack.
4. Align motor shaft with groove pin in top of screw shaft. Rotate motor so that slots align with two threaded holes in mounting surface. Attach screws.
5. Reattach wires to motor switch. Verify ground connection.
6. Attach top and lower motor cover with four screws.

For complete Electric Ball Screw Truck Camper Jack instructions consult **MPD 87903**.
For complete Power Jack instructions consult **MPD 87083**.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.