

INTERIORS

Purpose

This document provides instructions on replacing the finger pull release with a parachute pull release.

Safety

Read all instructions and safety labels before beginning any component replacement.

WARNING

The "WARNING" symbol above is a sign that an installation procedure has a safety risk involved and may cause death or serious injury if not performed safely and within the parameters set forth in this manual.

Always wear eye protection when performing this installation procedure. Other safety equipment to consider would be gloves and possibly a full face shield, depending on the nature of the installation procedure.

Procedure

1. Remove screw in the finger pull handle (Fig. 1).
2. Pull the finger recliner handle out of the hole.

Fig. 1



3. With the handle out, pinch the "U" shaped wire together on the backside of the handle. The wire will come out and allow for the removal of the recliner cable from the plastic.
4. Leave the cable out and reinstall the plastic handle **ONLY** back into the hole.
5. Remove the backrest.
 - A. To remove the backrest, pull out on the spring clip (Fig. 2) that is attached to the backrest structure, then pull the backrest off the chair.

Fig. 2



INTERIORS

- B. Put the chair arm side down on the ground (Fig. 3) and release the footrest.
6. Remove the wood screws (Fig. 4A) that secure the arm on to the side of the seat frame.

Fig. 3

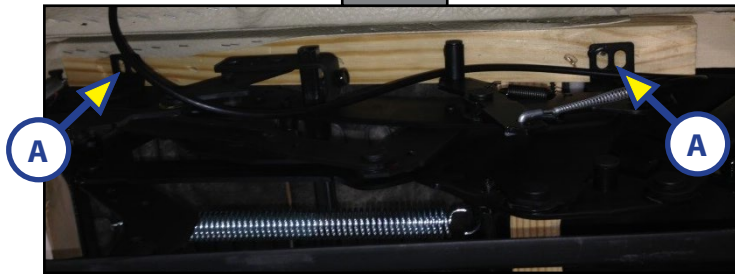


Fig. 4



NOTE: Look for any wood screws hidden under the mechanism. To do this, remove the mechanism by removing the four wood screws around the perimeter of the mechanism (Fig. 5A).

Fig. 5



7. Install the parachute handle on the seat frame on the side that was against the arm. Put the parachute 6" from the front edge of the seat cushion. Make sure the parachute screw plate is near the top edge of the seat frame wood (Fig. 6).

Fig. 6





RECLINER FOOTREST FINGER RELEASE CONVERTED TO A PARACHUTE RELEASE

TI-289

INTERIORS

8. Remove old cable from mechanism.

NOTE: It may be necessary to break the plastic clip that is snapped in to the mechanism.

9. Secure the new parachute cable clip in the mechanism slot and insert the "S" into the lower hole of the mechanism actuator.
10. Secure the recliner mechanism to the seat structure.
11. Utilizing the same holes, secure the seat frame and mechanism onto the arm structure with the previously removes wood screws.
 - A. Make sure not to overtighten the screws and strip out the holes.
 - B. Make sure the seat frame wood meets the arm wood at the lower corner of the arm structure.
 - C. Make sure the footrest is even with the front lower corner of the armrest structure.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.