


AWNINGS

Purpose

The purpose of this document is to depict the proper location of the fasteners securing the awning fabric to the awning rail. Incorrect placement of the fasteners could result in wrinkling of the awning fabric.

The #6 x 1/2" hex screw should be no more than 1" inside the edge of the fabric on both ends. The screw is installed down through the awning rail into the fabric and the polycord (Fig. 1).

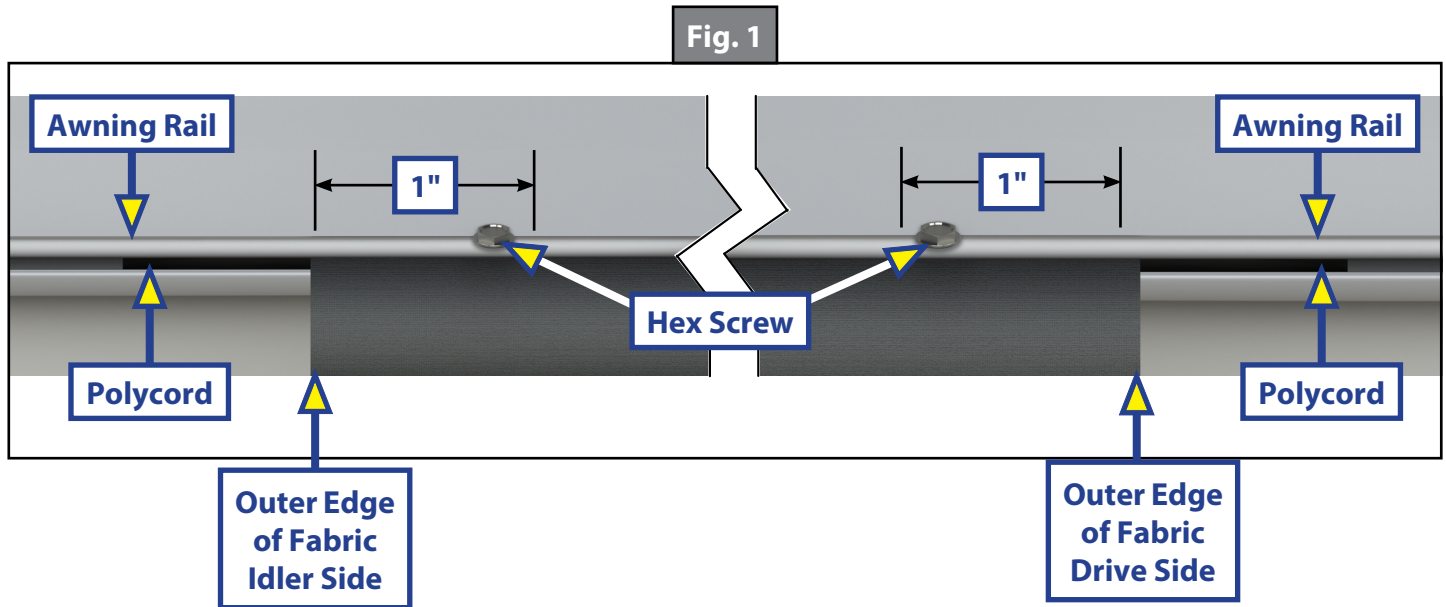



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.