



LIPPERT
COMPONENTS®



by  Lippert Components®



Solera® Side Shade

Installation and Owner's Manual

(For Aftermarket Applications)

Table Of Contents

Introduction	2
Resources Required	2
Installation	2
Notes	4



Solera® Side Shade

Installation and Owner's Manual

(For Aftermarket Application)

Introduction

The Solera® Side Shade is designed for use on most recreational vehicle units and is available in a variety of sizes to fit even the largest unit. The Side Shade can be used on Solera® Awnings as well as Carefree Awnings and Dometic Awnings.

Additional information about this product can be obtained from lci1.com/support or by downloading the free MyLCI app. The app is available on iTunes® for iPhone® and iPad® and also on Google Play™ for Android™ users.

iTunes, iPhone and iPad are registered trademarks of Apple Inc.

Google Play and Android are trademarks of Google Inc.

⚠ WARNING

IF STAKING SOLERA® SIDE SHADE TO THE GROUND, BE SURE TO DISABLE ANY AND ALL SELF RE-TRACKING WIND SENSING OPTIONS ON THE AWNING. FAILURE TO DO SO COULD RESULT IN DAMAGE TO THE AWNING AND UNIT.

⚠ CAUTION

MOVING PARTS CAN PINCH, CRUSH OR CUT. KEEP CLEAR AND USE CAUTION.

Resources Required

- Cordless or Electric Drill or Screw Gun
- Appropriate Drive Bits
- Rivet Gun
- $\frac{3}{16}$ " Drill Bit

Installation

NOTE: There are 2 sets of brackets that can be mounted, 1 set on each end of the awning. The brackets allow the shade to be moved to either side of the unit depending on the sun's location.

1. Mount the upper bracket $\frac{1}{2}$ " past the edge of the fabric and $\frac{1}{2}$ " below the awning rail with the #10 screw or molly rivet provided (Fig.1).



Fig.1

2. Starting on 1 end of the roll tube, position a roll tube bracket flush with the valance roll tube channel, $\frac{1}{2}$ " from the fabric. Mark the mounting holes on the roll tube. Drill the holes using a $\frac{3}{16}$ " drill bit. Mount the bracket using the pop rivets provided (Fig.2).

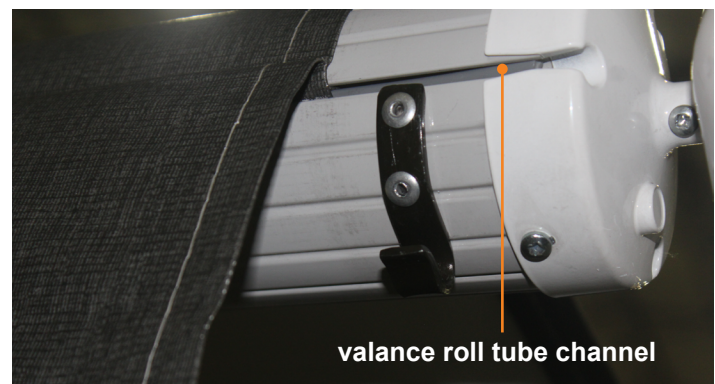


Fig.2

Solera® Side Shade

Installation and Owner's Manual

(For Aftermarket Application)

3. There are 4 loops on the rear of the shade (Fig.3). Use the loop that best matches the pitch of the awning.



Fig.3

4. Place the desired loop on the pull rod (Fig.3A) and hook the loop on the bracket on the unit (Fig.4).



Fig.4

5. For the side shade to tension properly, the adjustment cord needs to go through the grommet (Fig.5) and attach to the roll tube bracket (Fig.6).



Fig.5



Fig.6



506234-SOL-INSTAL-1/17

NOTE: To remove the side shade for storage, remove the spikes and tie downs, release the tension on the adjustment cord and unhook the loops from the roll tube bracket and upper bracket. Fold to fit in the storage bag provided.

This image shows a blank sheet of white paper with horizontal blue ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



Please recycle all obsolete materials and contact Lippert Components with concerns or questions.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.