



THREE SEASONS DOOR OEM INSTALLATION MANUAL

L I P P E R T
C O M P O N E N T STM


TABLE OF CONTENTS

Prior to Installation	2
Measurements	2
Installation	3
Notes	7

Prior to Installation

Measurements

1. Measure interior height of unit by measuring off of the ceiling to the floor 1 ½" from inside back wall.
2. Measure interior width of unit going from interior wall to interior wall 1 ½" inside of the door frame.
3. Record all measurements and provide to LCI for proper variant number.

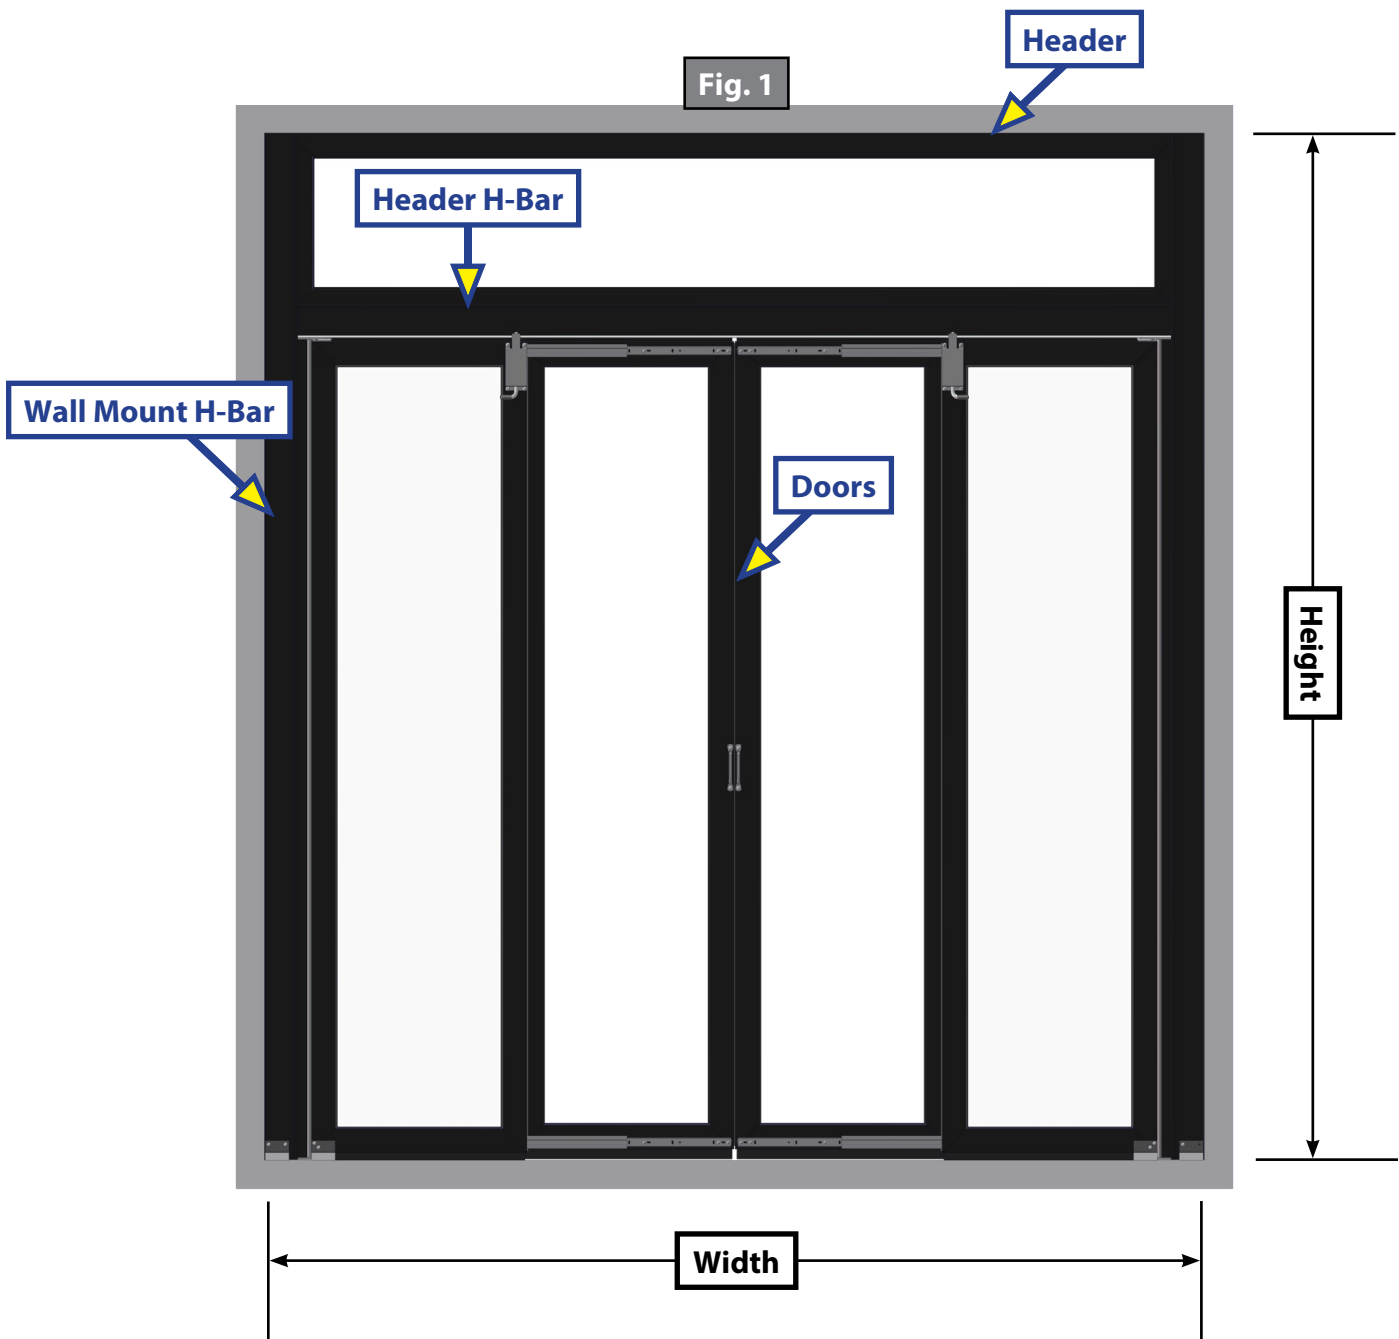

Installation

1. Measure 1 ½" inside the coach from ramp door jamb. Wall Mount H-bar exterior edge will start there.

NOTE: The patio door frame is inset 1 ½" so that the ramp door will close with the patio railing kit installed.

2. Attach Wall Mount H-bars (Fig. 3A) to sidewalls making sure they are parallel and straight to one another, then secure to studs in the wall.
3. Insert Header (Fig. 3A) center between Wall Mount H-bars (Fig. 3B) and slide all the way to the top, securing to Wall Mount H-bars. Make sure header is centered.

Fig. 2


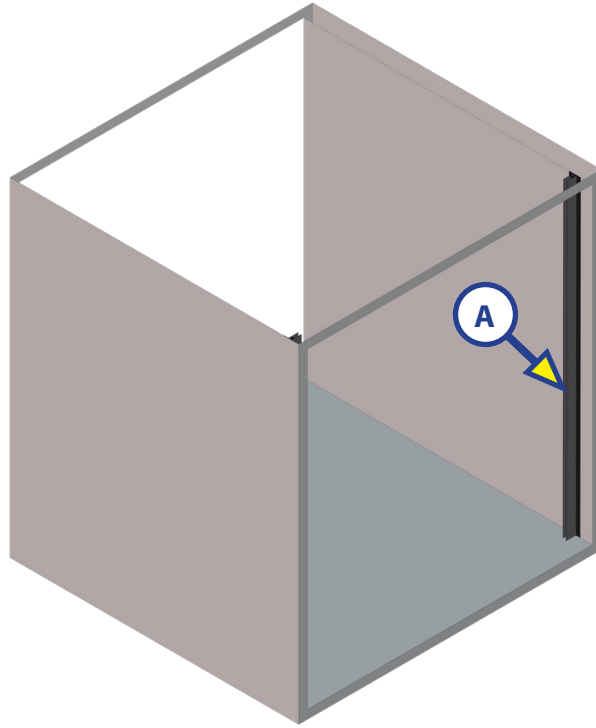


Fig. 3

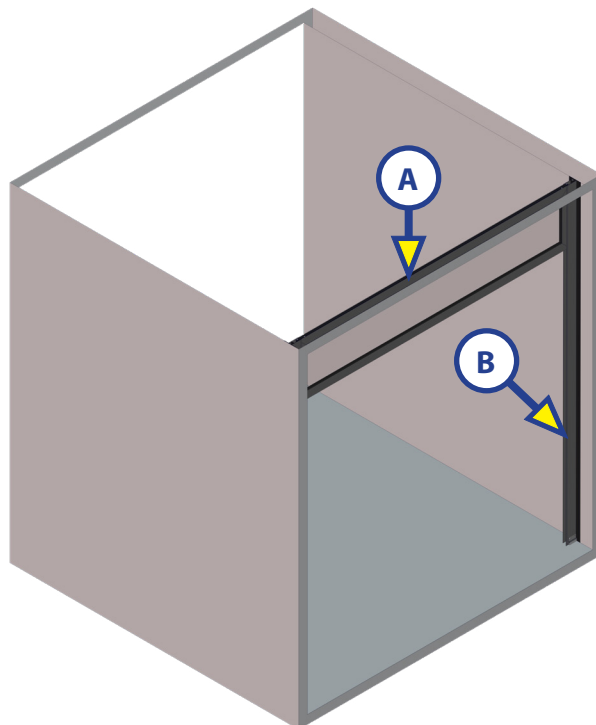

4. Insert Header H-Bar (Fig. 4B) below Header (Fig. 4A). Allow to float until doors are installed.
5. Slide doors (Fig. 5A) into Wall Mount H-bars (Fig. 5C, B) about 1 ½" and secure at bottom of doors (Fig. 6). Once both sides are secure at the bottom, slide doors closed until they meet in the middle (Fig. 7).

Fig. 4

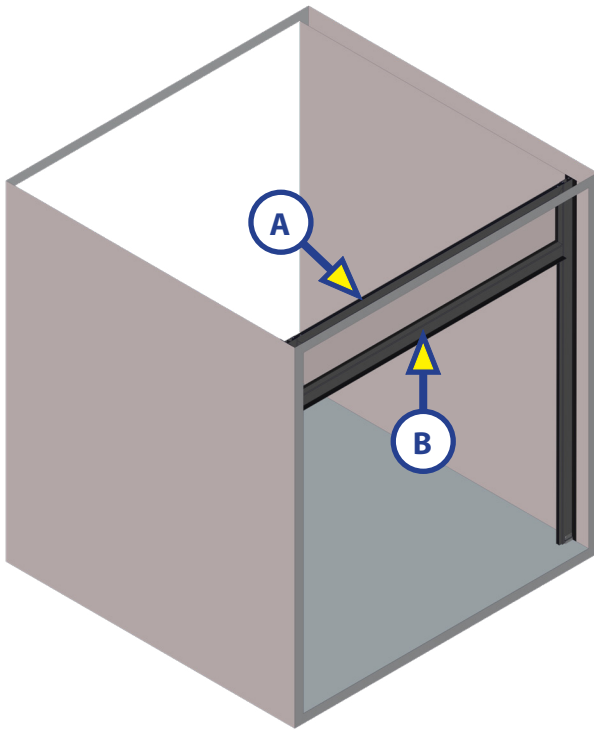


Fig. 5

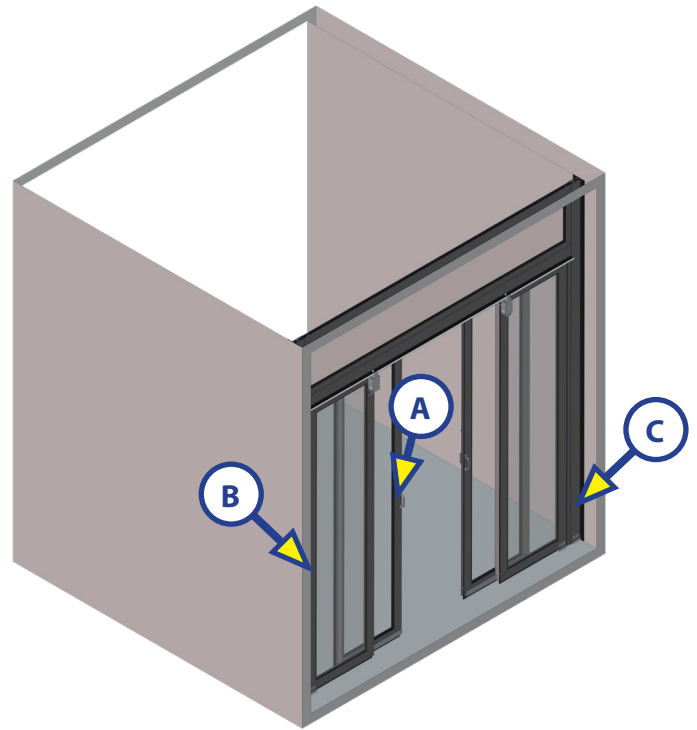


Fig. 6



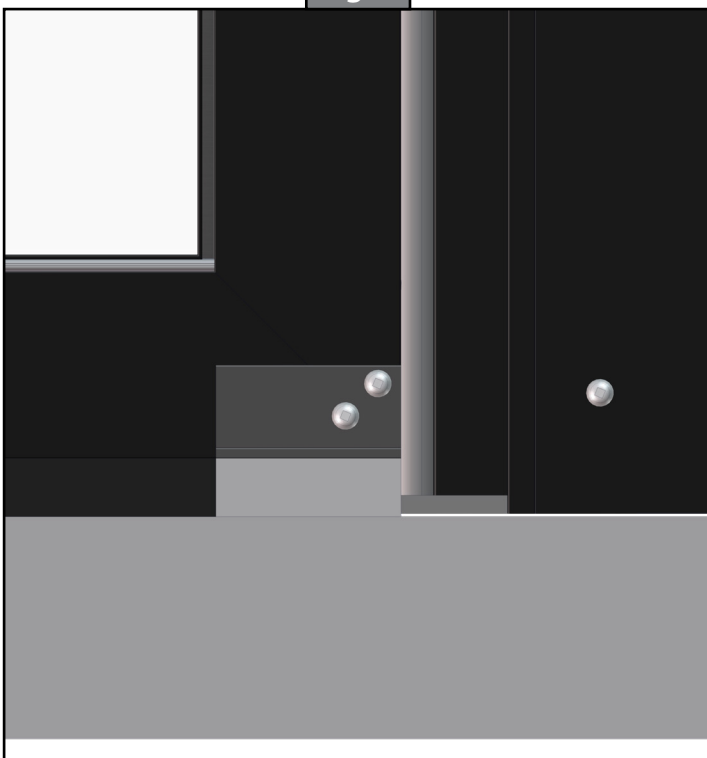


Fig. 7

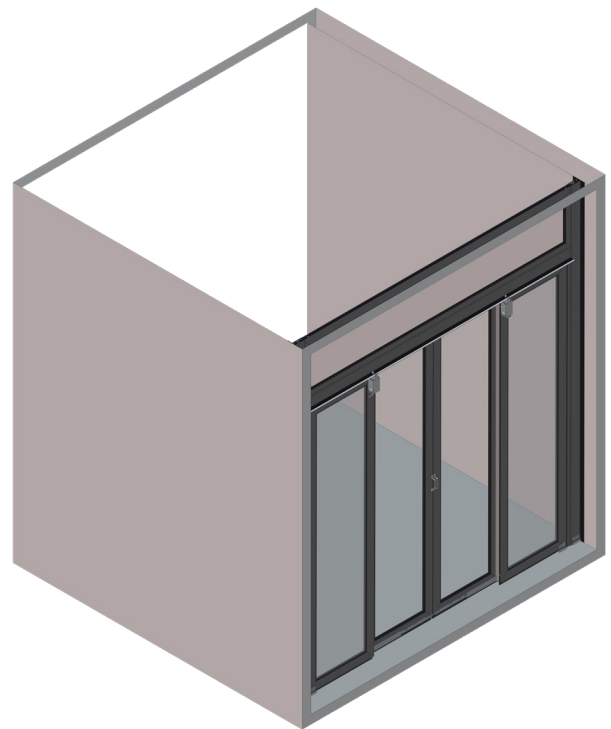


NOTE: Be sure the latches and top of doors are lined up and doors are parallel with each other before completing Step 6.

6. Secure top edge of both doors. Then complete by screwing all the way down the Wall Mount H-bar frame into the door (Fig. 9).
7. Move Header H-bar down until all space at top of the door panels is gone, then secure the Header and H-bar.
8. Mark position for door latching mechanisms into the Header and H-Bar and drill $\frac{1}{2}$ " holes for insertion of pins (Fig. 8A).

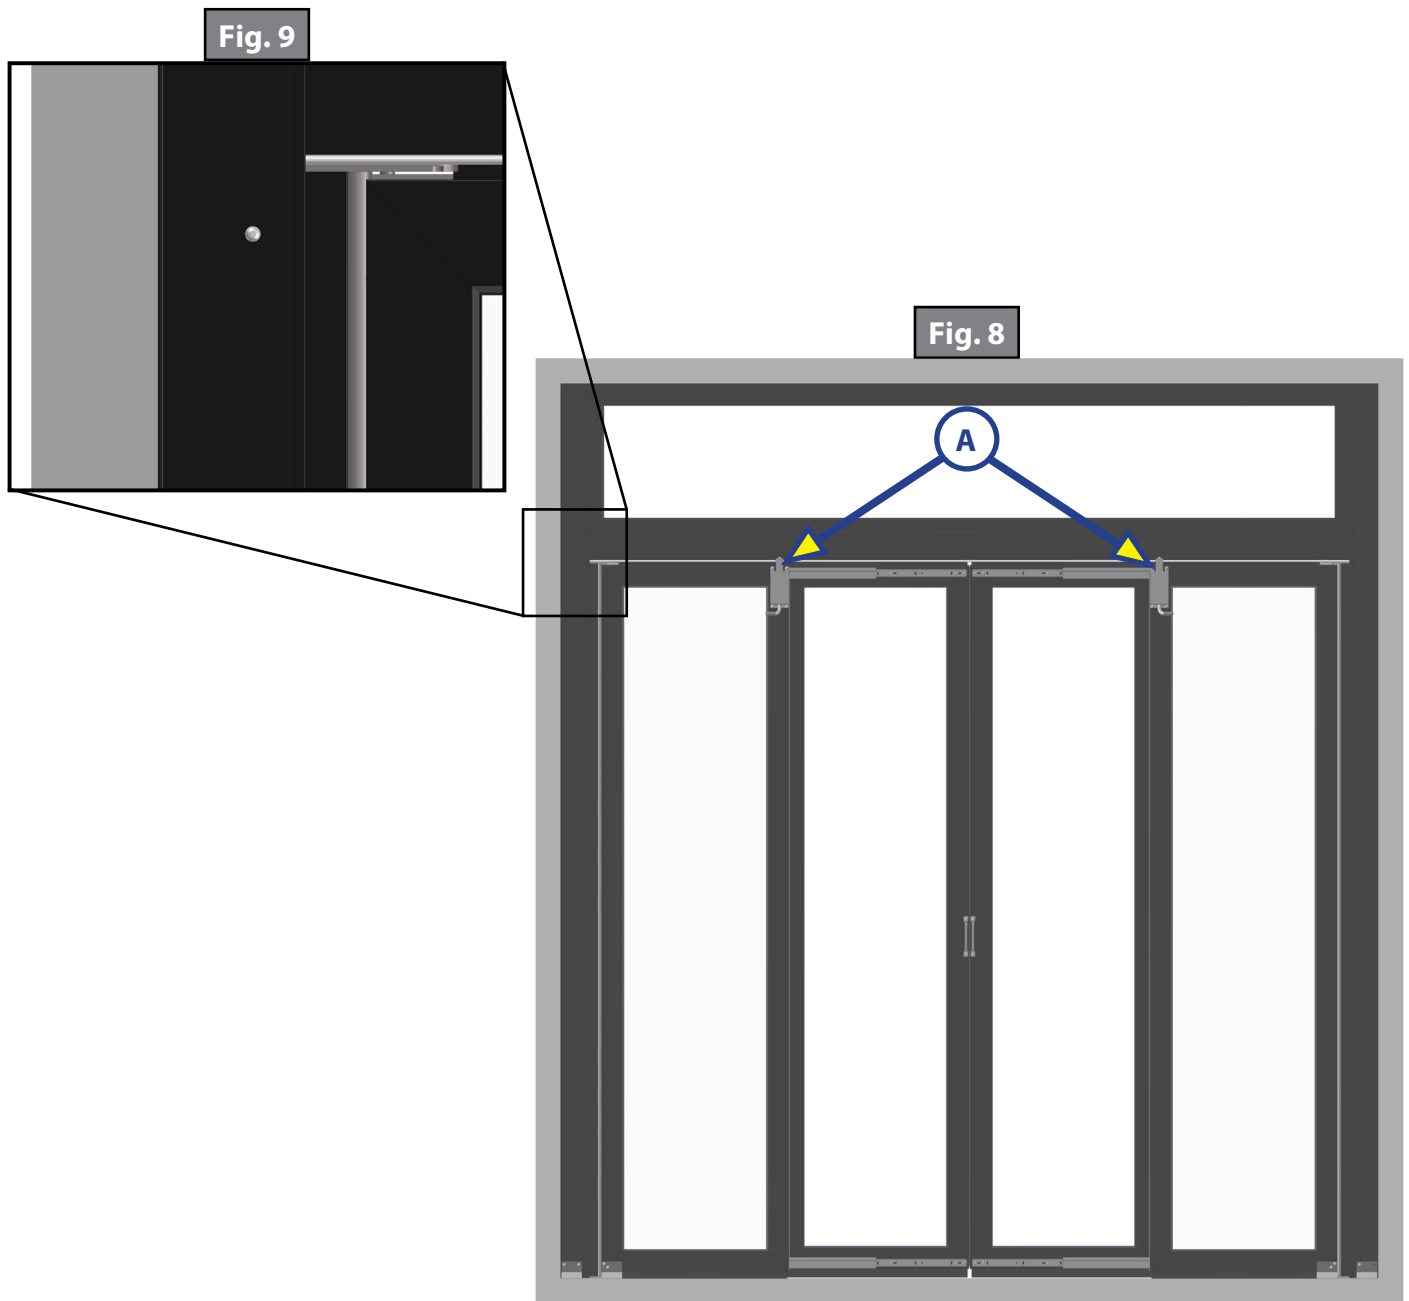

9. Open doors completely (Fig. 10), then secure hinge bracket to Header H-bar (Fig. 11) and floor (Fig. 12).

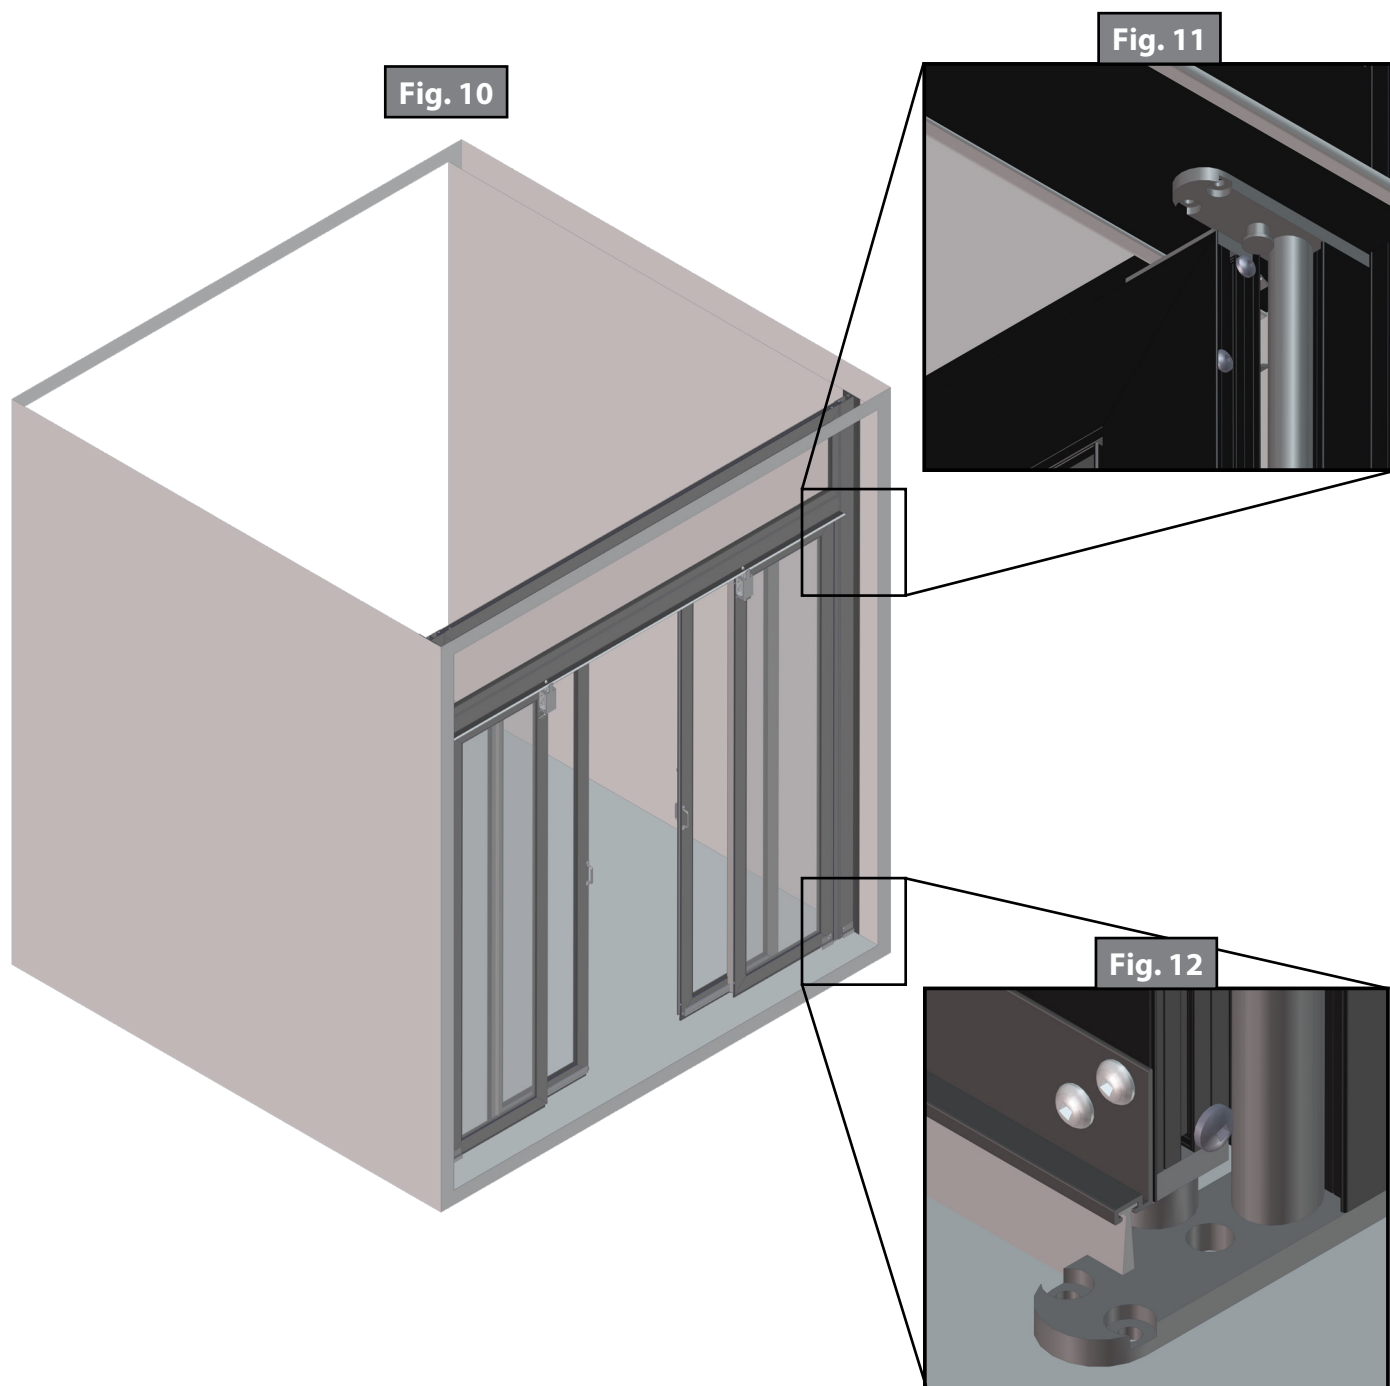

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



L I P P E R T C O M P O N E N T STM

The contents of this manual are proprietary and copyright protected by Lippert Components, Inc. ("LCI"). LCI prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized LCI representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of LCI.

Revised editions are available for free download from lci1.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact
Lippert Components, Inc.

Ph: (574) 537-8900 | Web: lci1.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.