

FURNITURE

Resources Required

- Cordless or Electric Drill or Screw Gun
- Appropriate Drive Bit

Installation

Included with Lippert Interiors Tri-Fold Sofas are 4 wooden feet (Fig. 1A) that need to be attached with the accompanying 8 screws (Fig. 1B) (2 screws per foot). The feet and screws are packaged together.

1. Gently lay the sofa on its back, exposing the bottom for installation of the 4 feet.
2. Starting at any foot location (Fig. 2A), feel for the inside edge of the wooden mounting blocks beneath the sofa fabric.
3. Line up the bottom edge of each foot with the edge of the wooden mounting block, with the screw holes in the foot oriented horizontally (Fig. 3). The feet should also be centered on the leg horizontally.
4. Install two screws securely into each screw hole and into the wooden mounting block. The screw heads will be inset down into the screw holes of the wooden feet.


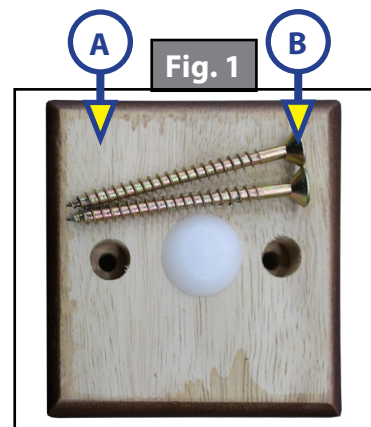


Fig. 2- Bottom of Sofa



Fig. 3



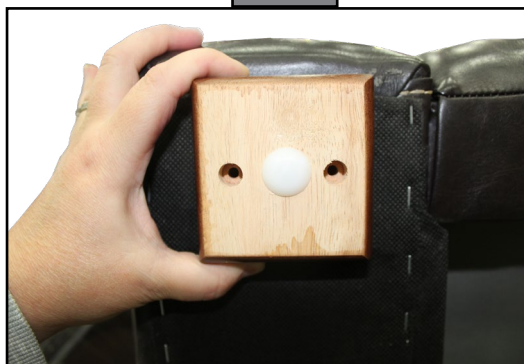

This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.