

AllTrek 4000™ TANDEM

INSTALLATION INSTRUCTIONS



The MORryde **AllTrek 4000™** is the affordable way to upgrade your 5th wheel or travel trailer. By replacing the steel equalizers with shock-absorbing rubber compression springs, the **AllTrek 4000™** allows up to 4" of total suspension travel.

PARTS LIST:

- (2) **AllTrek 4000™** Equalizers

TOOLS REQUIRED:

- Torque Wrench • 11/16" Socket & 13/16" Wrench • Floor Jacks
- Safety Stands • Ratchet


INSTALLATION:

Step 1

Loosen all lug nuts. Using appropriately rated jacks, raise the unit and support the frame with safety stands. Support the axles with floor jacks and remove all wheels.


Step 2

Remove the shackle links from the equalizer, then remove the shoulder bolt from the frame hanger.

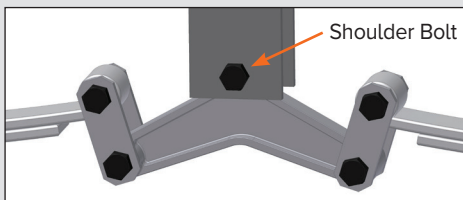

Step 3

Replace the stock equalizer with the **AllTrek 4000™**. Reinstall the shackle links and tighten all nuts to 40 ft-lbs.

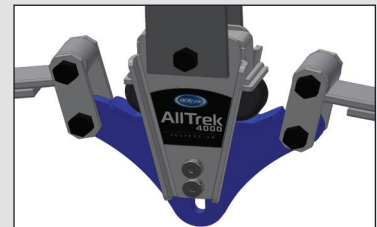

Step 4

Reinstall all wheels, then remove the jacks and supports from the frame and axles. Torque all lug nuts according to manufacturer specifications.

If you have any questions regarding the installation procedure or have difficulty with any of the steps, please give us a call at **574-293-1581** or email **parts@morryde.com**.



Above. Beyond. Always.

574.293.1581 • MORryde.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.