

CRE3000

SUSPENSION SYSTEM

QUALIFICATION GUIDE



STEP 1A

If axles are Over Slung (OS) as shown in figure 1, ALL frame hangers need to be a minimum of 3 1/4" tall.

STEP 1B

If axles are Under Slung (US) as shown in figure 2, ALL frame hangers need to be a minimum of 4 1/4" tall.

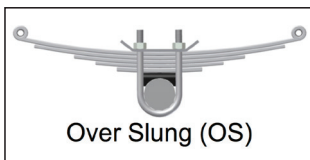


figure 1

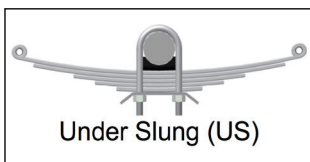


figure 2

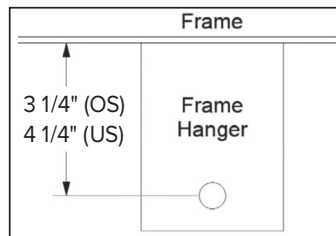


figure 3

STEP 2

Equalizer hanger width MUST be 3" and 1 1/2" from edge of hanger to center of hole. If wider, trim hanger as shown in figure 4. Contact MORryde for variations other than what is shown.

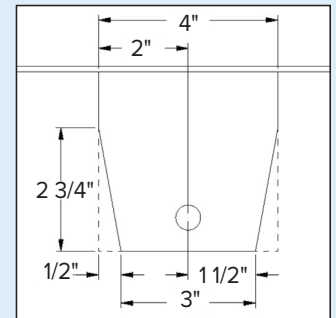


figure 4

STEP 3

If frame hanger has height adjustment, the CRE3000 must be installed in the tall ride height (lowest hole) OR the taller setting(s) (lowest holes) could be cut off—be sure to leave the same amount of material below the installation hole as there was below the bottom hole.

STEP 4

A 1 3/4" wide double-eye leaf spring must be used. The CRE3000 is not compatible with slipper-style leaf springs.

STEP 5

Verify the frame hanger spread (FHS) as shown in figure 5 meets the minimum measurement required given the variables in the table below.

Wheelbase	Leaf Spring Length	Equalizer Length	Minimum FHS Measurement	
			Tandem	Triple
31"	24"	N/A	54 7/8"	85 7/8"
33"	26"	N/A	58 7/8"	91 7/8"
35"	26"	N/A	60 3/4"	95 3/4"
42"	26"	14 3/4" (See figure 6)	67 3/4"	N/A
42"	31"	10" (See figure 7)	72 3/4"	N/A

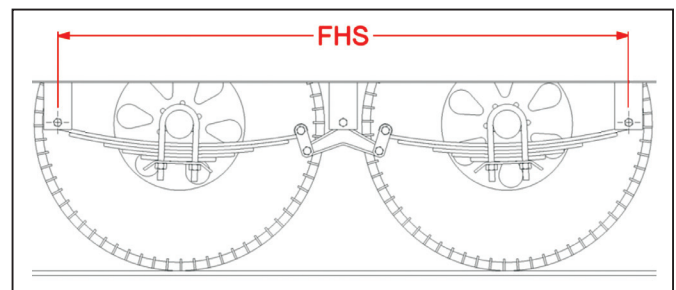


figure 5



figure 6

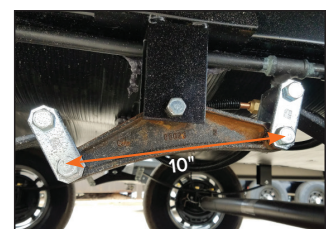


figure 7

STEP 6

Shackle links that measure 2 1/4" from hole center to hole center must be used. The only exception is for units with equalizer hangers that are at least 4 1/4" tall AND the axles are overslung. In this case, either the 2 1/4" or 3 1/8" shackle links can be used.

STEP 7

Take the following measurements:

_____ (A) Distance from the side of the tire to the side of the frame hanger.
A minimum of 1 11/16" is required.

_____ (B) Distance from the top of the tire to the bottom of the floor at load.
A minimum of 3" is required. It is best practice to utilize a bump stop on the frame of the trailer for the axle assembly to bottom into before the tire contacts the floor.

_____ (C) Distance from the closest part of the axle assembly to the underside of the frame at load. A minimum of 2 1/2" is required.

_____ (D) Height of the stock equalizer from the center of the top bolt hole to the center of the bottom bolt hole.

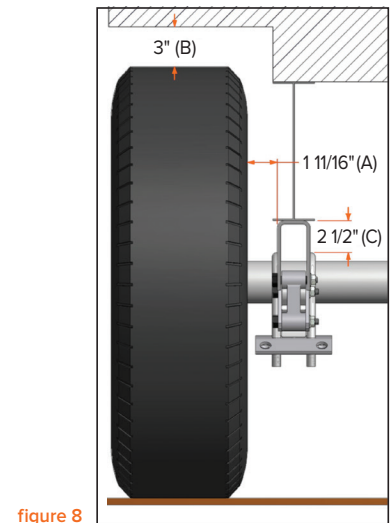


figure 8

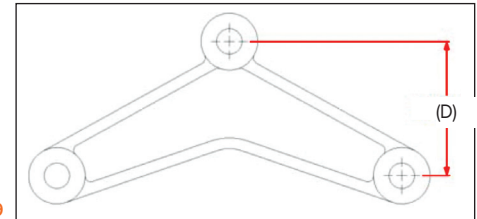


figure 9

STEP 8

It is important to verify that the installation of the CRE3000 will not affect the above clearance requirements.

OPTION 1:

If your measurement (D) is **greater than 2 3/4"**,
perform the following calculations:

$$\frac{\text{Measurement (D)} - 2 \frac{3}{4}"}{2} = (X)$$

Subtract Measurement (X) from Your Measurement (B).

(B) - (X) = must be a minimum result of 3"

Subtract Measurement (X) from Your Measurement (C).

(C) - (X) = must be a minimum result of 2 1/2"

OPTION 2:

If your measurement (D) is **less than 2 3/4"**,
perform the following calculations:

$$\frac{2 \frac{3}{4} - \text{Measurement (D)}}{2} = (Y)$$

Add Measurement (Y) to Your Measurement (B).

(B) + (Y) = must be a minimum result of 3"

Add Measurement (Y) to Your Measurement (C).

(C) + (Y) = must be a minimum result of 2 1/2"



Above. Beyond. Always.

574.293.1581 • www.MORryde.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.