

JEEP UNIVERSAL AMMO CAN TRAY INSTALLATION INSTRUCTIONS

If being used with MORryde JK Side Mount for Wrangler:

Use existing hardware to attach the tray to the mount through the square holes in back of tray. Insert supplied rubber pad before inserting ammo can.

If being used with third party mounts:

The Universal Ammo Can Tray has mounting holes that can be used with many popular Jeep accessories that provide mounting locations for either standard Jerry Can trays or Rotopax® container mounts, such as swing away spare carriers. The mounting holes for those locations are indicated on the parts diagram below. Depending on where you plan to mount the tray, you may need bolts other than those supplied.


If being used with MORryde TJ Side Mount or a Spare Tire Mount:

Use provided hardware to attach the tray through the circular holes in bottom of tray. Insert supplied rubber pad before inserting ammo can.

These (4) holes match the bolt pattern of a standard Rotopax® Mount.

These (4) holes match the bolt pattern in the back of a standard ("Blitz" or Military) Jerry Can Tray.

These (4) holes match the bolt pattern in the bottom of a standard ("Blitz" or Military) Jerry Can Tray

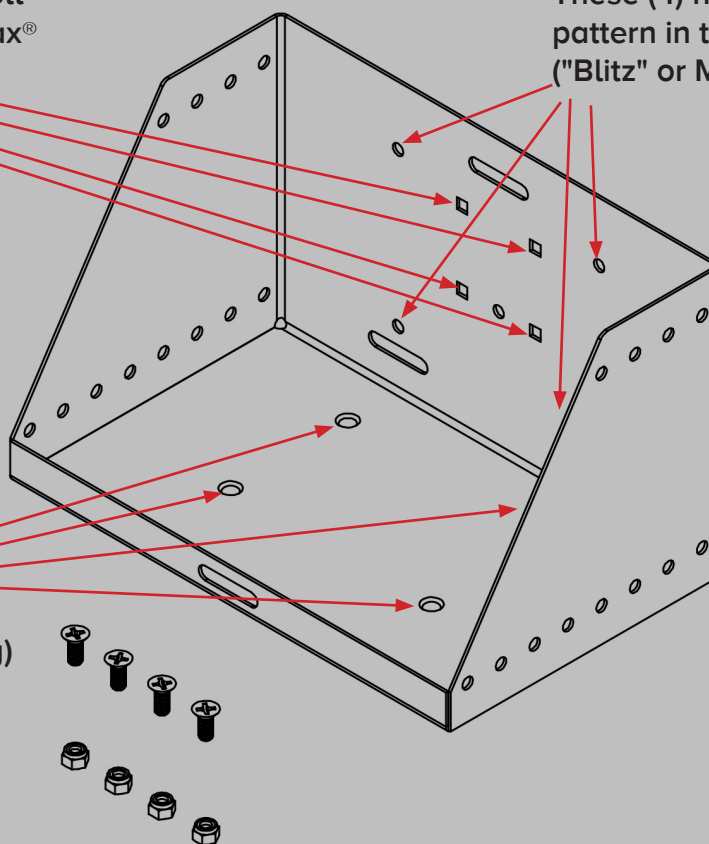



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.