

Trail Kitchen Accessory: **JP54-040**

FOLD-OUT COUNTER

INSTALLATION INSTRUCTIONS



STEP 1

Ensuring the holes in the walls of the tubes are lined up with the slots in the channel guides, insert the tubes into the channel guides. The tube nuts should face out of the holes in the storage tray. In the channel guides, insert the tubes into the channel guides. The tube nuts should face out of the holes in the storage tray.




STEP 2

Bolt the tubes into the channels using the supplied 1/4-20 bolt, plastic bearings, and nuts. Tighten the nut until it touches off on the spacer. Make sure the tubes move freely in the channel guides.




STEP 3

Line up the counter support with the tube nuts and fasten together using the supplied flat-head bolts.

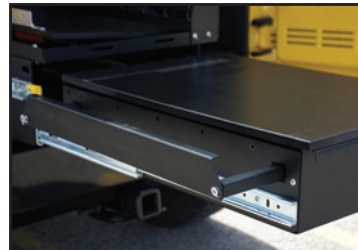

STEP 4

Line up the holes in the countertop hinge with the holes in the side of the storage tray.

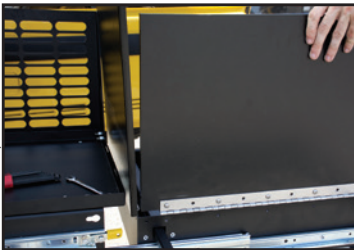

STEP 5

Fasten the storage tray to the countertop hinge using the supplied #10 bolts and nuts.

Tools Needed:

7/16" Wrench x2
3/8" Wrench
5/32" Allen Wrench
1/8" Allen Wrench

MORryde

HEAVY. DUTY. ADVENTURE.

www.MORryde.com • 574.293.1581



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.