

Trail Kitchen Accessory: **JP54-041**

BOLT-IN KIT

INSTALLATION INSTRUCTIONS




Tools Needed:

- T45 Torx Wrench/Socket
- 1/2" Wrench
- 5mm Allen Wench



STEP 1

Using a T45 socket, remove the (2) factory D-rings closest to the back seat and the next rear most D-ring on the driver-side of the Jeep.

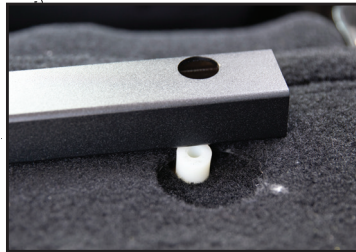

STEP 2

Place (1) 3/4" long spacer over each factory rivnut where the D-rings were previously located.



STEP 3

Line up the holes of bolt-in bracket with the (2) factory rivnuts and 3/4" spacers located behind the rear seat.



STEP 4

Fasten bolt-in bracket into rivnuts using (2) M6-1 x 30mm socket head cap screws and (2) supplied lock washers.



STEP 5

Place plastic covers in the clearance holes in the bolt-in bracket to cover up the hardware.

MORryde

HEAVY. DUTY. ADVENTURE.

www.MORryde.com • 574.293.1581

BOLT-IN KIT


INSTALLATION INSTRUCTIONS



STEP 6

Install leveling foot into passenger-side mounting rail of Trail Kitchen (as shown), placing supplied 1/2" long spacer between kitchen and foot. Secure the foot using supplied 5/16-18 center lock nut.

- If the Jeep **is** equipped with a floor-mounted subwoofer, install the leveling foot in the second rear-most hole in passenger-side mounting bracket.
- If Jeep **is not** equipped with a floor-mounted subwoofer, install the leveling foot in the rear-most hole in the passenger-side mounting bracket.

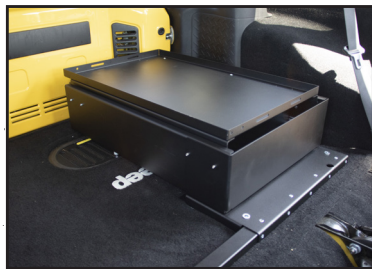

STEP 7

Align mounting holes in Trail Kitchen with desired mounting holes in bolt-in bracket:

- Rear-most hole pattern (using Jeep as reference) is for use **without** a MORryde Storegate.
- Front-most hole pattern is for use **with** a MORryde Storegate.



STEP 8

Fasten Trail kitchen to bolt-in bracket using supplied (4) 5/16-18 x 1" bolts.



STEP 9

Fasten Trail Kitchen to floor on Jeep by installing the supplied (1) M6-1 x 65mm bolt and (1) lock washer through the remaining 1" spacer and rivnut.



STEP 10

When deployed, adjust leveling foot as needed to level Trail Kitchen.

THE ULTIMATE STORAGE UPGRADE

Take your storage to the next level. Pair the Bolt-In Kit with MORryde's JK Storegate.

MORryde

HEAVY. DUTY. ADVENTURE.

www.MORryde.com • 574.293.1581



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.