


PATIO RAIL TABLE

PRE-INSTALLATION INSTRUCTIONS

The Patio Rail Table only works with MORryde rear-exit, rear patios that utilize the following patio corner brackets:

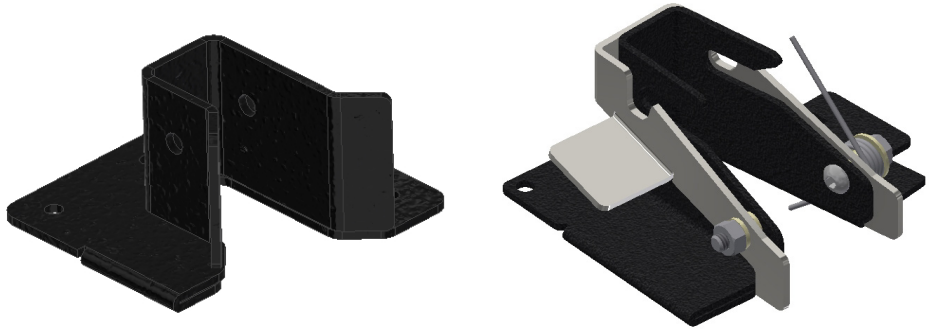


INSTALLATION INSTRUCTIONS

There are two Patio Rail Tables available: curb side (SP56-320-CS) and road side (SP56-320-RS).


STEP 1

Ensure that the pin is hanging loosely by lanyard and not engaged inside the hole in the top side of the tray.

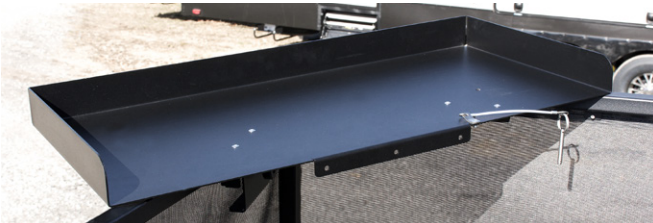

STEP 2

While making sure both mounting brackets are around both tubes, slide tray onto patio corner.

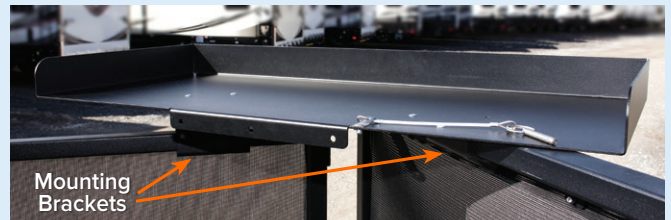

STEP 3

Turn knob until latch is vertical and tube is locked into place.



STEP 4

Place the pin through the hole in the top side of the tray and through the hole in the mounting bracket.



Above. Beyond. Always.

Please contact us if you have any questions:
574-293-1581 | www.MORryde.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.