

# QUICK CONNECT STEP

## PRE-INSTALLATION INSTRUCTIONS

Will the Quick Connect Step work for your RV? Please review the steps below.

STEP 1

### MOUNTING SPACE

Measure the space between the bottom of the threshold and the bottom of the skirt. A minimum distance of 1.75" is required to attach the steps.




**NOTE:** The steps will not work for doors with trim under the threshold.

STEP 2

### INTERNAL FRAMING


The brackets require structural reinforcement **behind** the skirt metal and below the threshold. Units that do not have any reinforcement for the brackets will require modification. For questions contact our Parts Department at 574-293-1581.

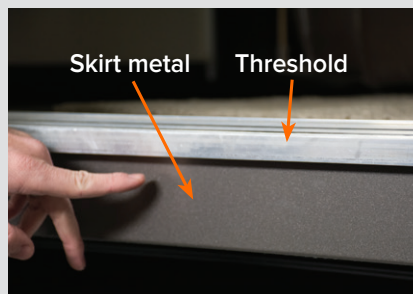

STEP 3

### STEP HEIGHT

Measure from the top of the threshold to the ground. Refer to the Fit Chart below for the corresponding Quick Connect Step part number.

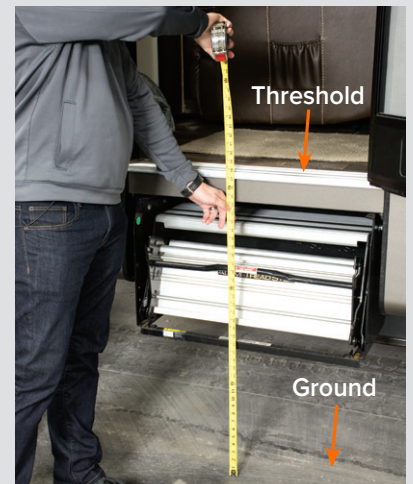

If you have met the requirements above, use the dimensions from Step 3 to locate your part number in the fit chart below.

## FIT CHART

|        | PART NUMBER | STEP HEIGHT   |
|--------|-------------|---------------|
| 2 STEP | STP54-011   | 21.5" – 27.5" |
| 3 STEP | STP54-010   | 27.5" – 36"   |
| 4 STEP | STP54-012   | 35.5" – 44"   |

## OPTIONAL HANDRAIL



**3 STEP HANDRAIL**  
STP214-029H

**4 STEP HANDRAIL**  
STP214-006H



Above. Beyond. Always.

Please contact us if you have any questions:  
574-293-1581 | [www.MORryde.com](http://www.MORryde.com)


# INSTALLATION INSTRUCTIONS

Please take a moment to review the **Quick Connect Step Pre-Installation Instructions** on the front side of this form before proceeding with these Installation Instructions.

**TOOLS REQUIRED:** 3/8 drive socket

## STEP 1

Line up the first bracket with the outside edge of the door. Verify the placement of the bracket by properly positioning the steps; also confirm clearance of the door. If satisfactory, install the first mounting bracket using the supplied hardware.

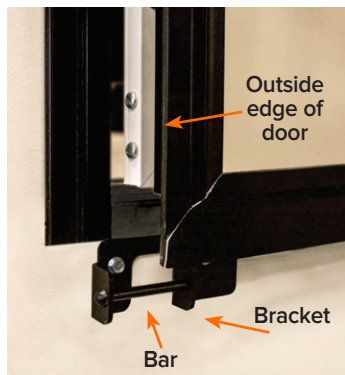



**NOTE:** The two brackets are identical. For proper installation, mount both brackets with the bar offset to the left.



Both brackets will be mounted with the bar offset to the left.

## STEP 2

Press in the paddle latch and attach the step to the bar on the bracket that was first installed; you will use this as a guide for the location of the second bracket. With the steps in position, mount the second bracket.

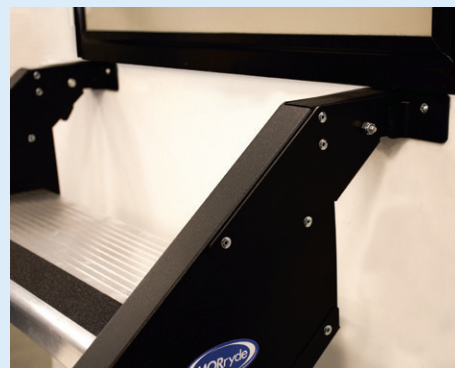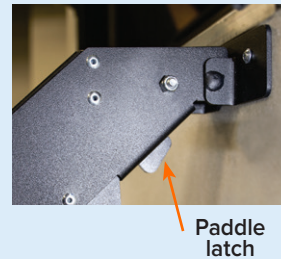

## TO RELEASE THE STEPS:

Press in the paddle latches and pull back to remove the step from the mounting brackets.

### **⚠ WARNING**

Improper installation may cause property damage or personal injury. The Installer assumes all responsibility of verifying the safety and viability of any installation method and mounting surface. MORryde is not liable for property damage or injury caused by incorrect mounting, installation methods not recommended by MORryde, hardware not provided by MORryde, or incorrect use during travel or otherwise.

If you have any questions, please give us a call at **574-293-1581** or send an email to **parts@MORryde.com**.



Above. Beyond. Always.

574.293.1581 • [www.MORryde.com](http://www.MORryde.com)

---



---

# This manual is provided courtesy of **RV Tech Cheat Sheet**



**Professional resources for the whole RV industry — free.**

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.

---



---

**[rvtechcheatsheet.com/manuals](https://rvtechcheatsheet.com/manuals)**

**Find thousands more RV manuals, wiring diagrams and parts lists**

**RV techs:** share fixes, ask questions and learn from each other.

**Join our free Facebook group →**

---



---

Follow proper safety practices. If in doubt, consult a professional RV technician.