



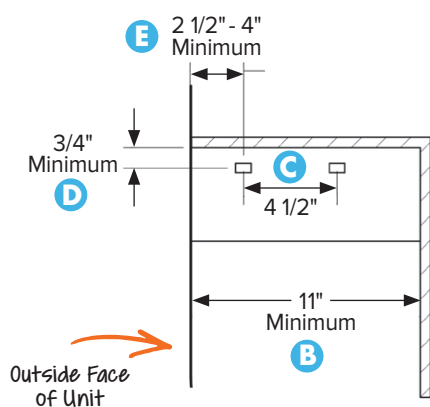

STORAGE BOX QUALIFIER

A perfect storage solution that replaces the stock steps after a StepAbove is installed.

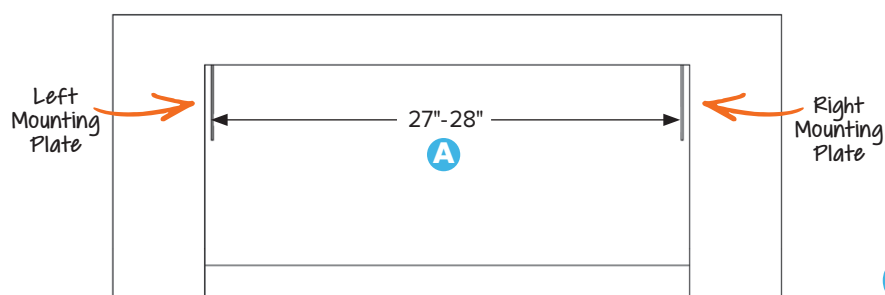

- A** Width of mounting plates must be between 27"-28"
- B** Depth from side skirt to back of step cavity must be 11" minimum
- C** Holes in mount plate must be 4 1/2" on center
- D** Holes in mount plate must be a minimum of 3/4" from the top of the step cavity
- E** Outboard mount hole must be between 2 1/2" - 4" from side skirt



Above. Beyond. Always.

574.293.1581 • MORryde.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.