



More Stable. More Secure. MORryde.

INSTALLATION INSTRUCTIONS

Please take a moment to review the **StepAbove® Qualification Guide** before proceeding with these Installation Instructions.

STEP 1

Remove the step transition strip between the threshold of the existing door and the floor.




STEP 2

Place the StepAbove® in the center of the door opening. Adjust the steps until the hinge plate is centered.



STEP 3


Lift the StepAbove® and lock into place. Ensure that the latches have engaged with the flange of the door jamb. The latches may need to be adjusted in or out; this can be accomplished by loosening the bolts and sliding it into place.

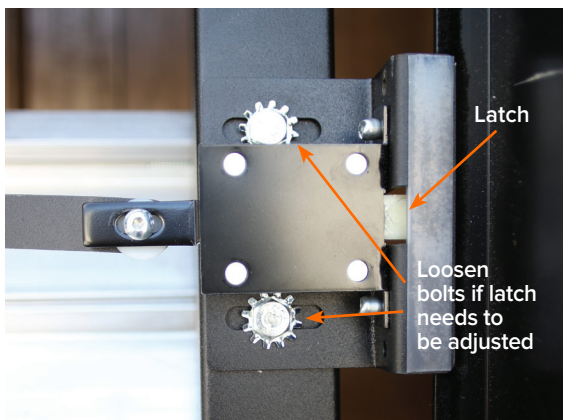

STEP 4

Measure 15/16" from the inside of the threshold to the front of the StepAbove® hinge plate. This will ensure your StepAbove® threshold fits securely over the existing threshold.


NOTE: Some doors may require the interior wood or trim work to be notched. For assistance with any modification, please call our Parts Department at 574-293-1581.

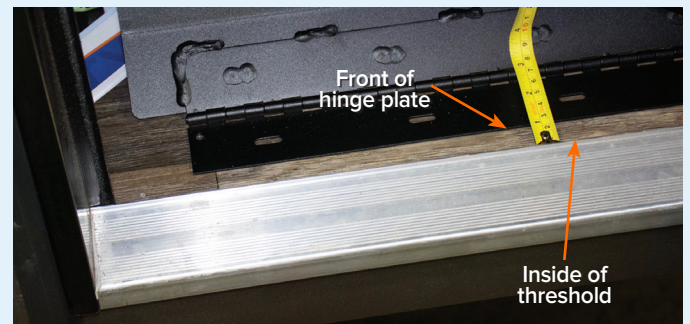

Above. Beyond. Always.

STEP 5

With the StepAbove® located in the center of the door opening, measure the distance between the inside lip on the door jamb and the outside edge of the step. The clearance on each side should be at least 1/8".

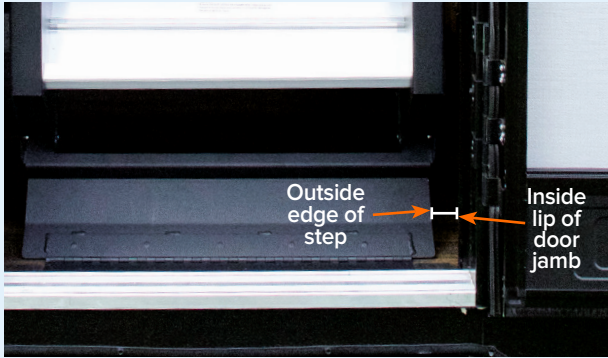

STEP 6

Mount the (2) outermost screws onto the StepAbove® hinge plate.



STEP 7


Shut both the screen door and the outside door to ensure both close properly with the StepAbove® in the lowered position.



STEP 8

Raise the StepAbove® into the locked position and secure the hinge plate with the remaining screws.

NOTE: The legs of the StepAbove® are adjustable and may need to be retracted in order to fit inside the door opening.

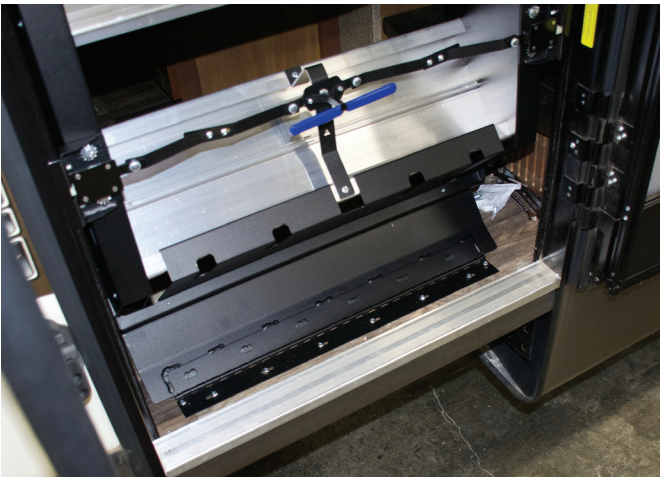

STEP 9

Make sure the StepAbove® operates smoothly and aligns correctly.



⚠ WARNING

Improper installation may cause property damage or personal injury. The Installer assumes all responsibility of verifying the safety and viability of any installation method and mounting surface. MORryde is not liable for property damage or injury caused by incorrect mounting, installation methods not recommended by MORryde, hardware not provided by MORryde, or incorrect use during travel or otherwise.

If you have any questions, please give us a call at **574-293-1581** or send an email to **parts@MORryde.com**.



Above. Beyond. Always.

574-293-1581 • www.MORryde.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.