



T.I.P. Troubleshooting Information on Power Gear

LEG CARTRIDGE / SOLENOID REPLACEMENT

PREPARATION:

1. Collect the following items:
-set of open end wrenches


REMOVAL:

1. Fully retract the jacks. This should allow all the pressure in the legs to vent back into the tank, and prevent any oil spray.
2. Unscrew the nut (10) from the problem valve's stem.
3. Unhook the plug, remove the coil (8 or 6) from the problem valve's stem.
4. Unscrew the problem valve (7 or 5).

INSTALLATION:

1. Screw in the new valve (7 or 5).
2. Place coil (8 or 6) over the new valve's stem.
3. Tighten down the nut (10) onto the new valve's stem.
4. Reconnect the plug.

CR=CURBSIDE REAR JACK
RR=ROADSIDE REAR JACK
F=FRONT JACK - 3 JACK SYSTEM
F1=FRONT JACK - 4 JACK SYSTEM

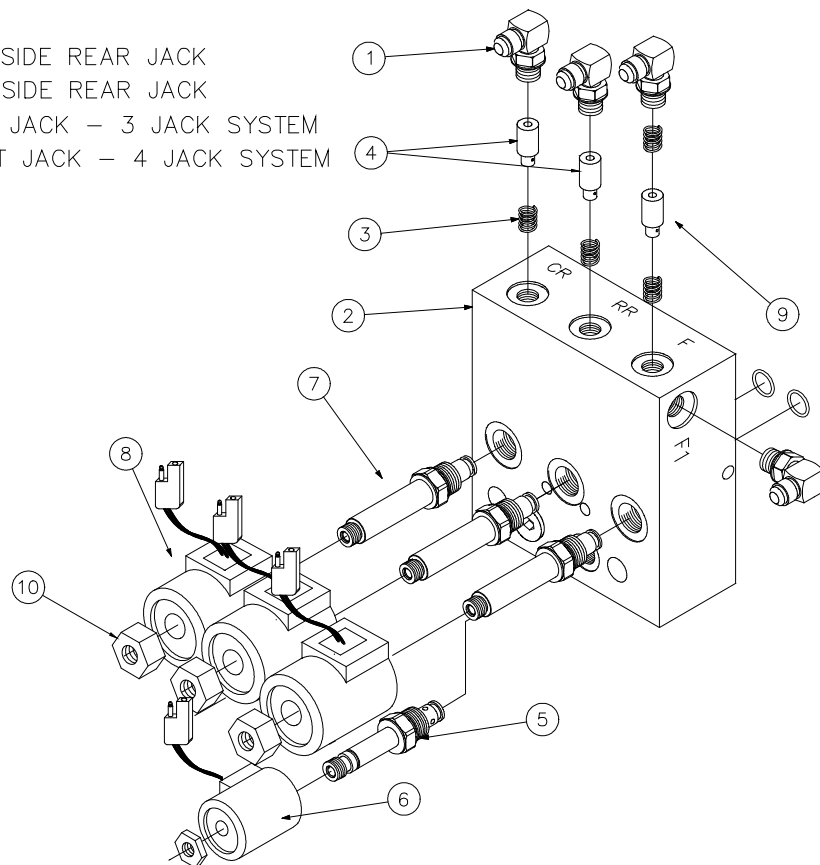



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.