

WARNING: Under no circumstances do we recommend exceeding the towing vehicle manufacturers recommended vehicles towing capacity.
Failure to follow instructions for installation and use may cause property damage, injury or death.


READ ALL INSTRUCTIONS BEFORE STARTING THE INSTALLATION OR USE

Tools and Equipment Required to Install:

- Hammer

What's Included:

- Spacer Plates – QTY 2
- Roll Pin– QTY 4

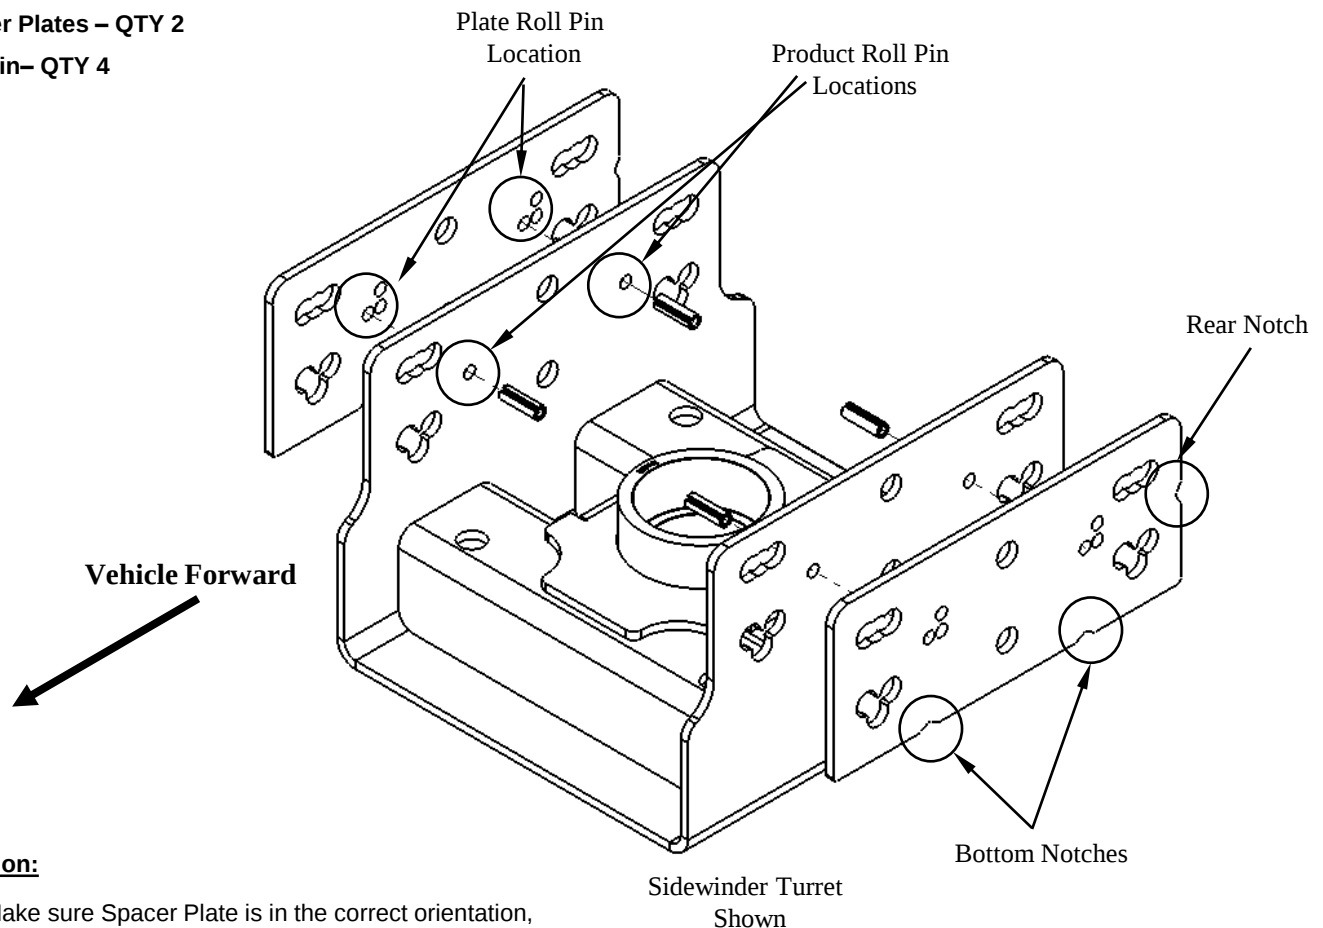

Installation:

1. Make sure Spacer Plate is in the correct orientation, with rear notch in the back, and bottom notches on the bottom, align holes with your product. Note: Some Reese products may have different style bolt patterns, which may use one of the (3) Plate Roll Pin locations.
2. Install roll pins in two locations using a hammer, to attach each side. Do not protrude pins past outer wall of the Spacer Plates.
3. Follow your specific product instructions to install on trailer properly.



Note: For any questions, please

- Scan QR code
- Visit www.reeseprod.com/qr-product.aspx
- Or call Technical Service at: 1-800-632-3290



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.