

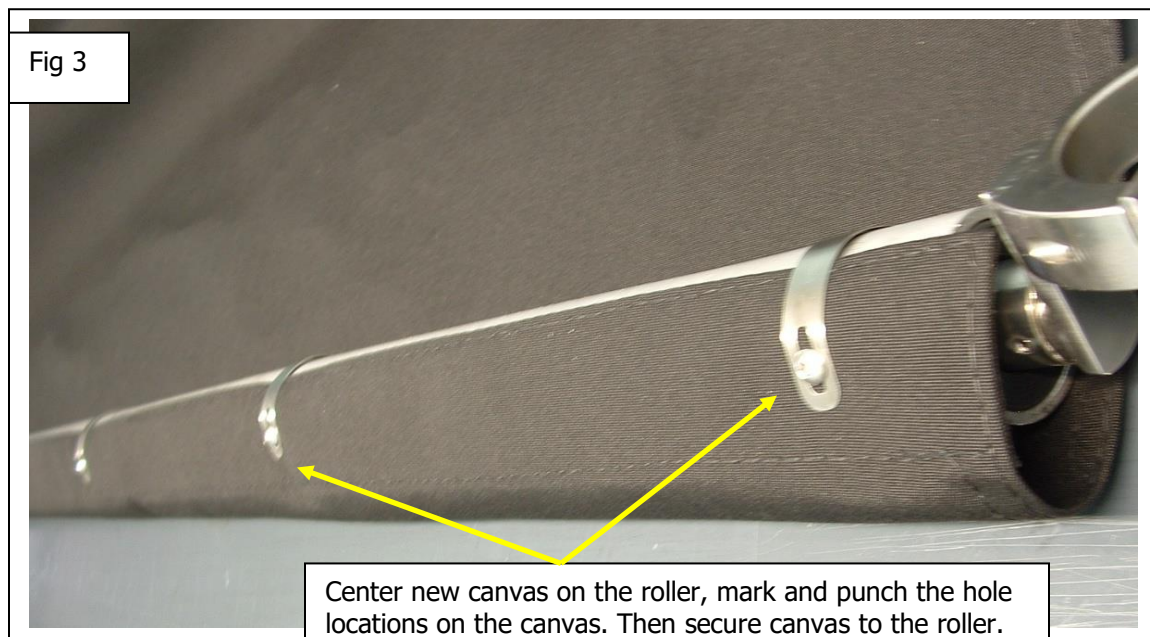


SureShade Instructions for Replacing Canvas on MTF Roller

1. Extend shade to full extension and unwind roller so canvas is loose.
2. Remove the outer crossbar from actuators (Fig 1).
3. Disconnect outer crossbar connector on one end of the outer crossbar and remove crossbar (Fig 2).
4. Center the new canvas on the roller, mark and punch the hole locations on the canvas. Then secure canvas to the roller (Fig 3).
5. Reinstall the outer crossbar thru the new canvas pocket (Fig 2) and attach the outer crossbar to the actuators
6. Wind the canvas onto the roller until the canvas is taut.

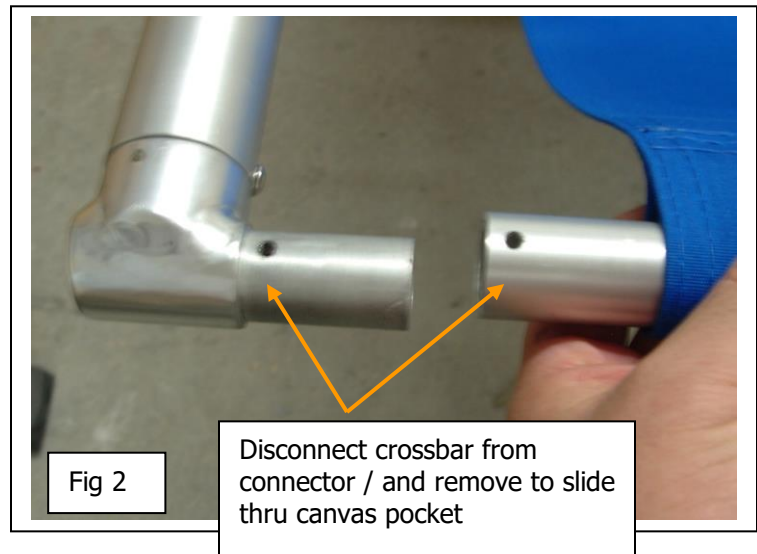

Note:
metal straps
shown here
are no longer
used.

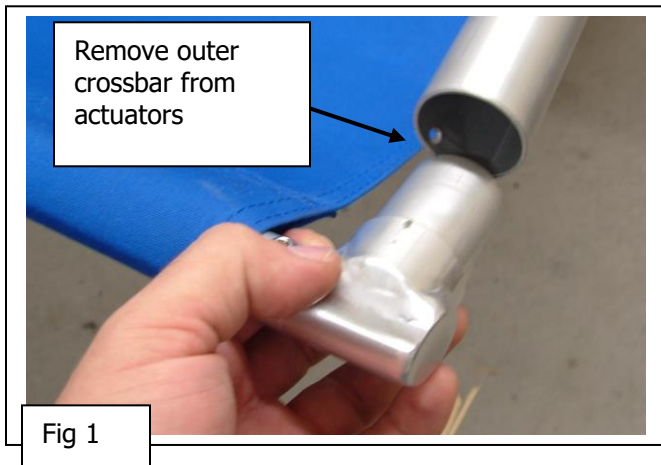

This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.