



SUPPORT BAR INSTALLATION SHEET

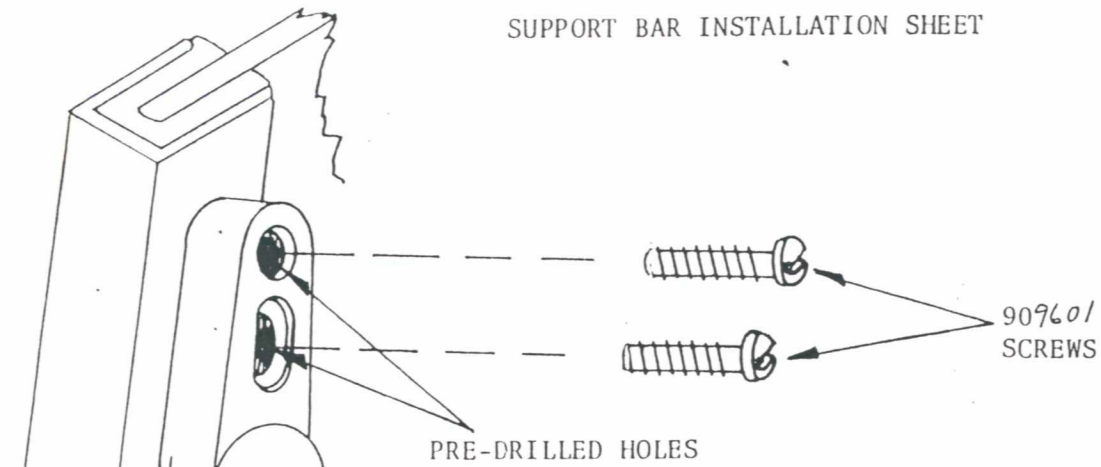

INSTRUCTIONS:

1. Attach upper foot of support arm to pre-drilled hole in windshield through slotted hole with #909601 screw.
2. Adjust windshield by movement of lower support arm foot so that it is in plane and walk-thru panel is in proper alignment when in closed position.
3. Locate and mark position of lower support arm foot and attach to deck with #907700 screws.
4. With windshield in proper position, drill #26 hole in windshield through upper hole in upper foot of support arm and attach with #909601 screw.

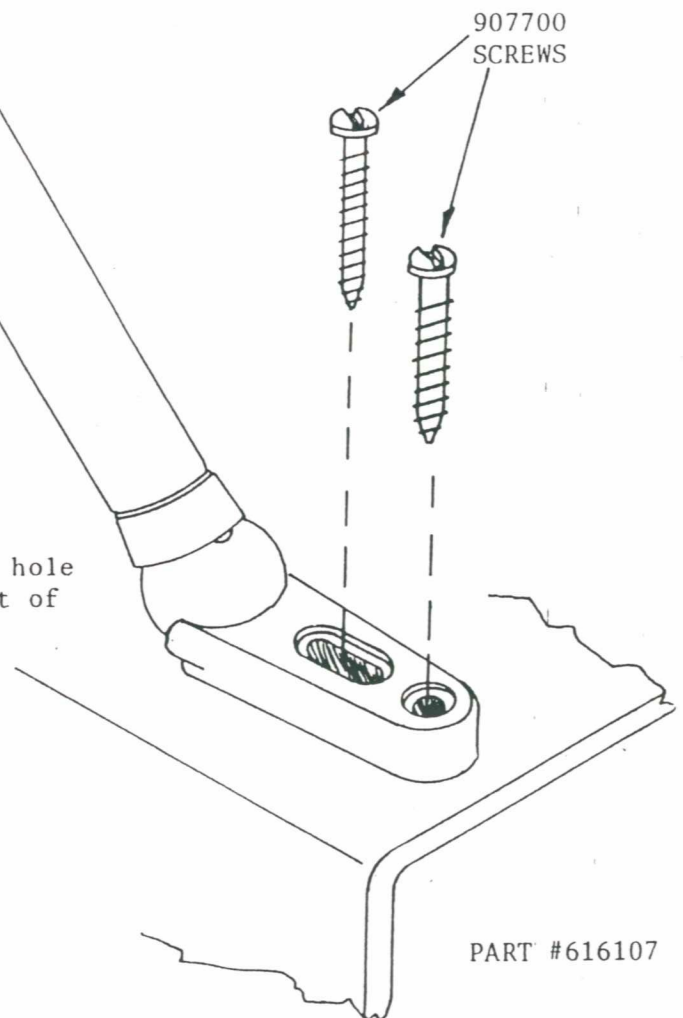



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.