



Taylor Made
PRODUCTS™

TWO BOW BIMINI TOP ASSEMBLY INSTRUCTIONS

Our tops come to you with everything you need (except tools) to complete installation. This job is best accomplished with two people.

Contents:

Quantity	Items
2	Center Bows
1	White Marine Vinyl Top
4	Adjustable Tie Down Straps (CC strap)
1	Hardware Mounting Kit *
4	Side Mounting Tubes


*Contents of Hardware Kit:

Part Number	Quantity	Description
117800	2	Black Nylon Flat Deck Mount
281203	2	Black Nylon Side Deck Mount
118200	4	Eye-Strap black
906600	8	5/8" Phillips Head Screw
909100	4	3/4" Phillips Head Self Taping Screw


Note: The hardware mounting kit comes with both vertical and horizontal mounting hinges. The type of hinge you choose depends on the kind of boat you have and where your mounting the top.

Tools Required:

- #2 Phillips Head Screwdriver
- Regular Flathead Screwdriver
- Drill

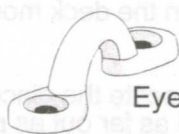


Eye Strap

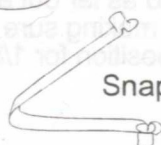


Snap Button

Flat Deck Mount

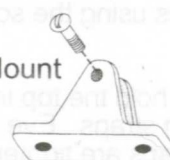

Jaw Slide

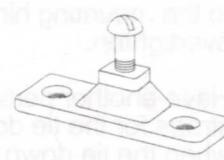


Side Deck Mount

PART 1 - ASSEMBLY BEFORE FITTING TO BOAT

Assembly begins by laying out the frame on the ground or other suitable flat surface and putting it together with the top. A strait screw driver will be needed.

1. Layout the top itself (white side down) on the ground. Then lay out the center Bows in their relative locations.
2. Slide one of the center bows into the sewn in pocket in the top, starting in the stern (see label).
3. Locate (1) of the Tie Down Straps and slide the "Loop" end of the strap over the center bow as it is positioned by the cut-out area in the pocket. Repeat for a second Tie Down Strap over the center bow through the next cut-out in top.
4. Repeat step #3 for the other center in the front of the top, using two more straps.
5. Slide the end of the center bow into (1) side mounting tube.
NOTE: Twist tubes slightly as you assemble them to ensure they snap together properly. If holes don't line up twist tube.
6. Repeat assembly of remaining (3) side mounting tubes to the center bows.
7. You now need to assemble the jaw slides on to the rear facing them to the front. (Mount jaw slide just above the crimpe eye end.
8. Assemble the Bow (front) tubes to the Jaw Slides on the stern tubes by removing the screw from the Jaw Slide, insert eye end into center of Jaw Slide and replace screw. Secure but NO NOT over tighten.

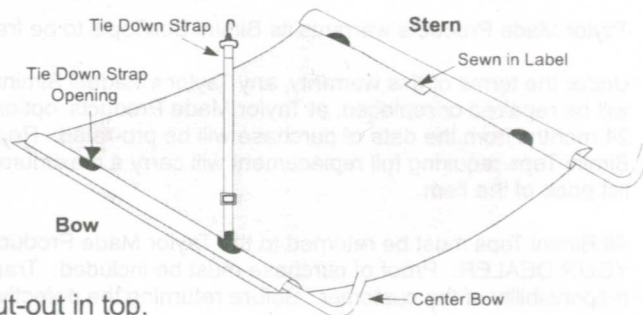

- Insert side tube into center bow, compress snap buttons to lock sections together.





This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.