

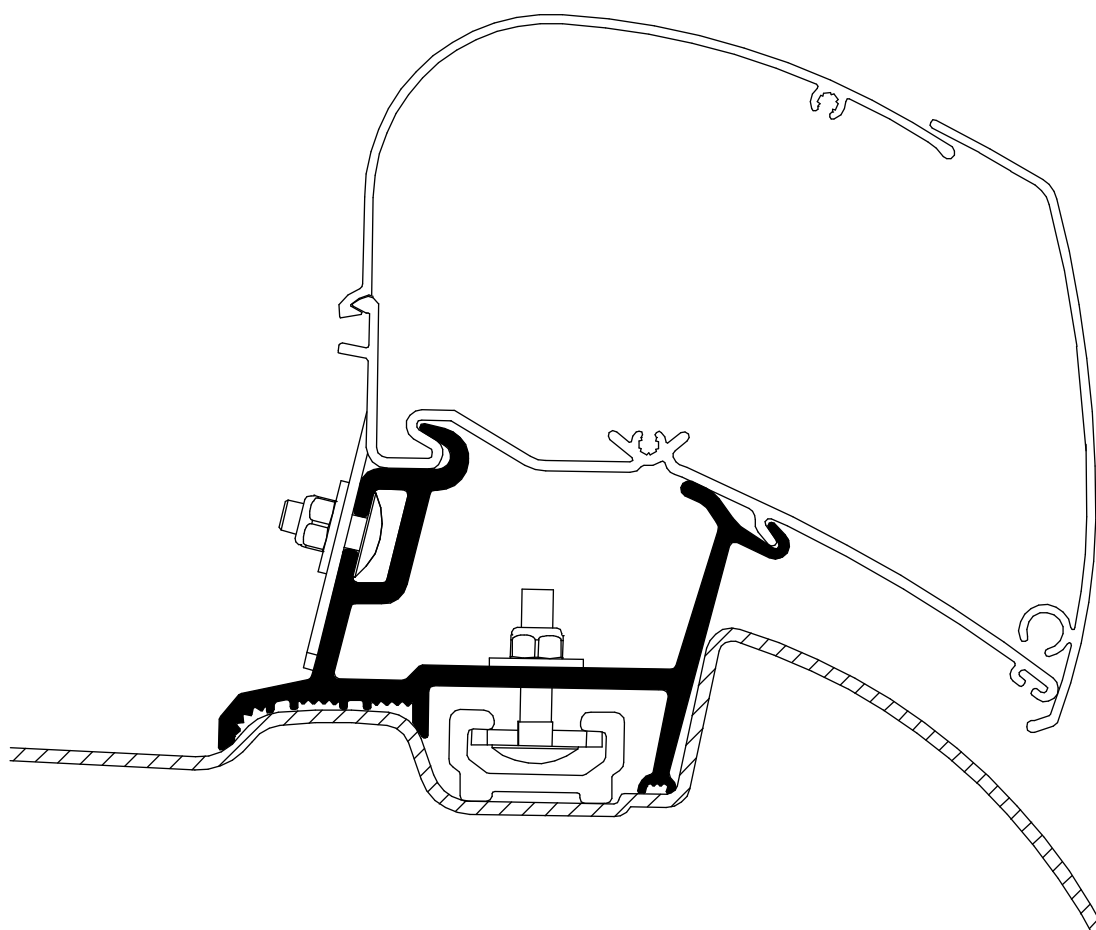



Adapter Roof with OE TRACK
MB Sprinter > 2007
VW Crafter 2007 - 2016

➤ Instructions


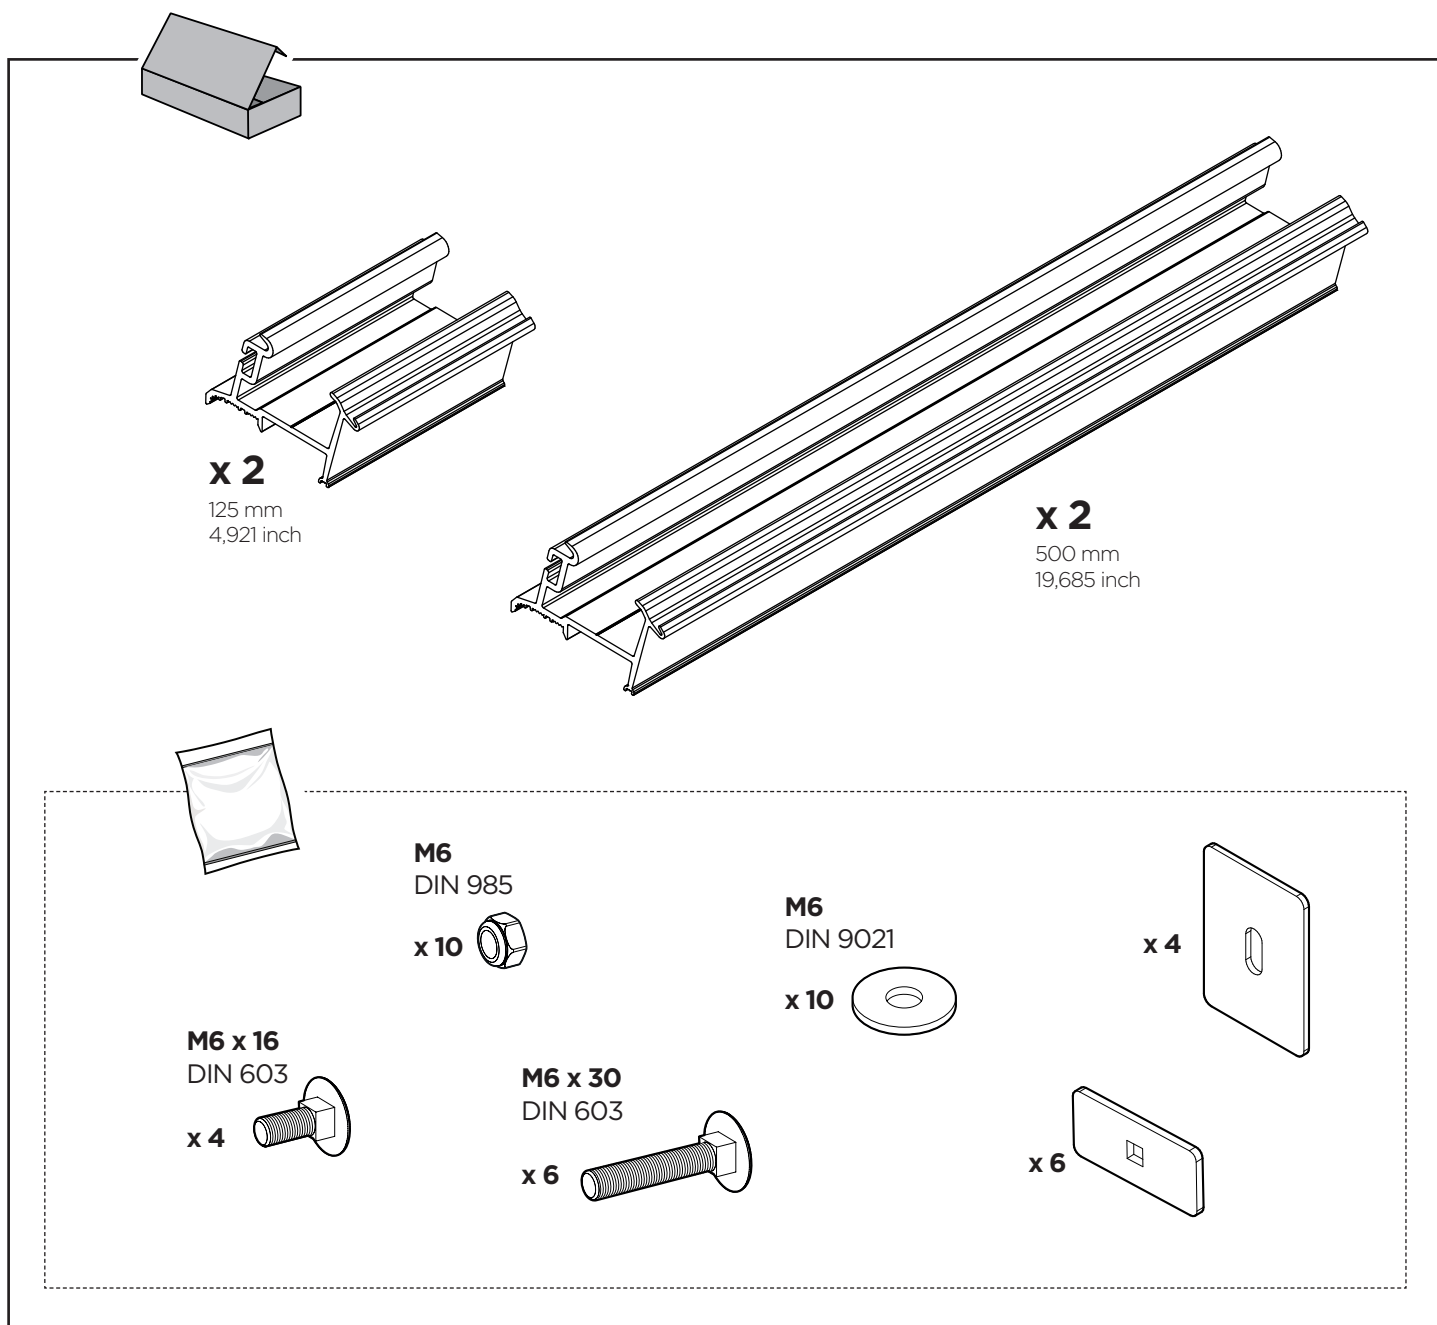


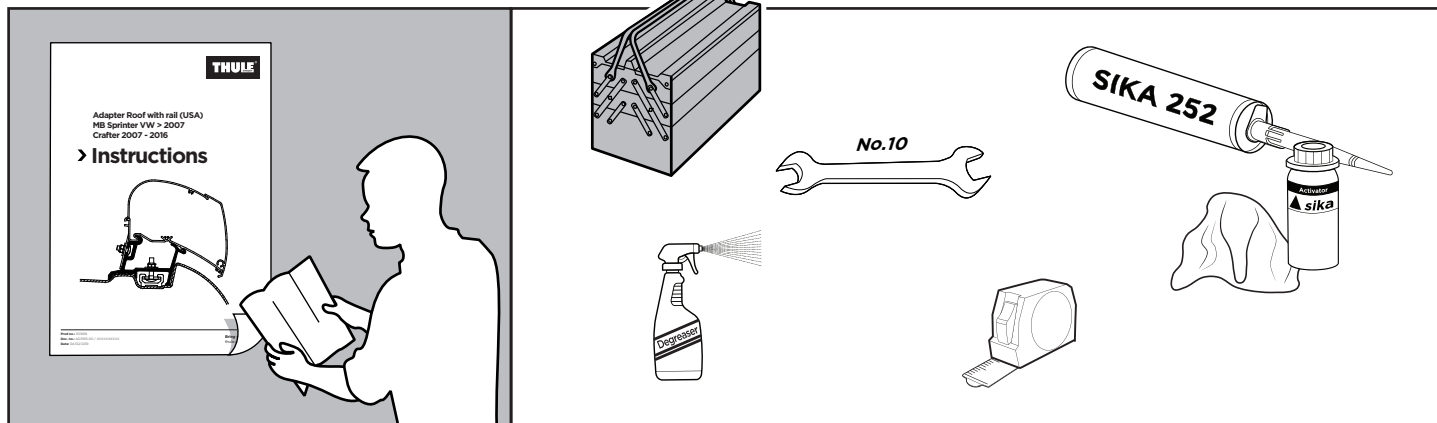

i

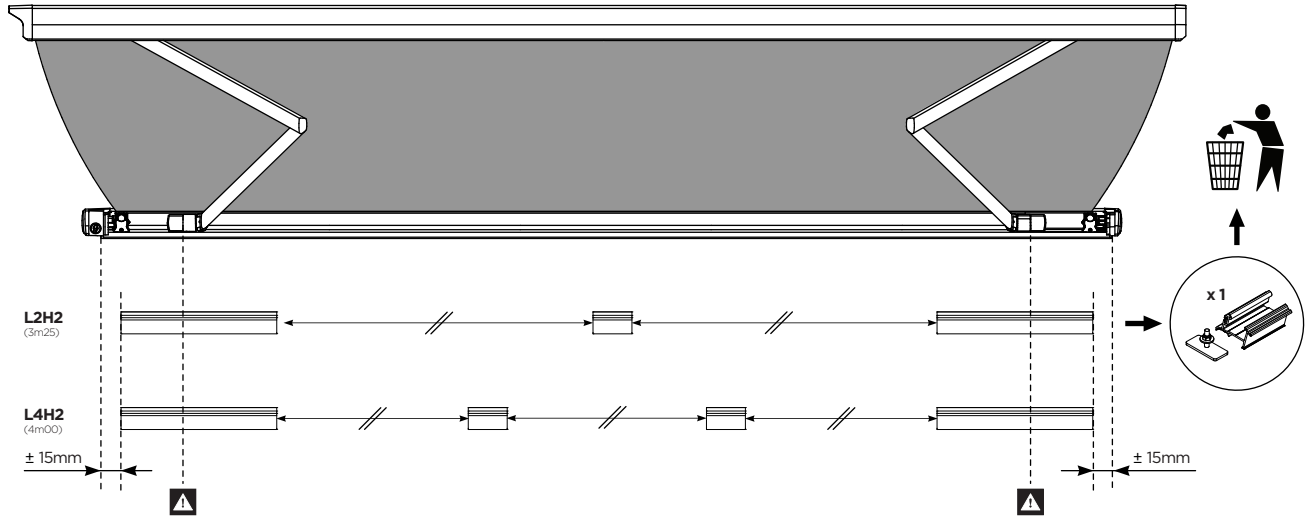


1

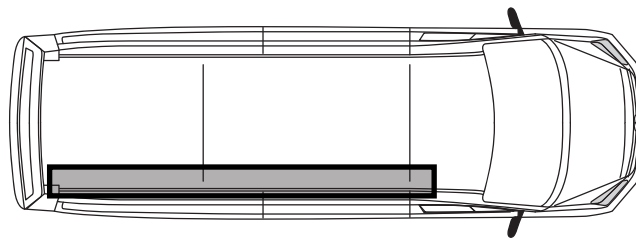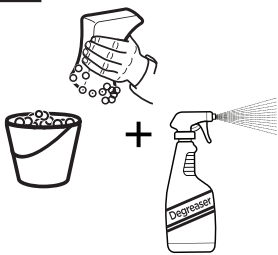

2

x 6 (x5)

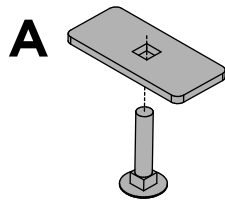



B

x 6 (x5)

3

x 4 (x3)

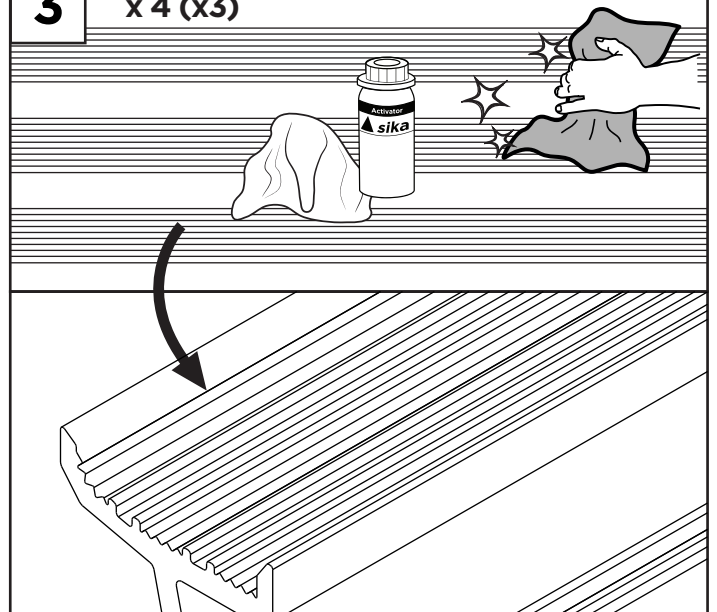

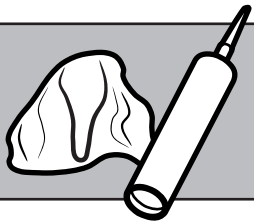


Glue / Lijmen / Verklebung:

Thule recommends / beveelt aan / empfiehlt: **SIKA 252 or Terostat MS937**


Primern und Abdichtung nach Anweisung des Dichtmittelherstellers.

Voorbehandeling en afdichting volgens de voorschriften van de lijmfabrikant.


Preparation and sealing according to the prescripts of the glue supplier.

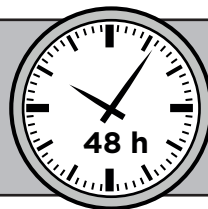


4 x 4 (x3)

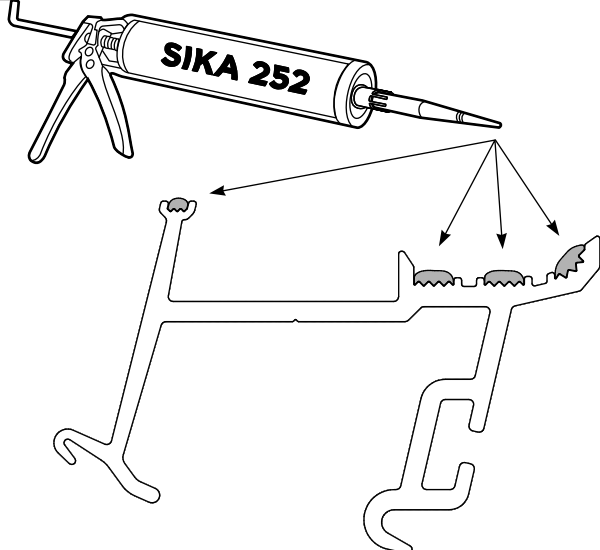


5 x 4 (x3)

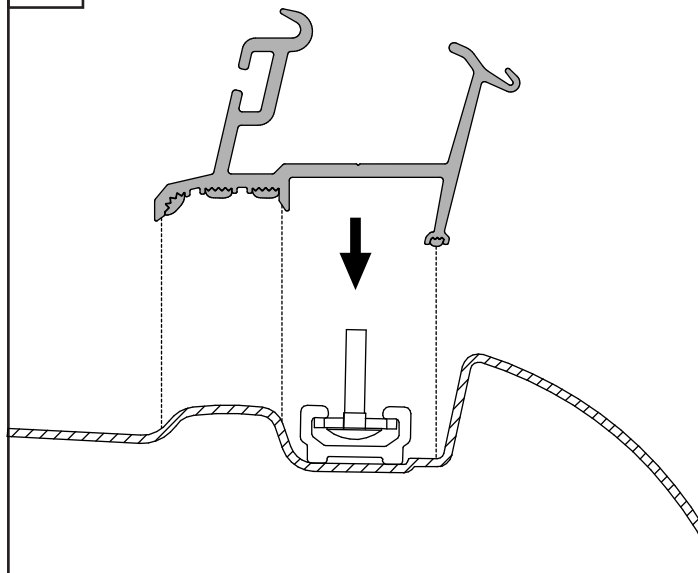

6 x 6 (x5)

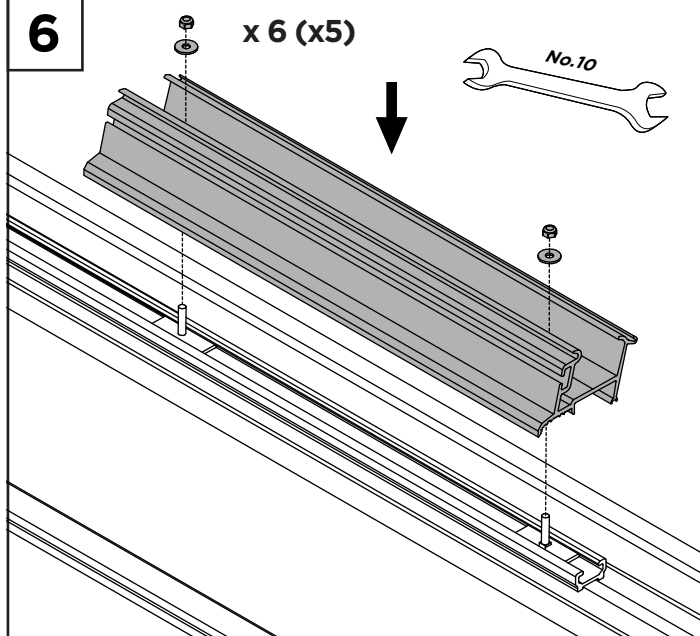

7 x 4 (x3)

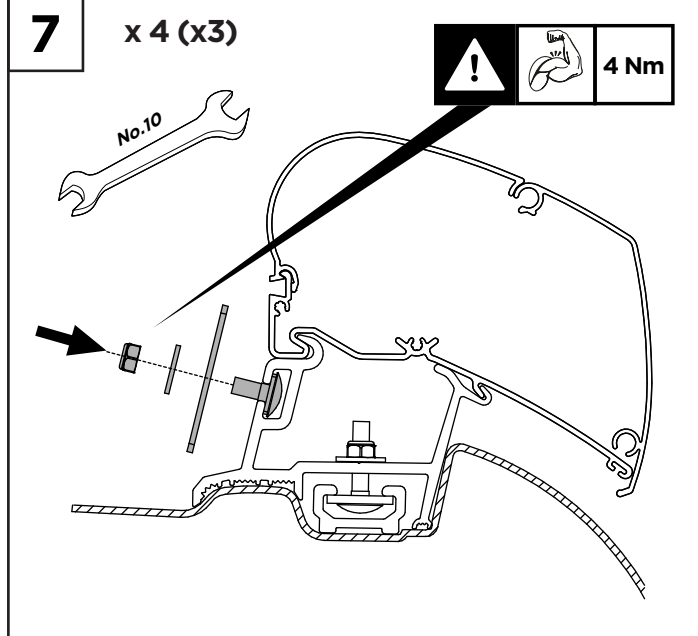



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.