




## INSTALLATION

**> Instructions****Awning Adapter Roof****Ducato/Jumper/Boxer >2007**

301649-301650

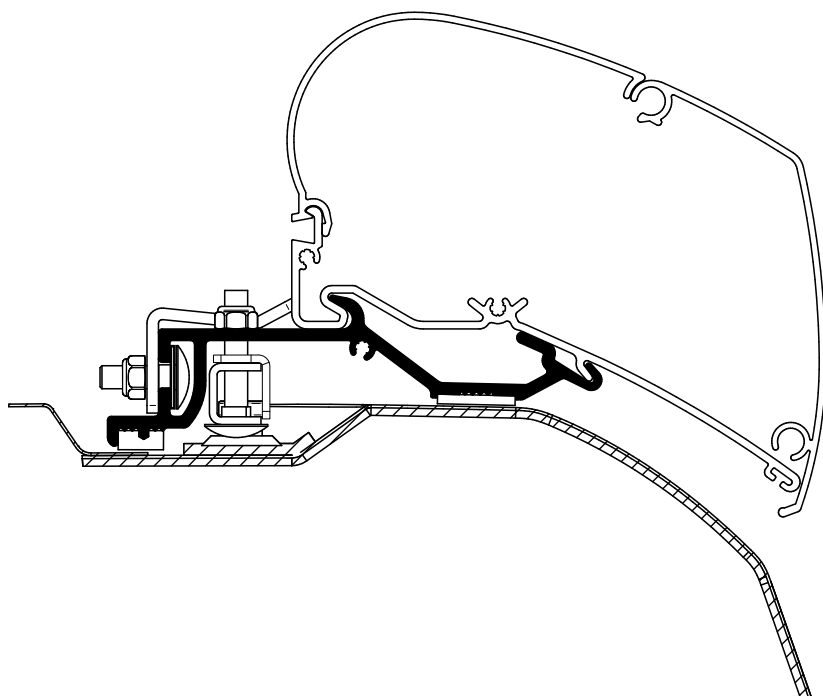



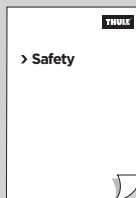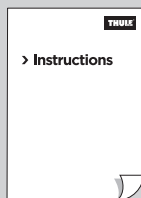**EN****ADAPTER - INSTALLATION INSTRUCTIONS****DE**

Adapter - Bedienungsanleitung

**NL**

Adapter - Gebruikershandleiding

**FR**

Adaptateur - Instructions d'utilisation

**IT**

Adattatore - manuale utente

**ES**

Adaptador - manual de usuario

**SV**

Adapter - användarmanual

**FI**

Adapteri - käyttöohje

**DA**

Adapter - brugermanual

**NO**

Adapter - brukerhåndbok

**PL**

Adapter - instrukcja obsługi

**1 WARNINGS & INFO****4**

Warnungen & Info / waarschuwingen & info / avertissements et informations / avvertimenti e informazioni / advertencias e información / varningar & info / varoitukset ja tiedot / advarsler og info / advarsler og info / ostrzeżenia i informacje

**2 FITGUIDE****5**

Anwendungstabelle / fitting table / table d'application / guida di adattamento / guía de ajuste / applikationstabel / sovellus taulukko / applikationstabel / applikasjonstabel / tabela aplikacji

**3 CONTENT****6**

Inhalt / inhoud / contenu / contenuto / contenido / innehåll / sisältö / indhold / innhold / zawartość







**4 TOOLS****7**

Werkzeuge / gereedschappen / outils / strumenti / herramientas / verktyg / työkalut / værktøjer / verktøy / narzędzia

**5 INSTALLATIONS****7**




Installation / installatie / installation / installazione / instalación / installation / asennus / installation / installasjon / instalacja

# 1 WARNINGS & INFO

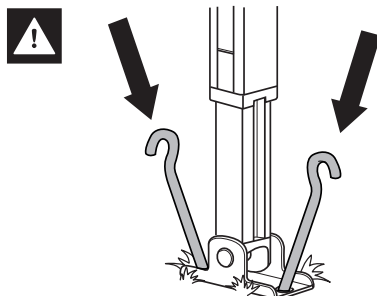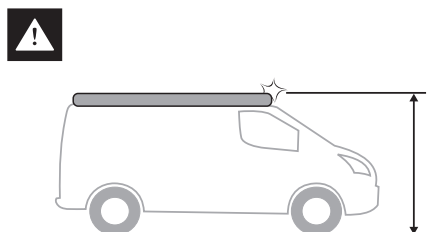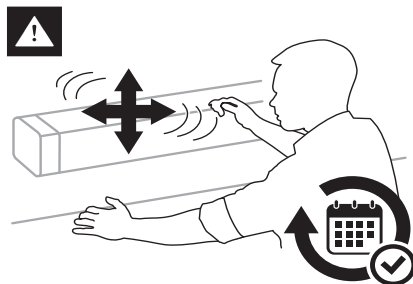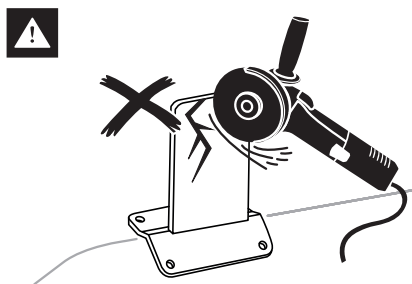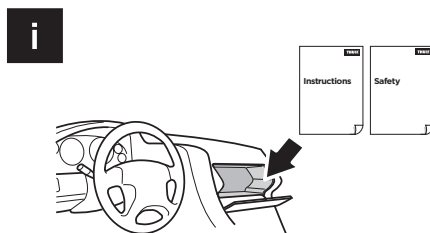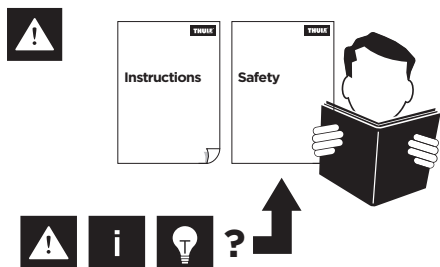

# 2 FITGUIDE


| BRAND   | MODEL       | YEAR       | ADAPTER | AWNING  |
|---------|-------------|------------|---------|---------|
| Fiat    | Ducato L2H2 | 2007 - ... | 301649  | TO 6300 |
| Fiat    | Ducato L3H2 |            | 301650  |         |
| Fiat    | Ducato L4H2 |            | 301650  |         |
| Citroën | Jumper L2H2 |            | 301649  |         |
| Citroën | Jumper L3H2 |            | 301650  |         |
| Citroën | Jumper L4H2 |            | 301650  |         |
| Peugeot | Boxer L2H2  |            | 301649  |         |
| Peugeot | Boxer L3H2  |            | 301650  |         |
| Peugeot | Boxer L4H2  |            | 301650  |         |

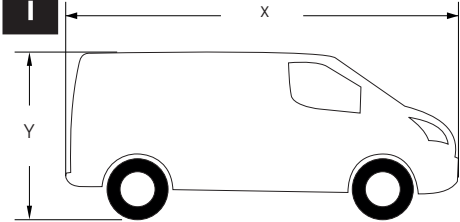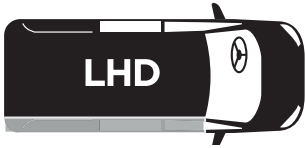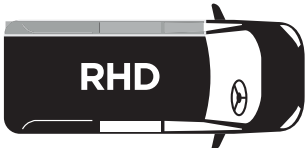

| X  |        | Y  |        |
|----|--------|----|--------|
| L2 | 5.40 m | H2 | 2.50 m |
| L3 | 6.00 m |    |        |
| L4 | 6.35 m |    |        |

### 3 CONTENT

301649



x6  
M6 x 35  
Din 603 A2




x9  
M6  
Din 985 A2



x10  
M6 x 35  
Din 9021 A2



x3  
M6 x 16  
Din 603 A2




x2  
M6 x 25  
Din 603 A2




x3  
Solo bolt plate




x2  
M6  
A2




x2  
25mm




x3



x3

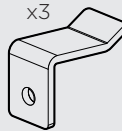


x3

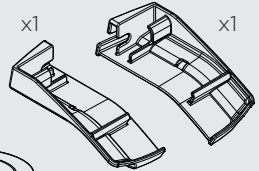


x1


x1

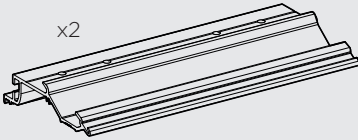

x2




x1



x2

OR

301650



x8  
M6 x 35  
Din 603 A2




x12  
M6  
Din 985 A2



x10  
M6 x 35  
Din 9021 A2



x4  
M6 x 16  
Din 603 A2




x2  
M6 x 25  
Din 603 A2




x4  
Solo bolt plate




x2  
M6  
A2




x1  
25mm




x4




x4

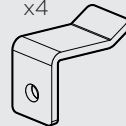


x4




x1  
8mm

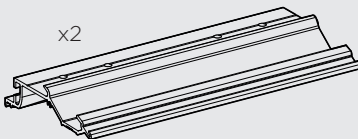


x2



x2




x2

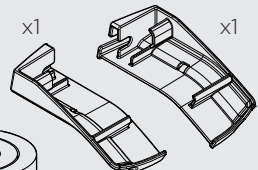

x1


x1

## 4 TOOLS


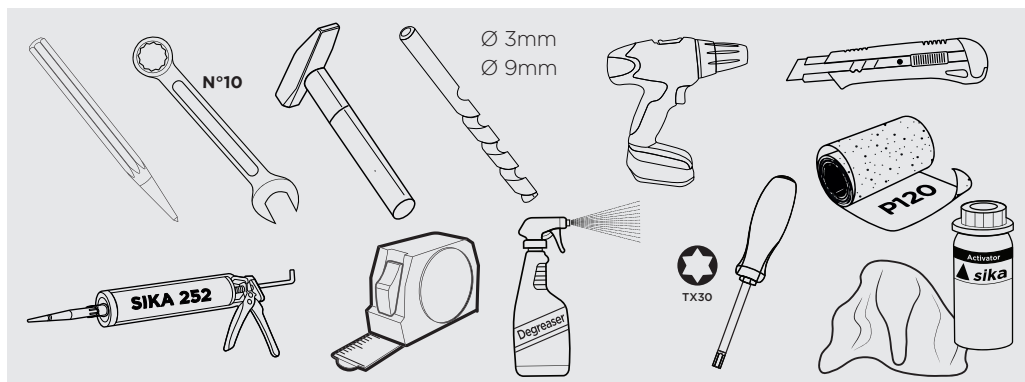


## 5 INSTALLATIONS

i

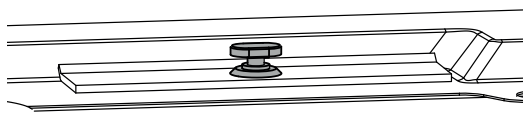


301649

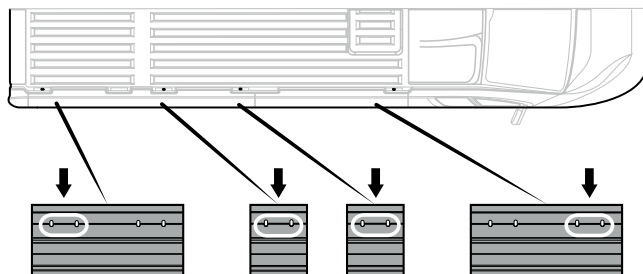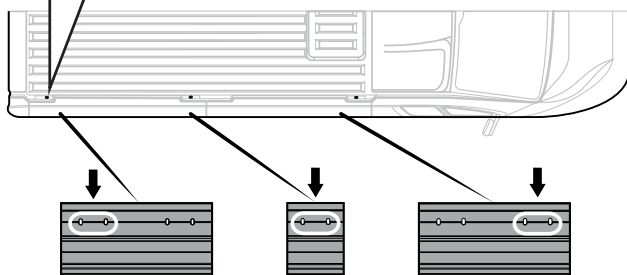

301650

1

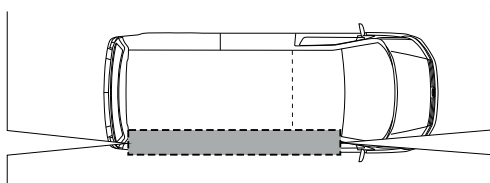


2


x2




x1 301649  
x2 301650




x3 301649  
x4 301650




x6 301649  
x8 301650




x3 301649  
x4 301650




A

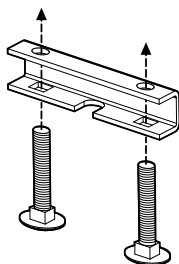




B

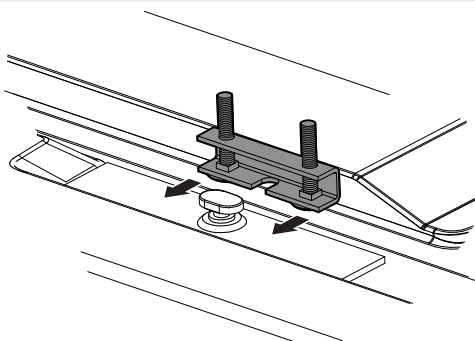

C

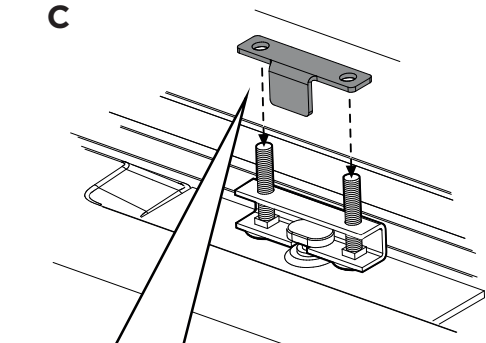

D

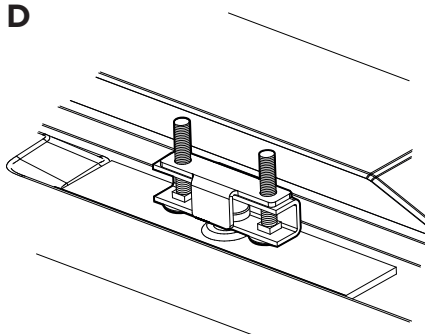


3


x6 301649  
x8 301650




x6 301649  
x8 301650

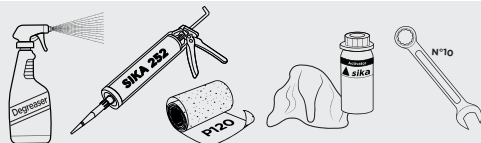


A




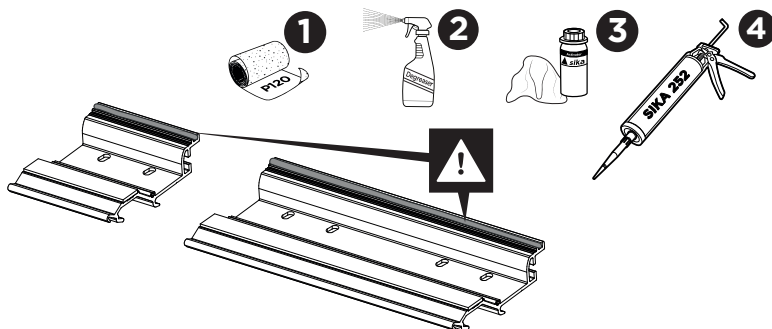


B

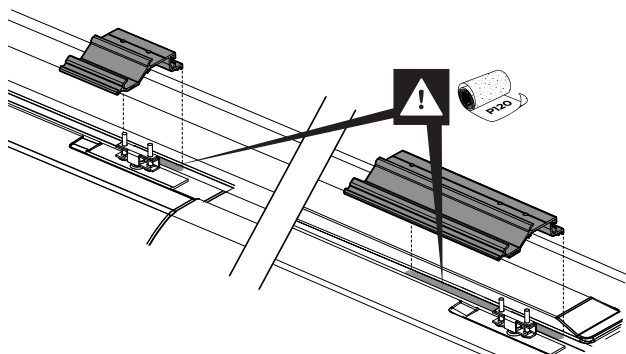

C

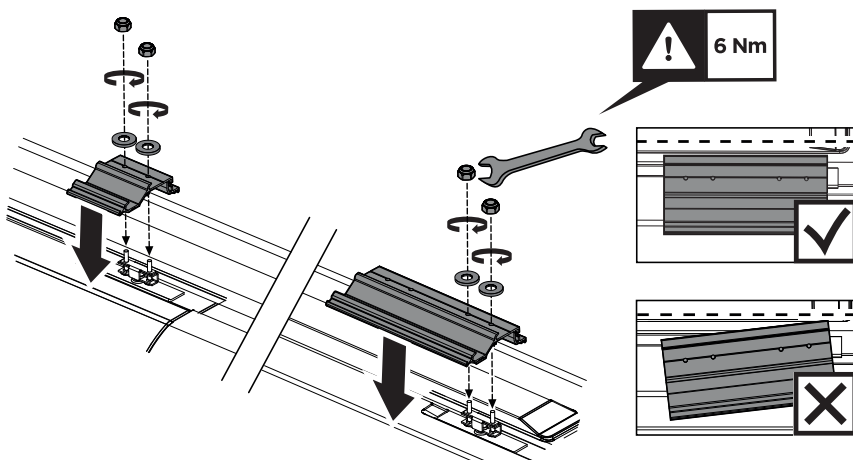

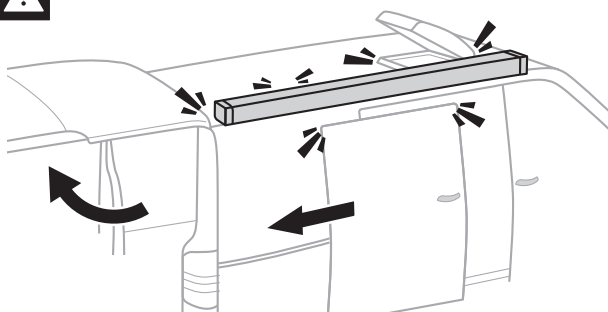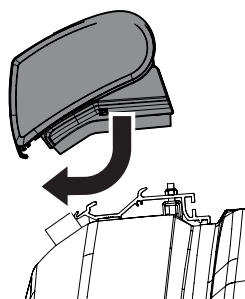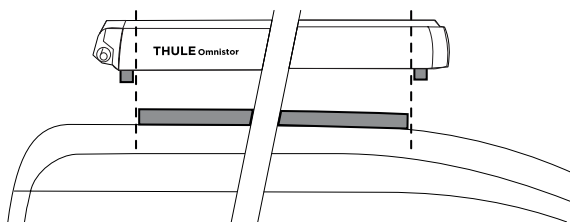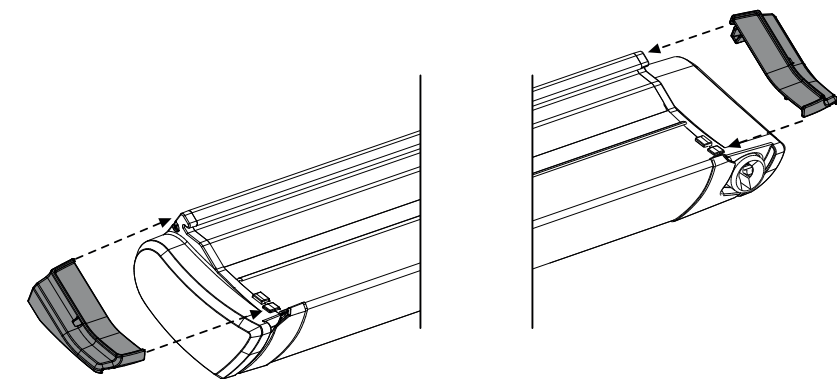

OK?




→ 5a


NOK?




→ 5b

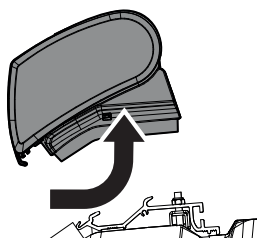


5a

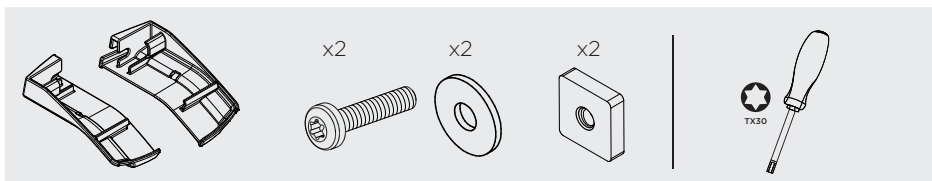


A

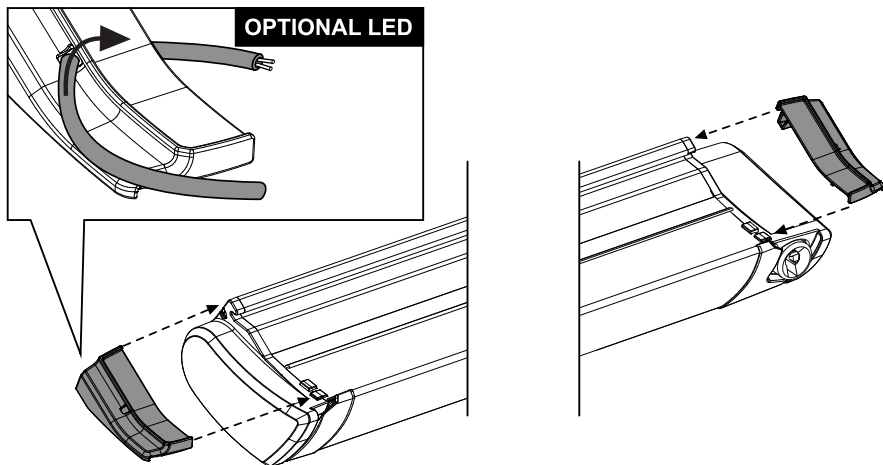


B

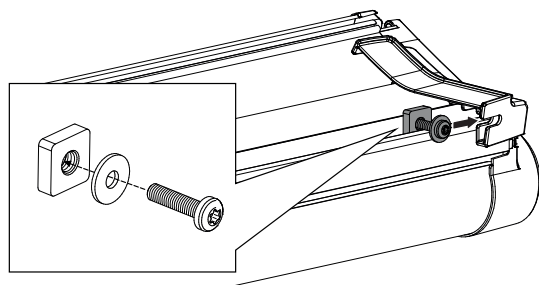


C

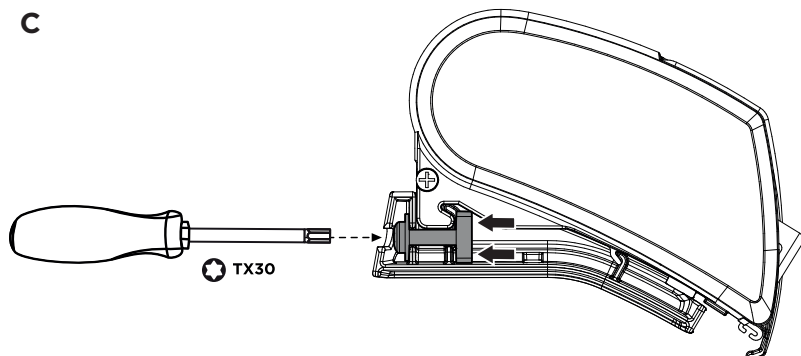


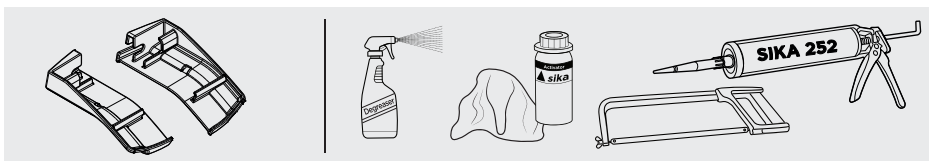




A

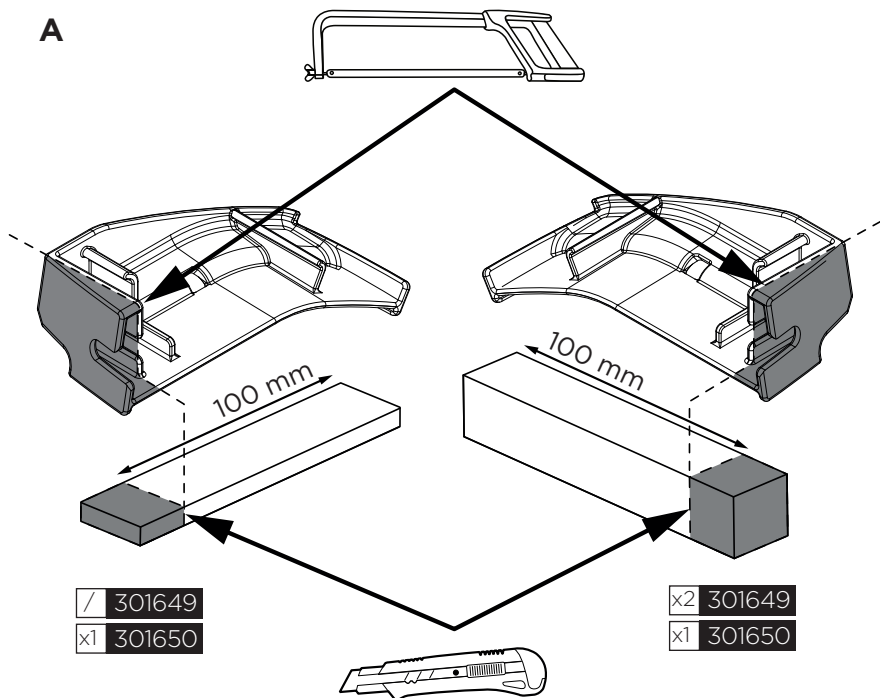

B

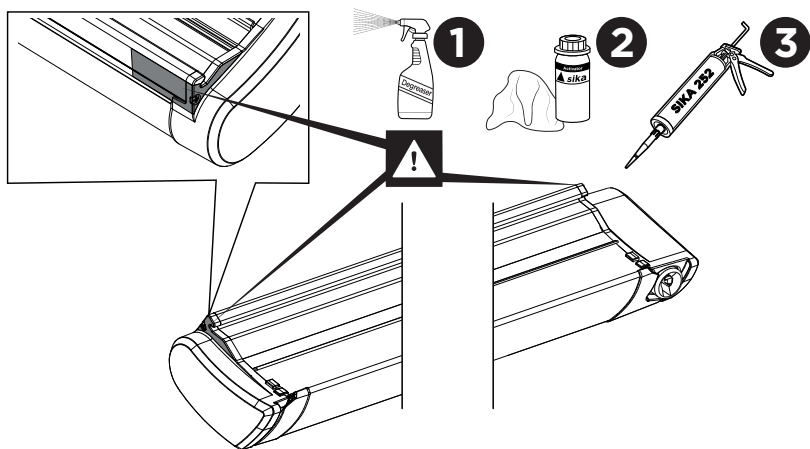

C

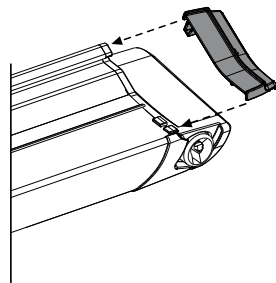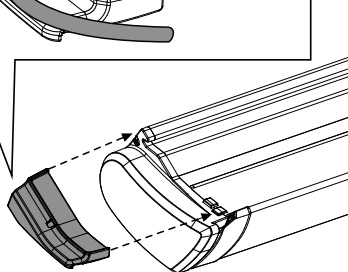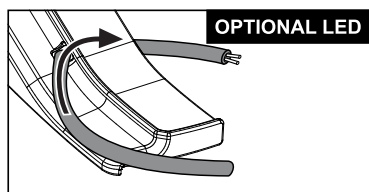


6





x2 301649

x1 301650



/ 301649


x1 301650




L2H2




L3H2




L4H2




A

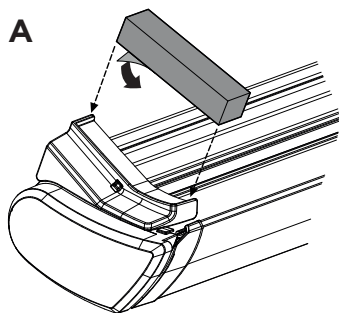

B

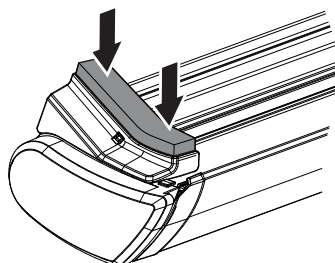

**B**

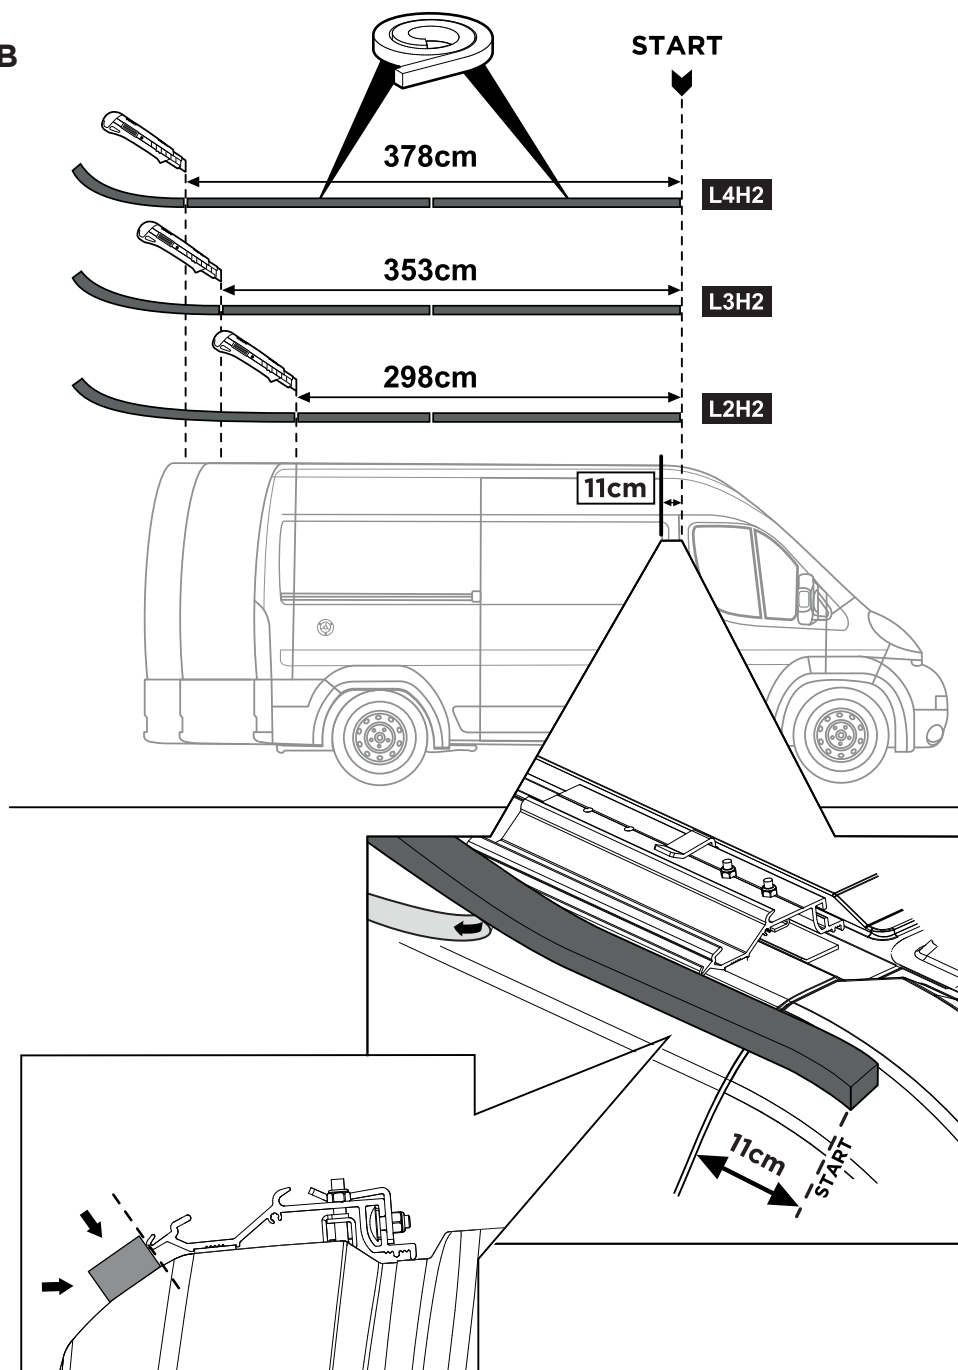

x3 301649

x4 301650




x3 301649

x4 301650




x3 301649

x4 301650

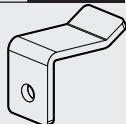


x3 301649


x4 301650

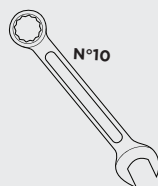


A

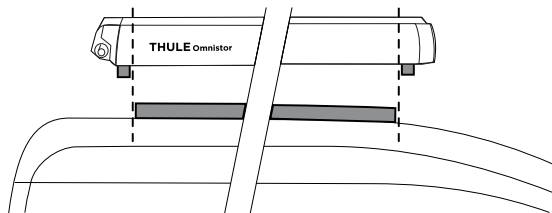


B

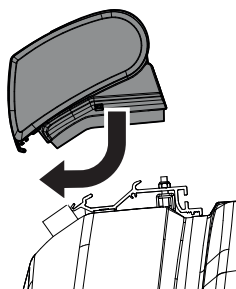


C

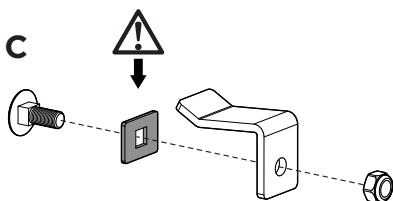

D

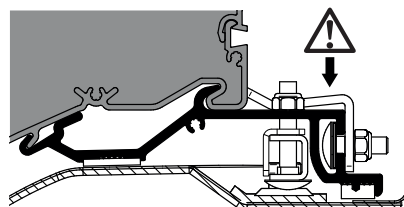

E

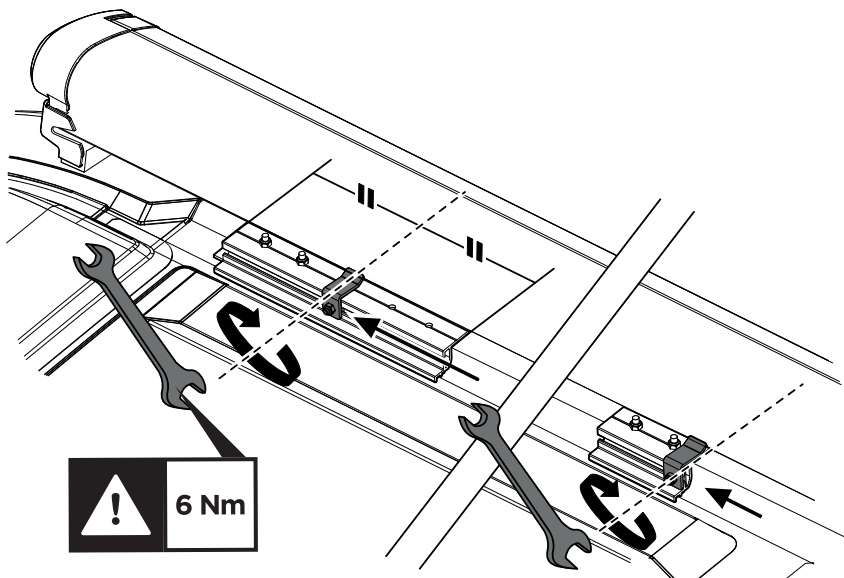



---



---

# This manual is provided courtesy of **RV Tech Cheat Sheet**



**Professional resources for the whole RV industry — free.**

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.

---



---

**[rvtechcheatsheet.com/manuals](https://rvtechcheatsheet.com/manuals)**

**Find thousands more RV manuals, wiring diagrams and parts lists**

**RV techs:** share fixes, ask questions and learn from each other.

**Join our free Facebook group →**

---



---

Follow proper safety practices. If in doubt, consult a professional RV technician.