
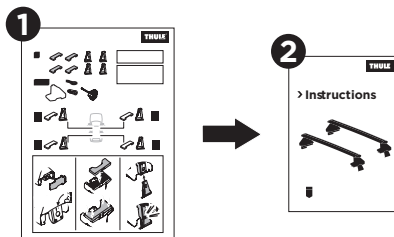


2

THULE
SWEDEN

> Instructions

Thule Evo Clamp
710501

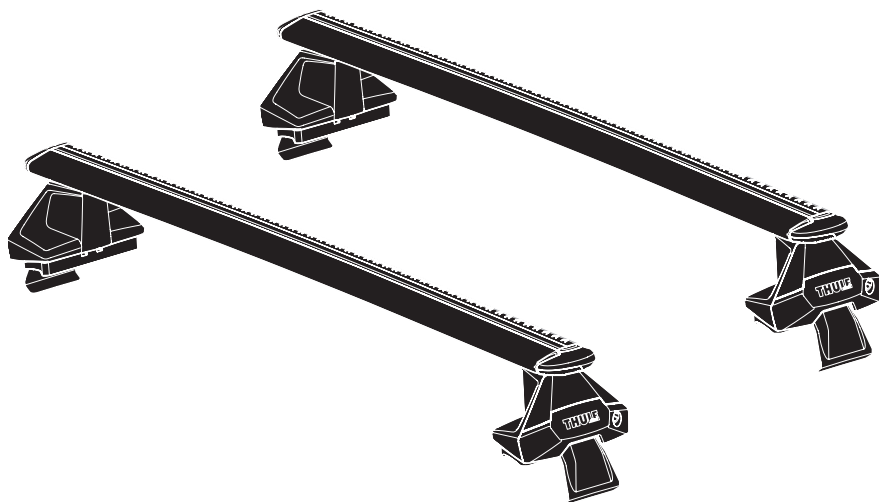

EN Roof mounted load carrier
DE Lastenträger zur Dachmontage
FR Barre de toit
NL Dakdrager
IT Barra portatutto da installare sul tetto
ES Portaequipajes de techo
PT Barra para montagem no tejadilho
SV Takmonterad lasthållare
DK Tagmonteret lasthælder
NO Takmontert lasteholder
FI Katolle asennettava teline
ET Katusele paigaldatav katuseraam
LV Uz jumta uzstādāms kravas turētājs
LT Ant stogo tvirtinamas krovinų laikiklis
PL Uchwyt na bagażnik bazowy montowany na dachu
RU Багажник на крышу
UK Багажник для даху
BG Багажник, монтиран върху покрива
CS Nosič pro montáž na střechu
SK Strešný nosič
SL Nosilec za strešni prtljajnik
HR/BIH Krovni nosač tereta

RO Suport încărcătură montat pe acoperiș
HU Tetőre szerelhető csomagszállító
EL Στάθρα οροφής για μεταφορά φορτίου
TR Araç üstüne bağlanan yük taşıyıcı

מנשא מטען לגג הארוב
 حامل نقل مثبت على السقف

ZH 顶置行李架
JA ルーフマウント型ロードキャリア
KO 루프 장착 화물 캐리어
TH โครงยึดของบรรทุกแบบติดตั้งบนหลังคา

CITY CRASH

Complies with ISO norm


ISO 11154-E



Instructions



Safety




Max 130 km/h
80 Mph




i



Your Key-Number

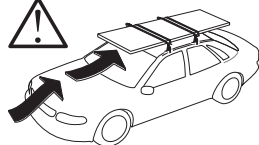

80 km/h
50 Mph

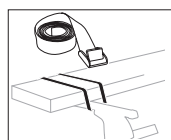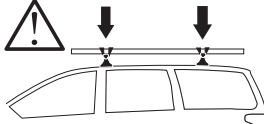


> Mounting Tutorial Thule Evo Clamp

THULE
SWEDEN




thule.com

1
KIT

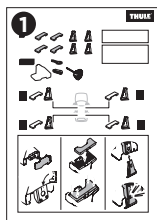

+


2
FOOT PACK



x1







x4




3 Nm


x1

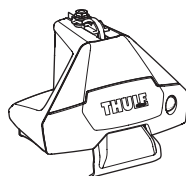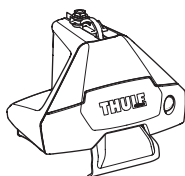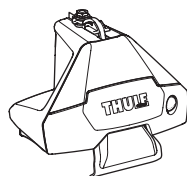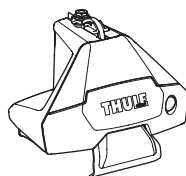


3
BAR

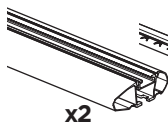

x2

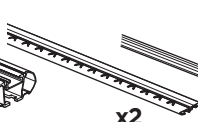

x2

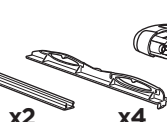


x2




x4




x2



x2



x2




x2




x4




x2



x2



x2



x2



x4



x4




x1



x2



x2




x2










x4




i

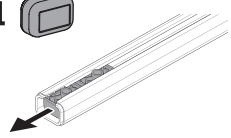

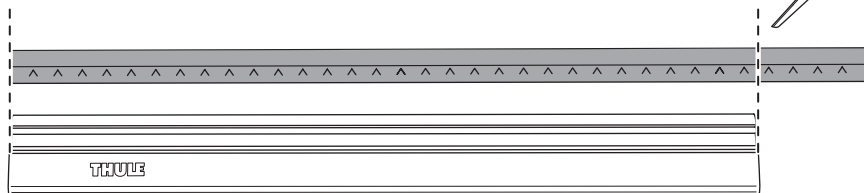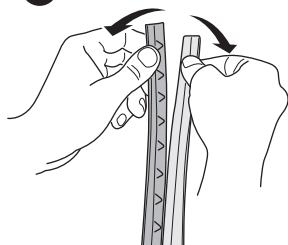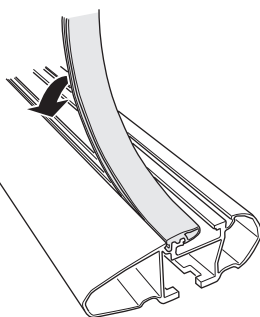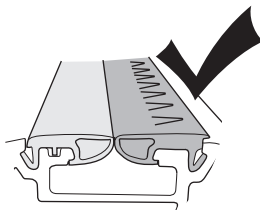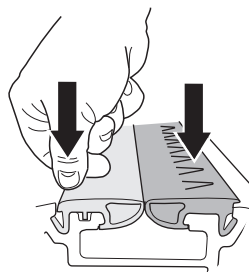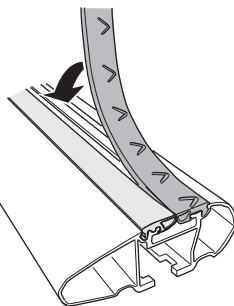THULE
WingBar Evo**A****B****C****D**

x2

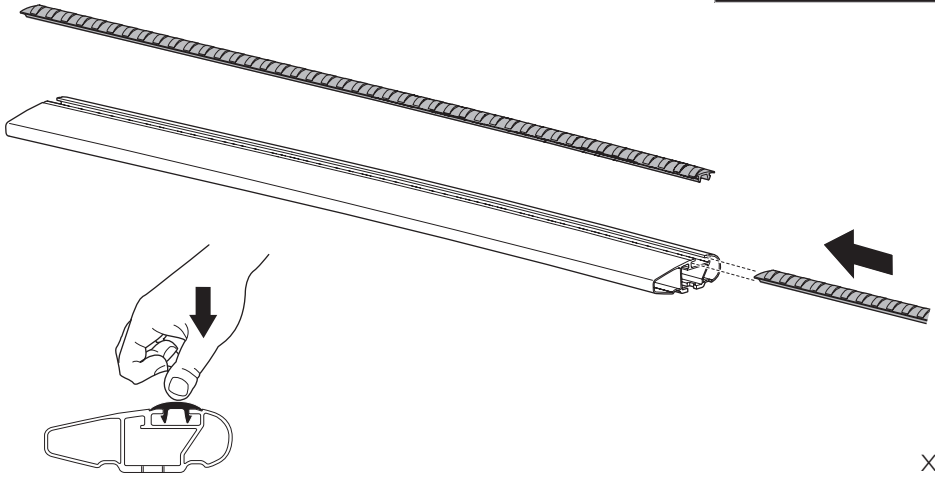

5




A







B

C

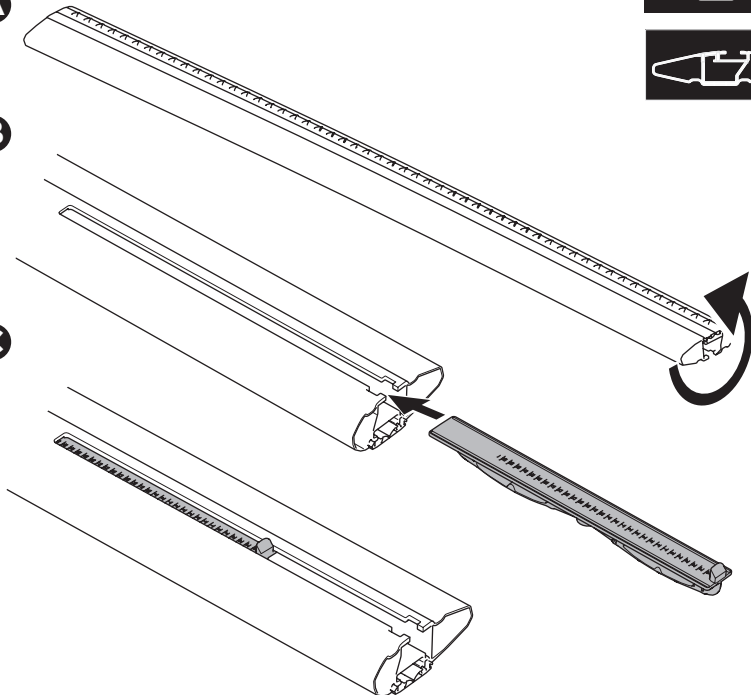


6

1 KIT + **2** FOOT PACK + BAR **3**

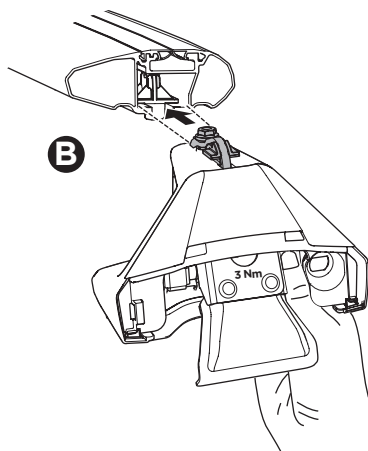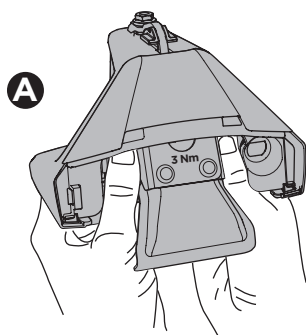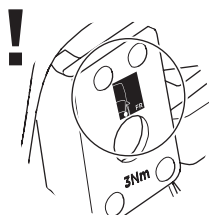
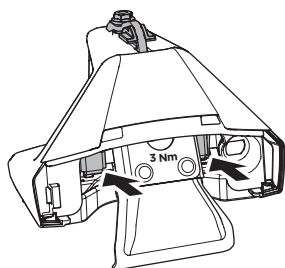


x4



7

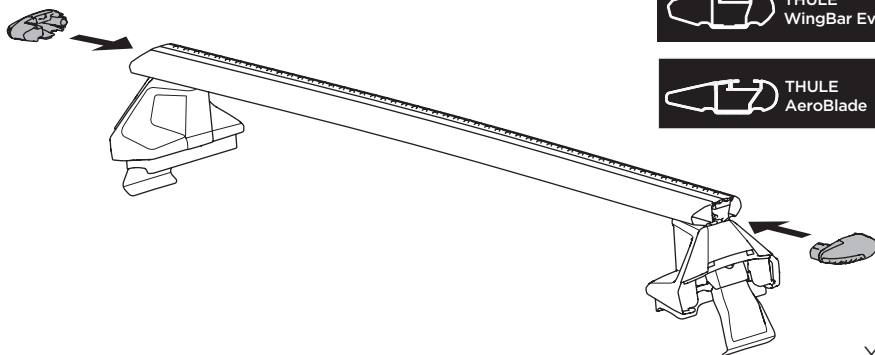




x2

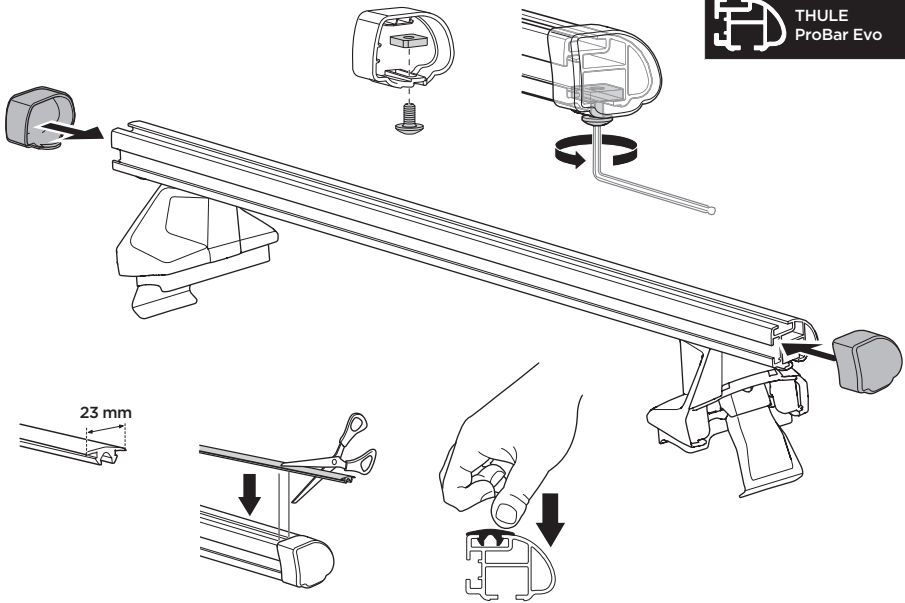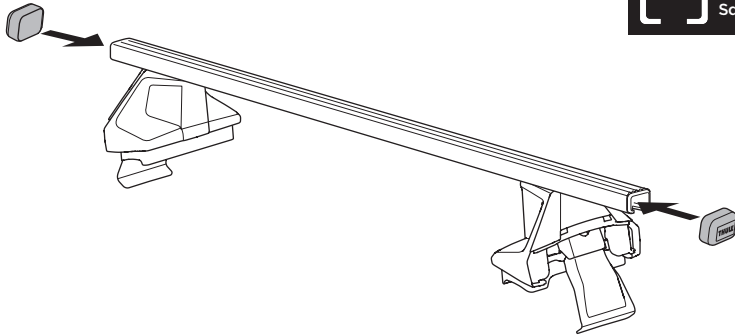


8


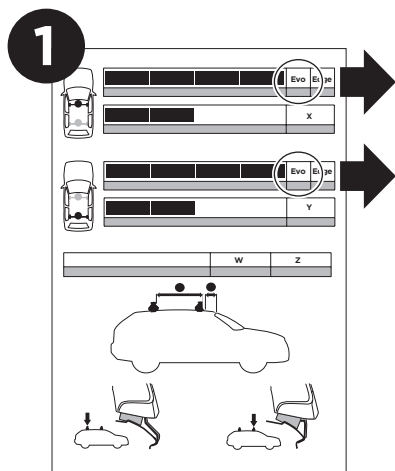
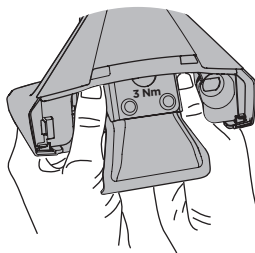


X / Y Scale

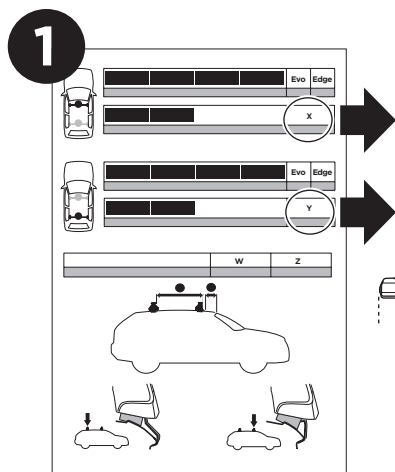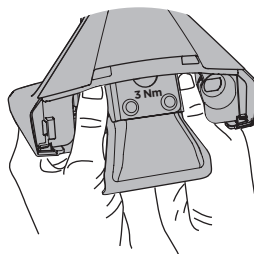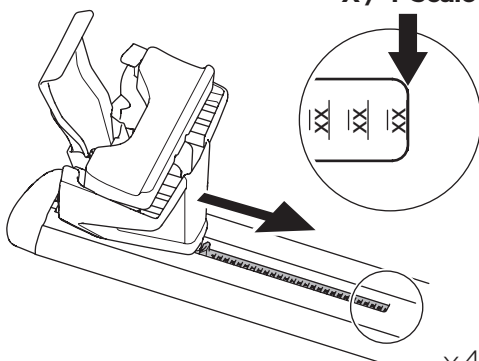


X / Y (mm / inch)

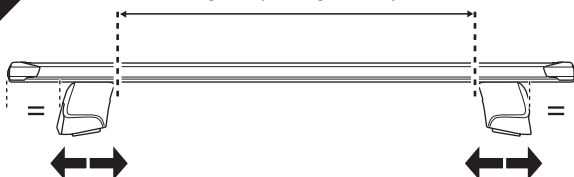

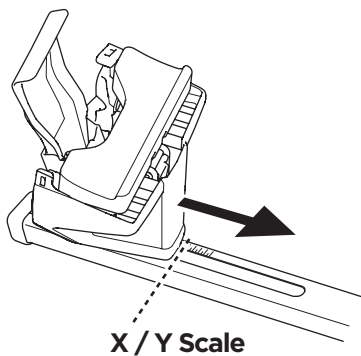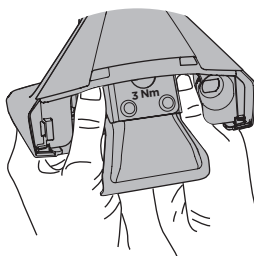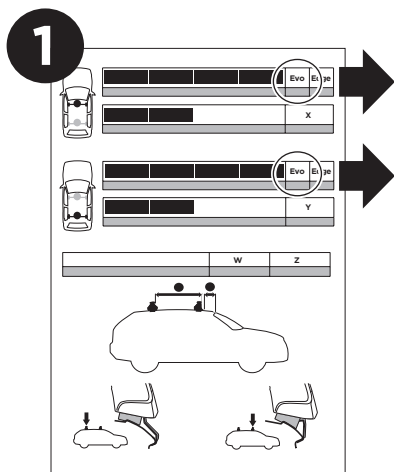


x4


9

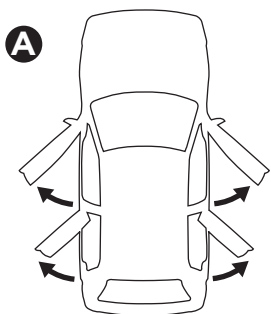







B

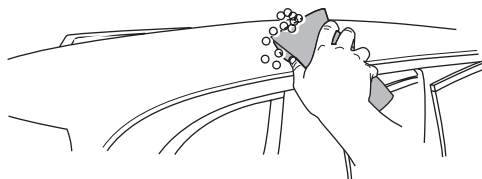





C

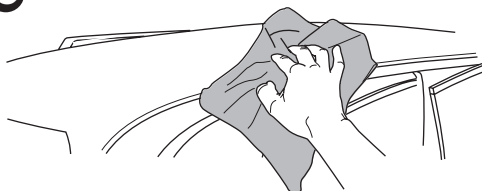



10

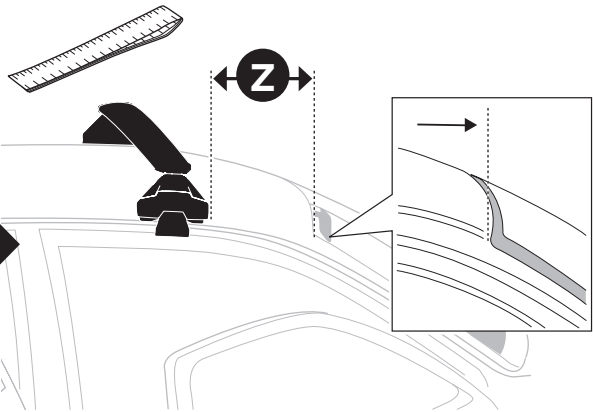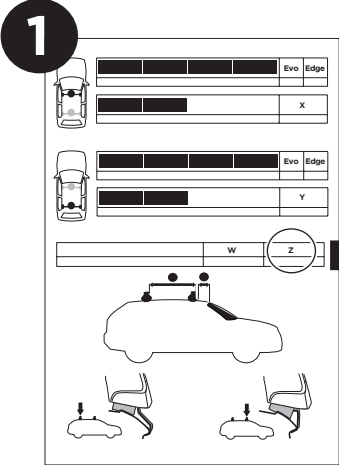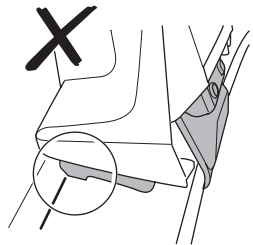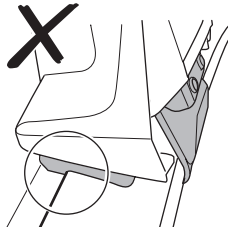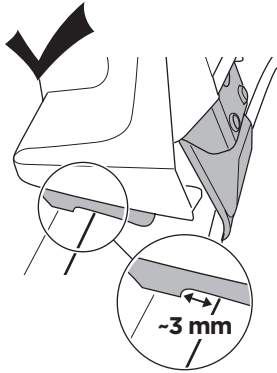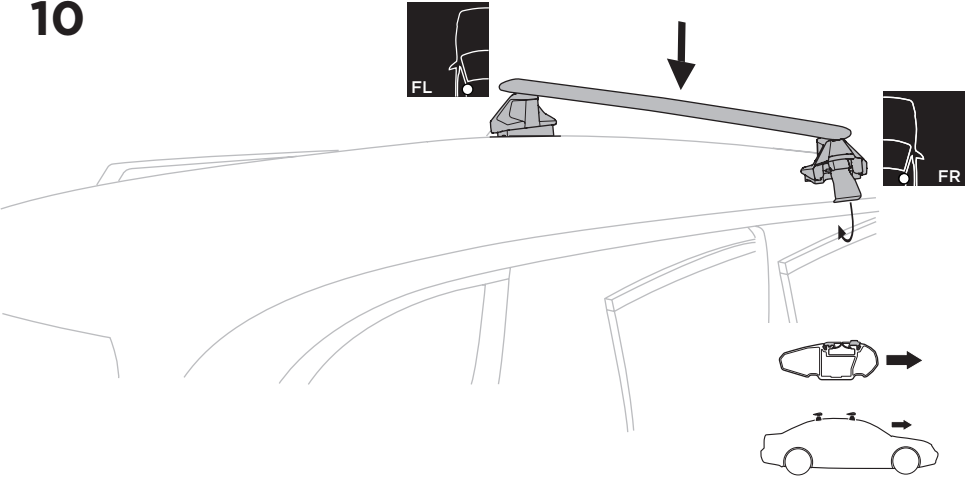

11

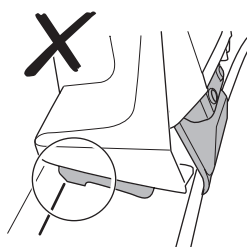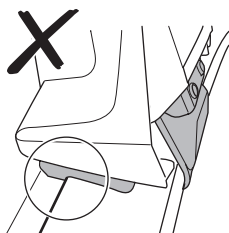
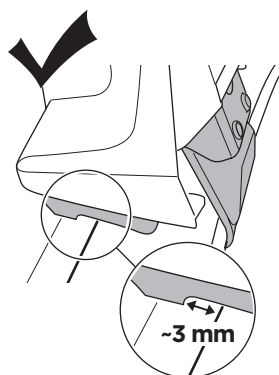
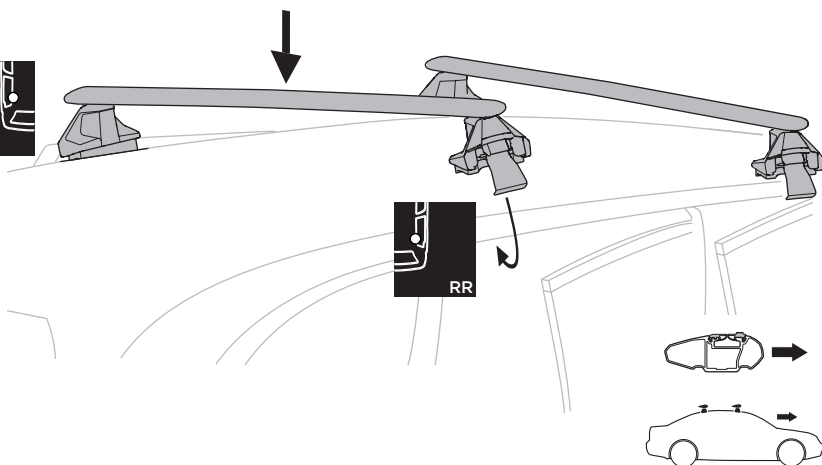


1

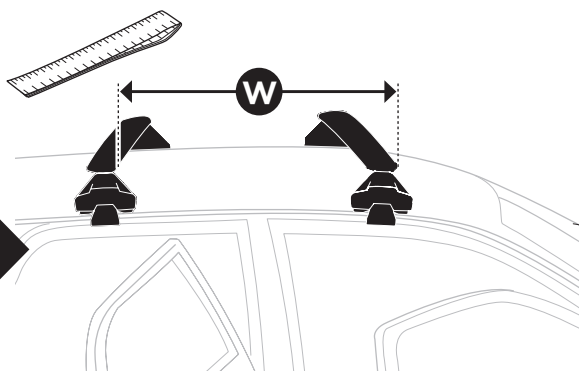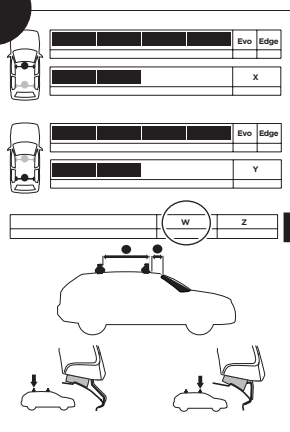

12




~50%

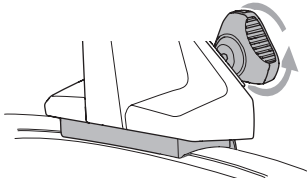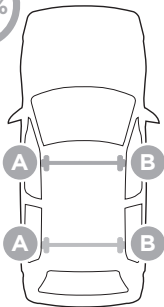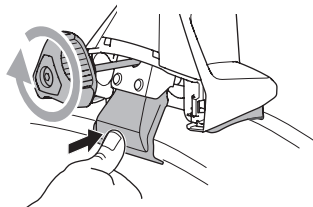


100%

Click
Click


3 Nm

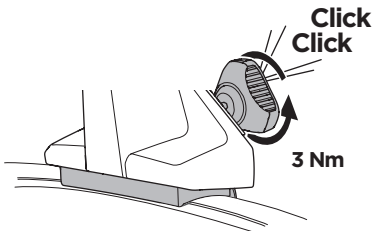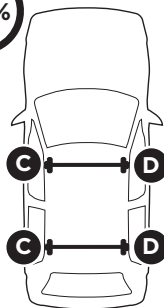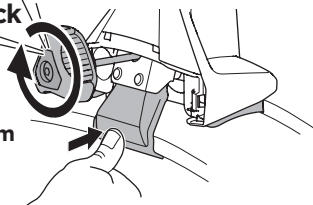



100%

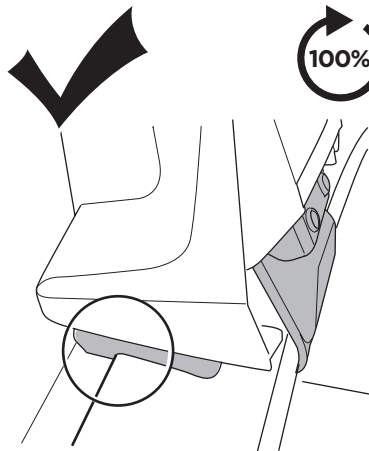




1

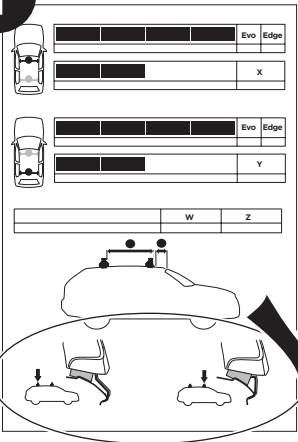

13

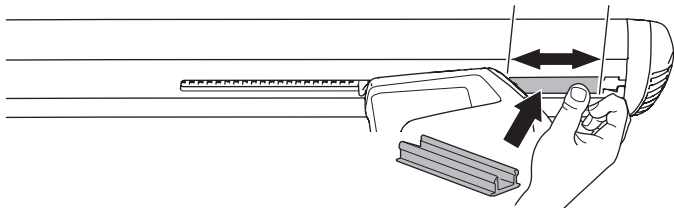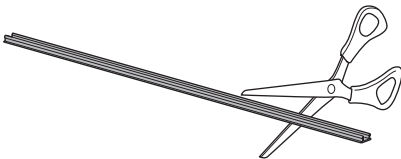


x4

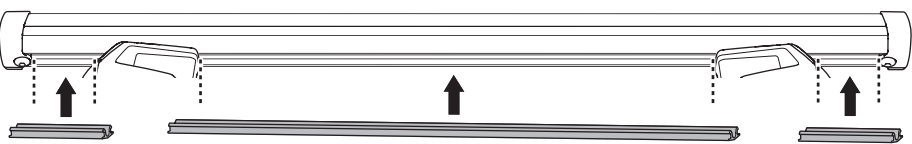


x2

14


A

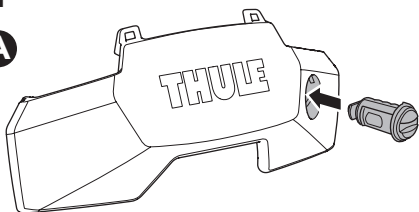

B

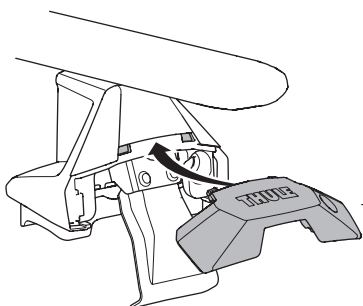

C

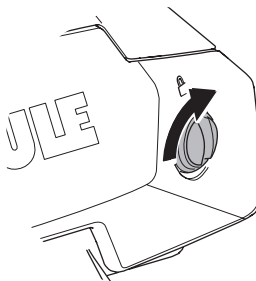


x4


i Accessory




A

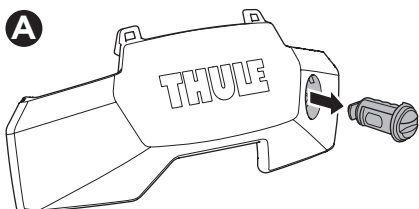


B

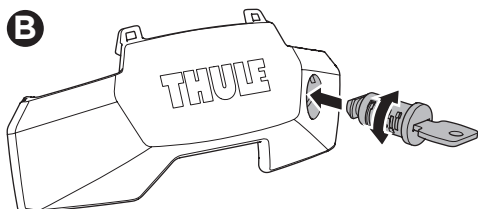

C

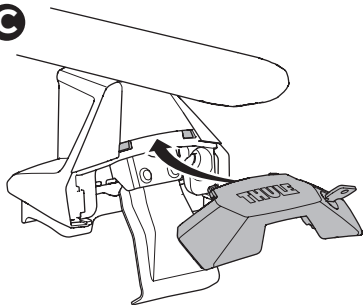


D

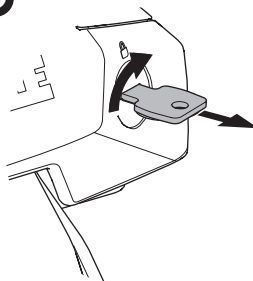

x4




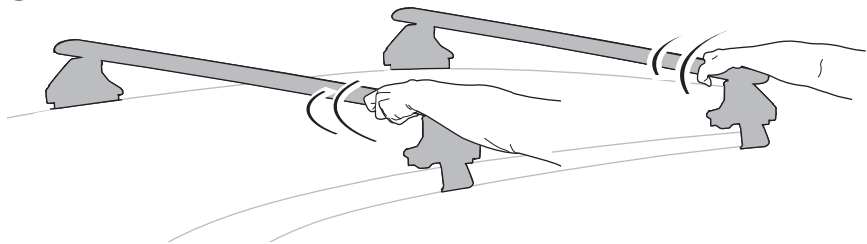








50 km



500 km

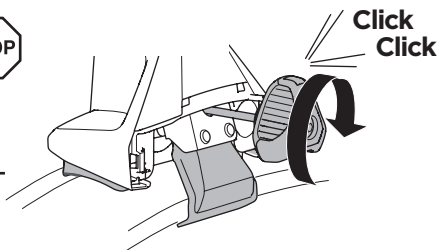

i

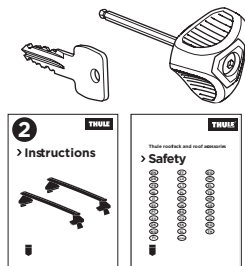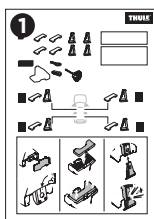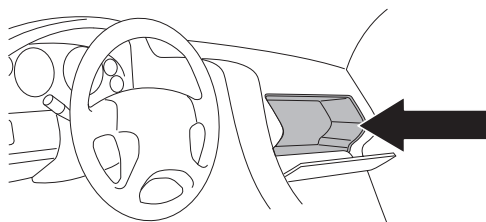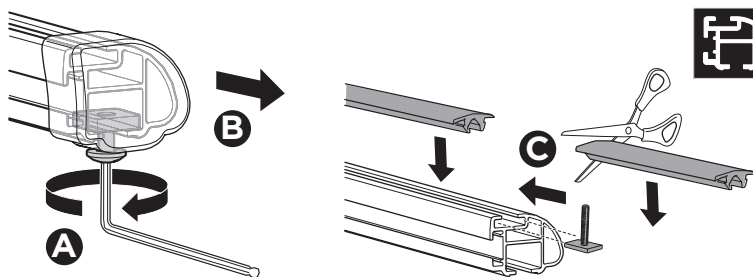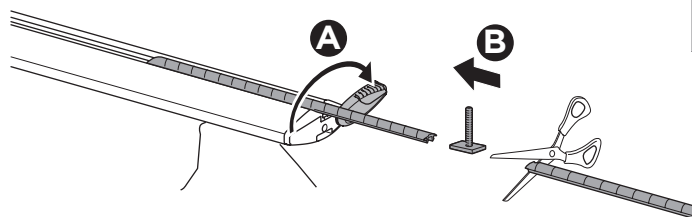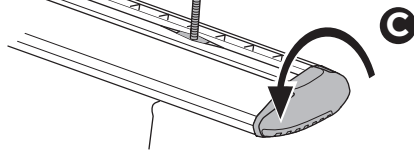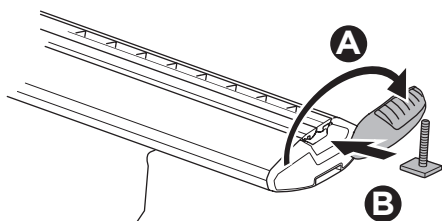



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.