


1

THULE
SWEDEN

> Instructions

Fit Kit 3101

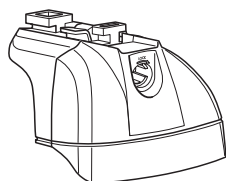

460R



Thule
WingBar Evo



Thule
AeroBlade




Thule
Rapid Aero



Thule
ProBar Evo



Thule
SquareBar Evo





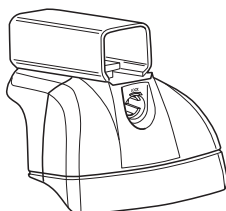


460




Thule
SquareBar



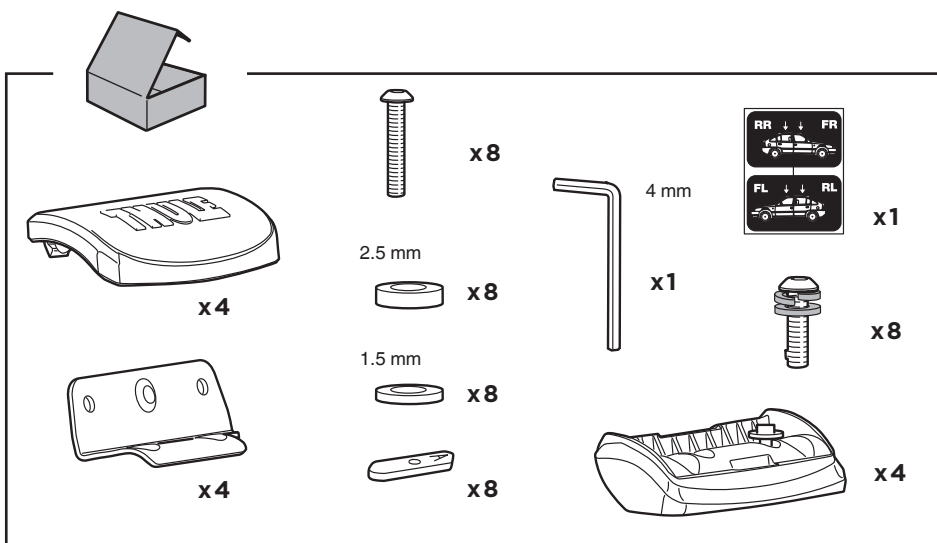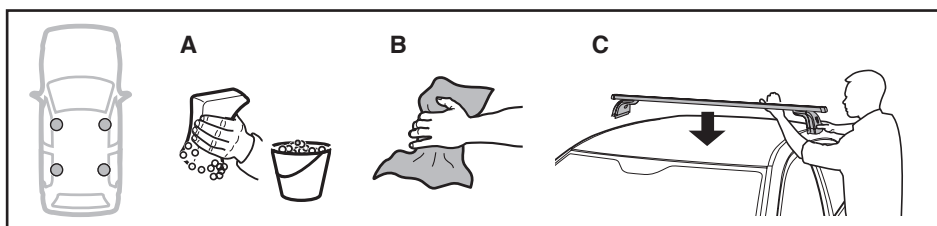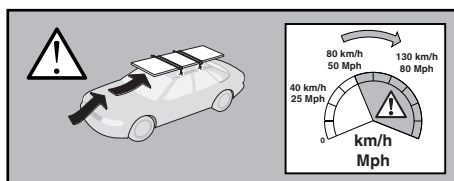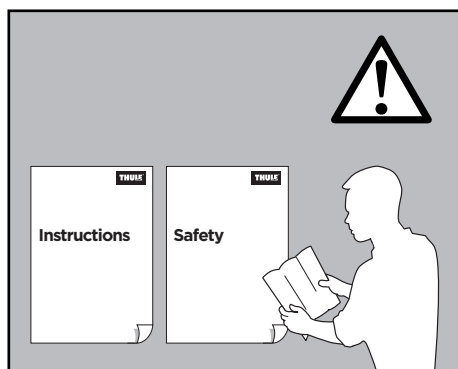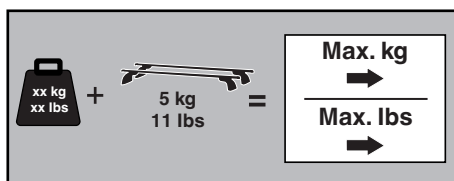




x4

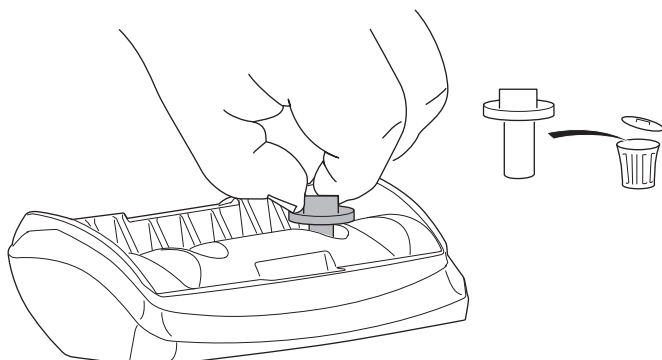

 x8

 x4


 x4

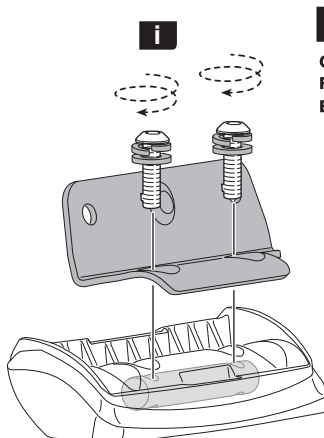



i

GB Only a few turns
F Quelques tours uniquement
E Sólo algunas vueltas


 x8
 2.5 mm  x8
 1.5 mm  x8
 x8

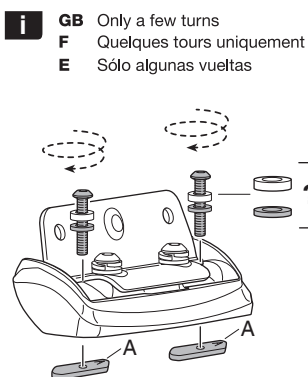[illegible]

4

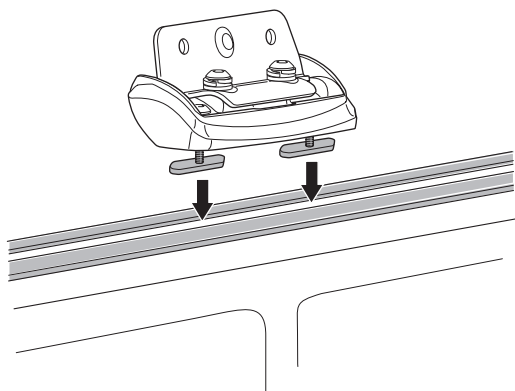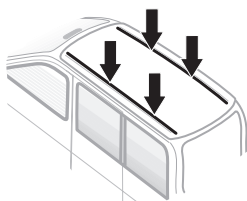


5

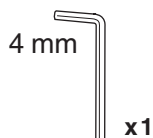




A

24" - 28" / 610 - 711 mm

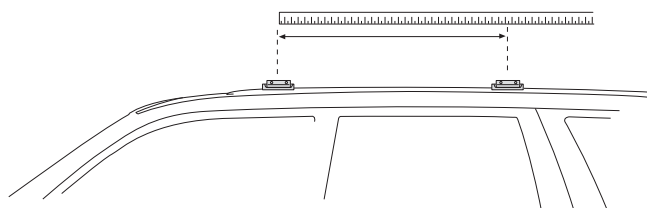

B

2.5 Nm
1.8 Ft.Lb

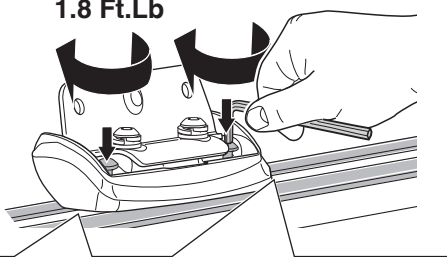


6

16 mm
x8


5 mm
x1

4 mm
x1

A

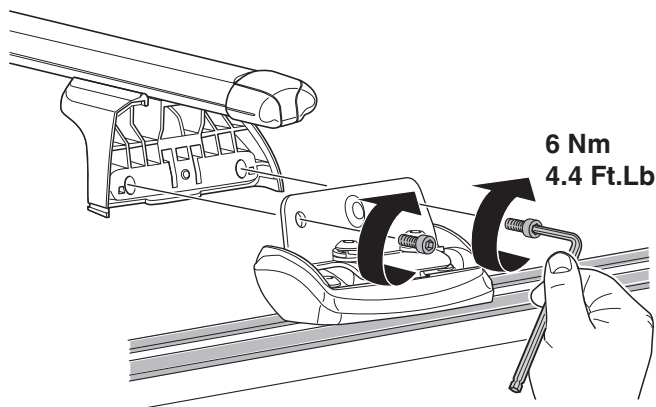


B

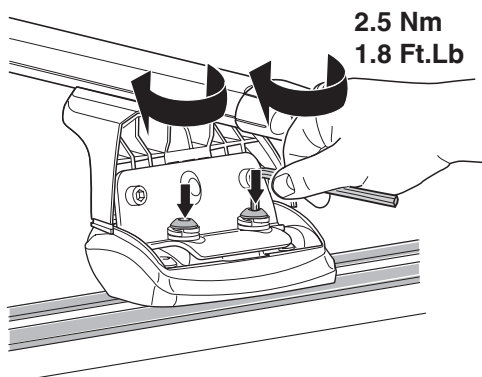

7



x1

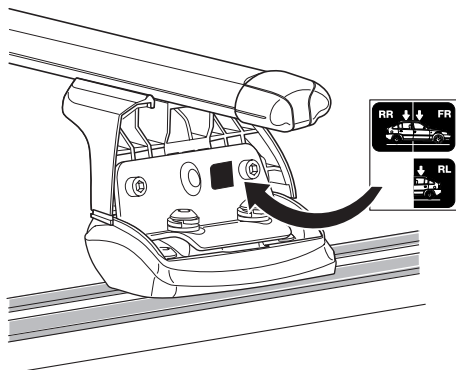


8




x4





x4

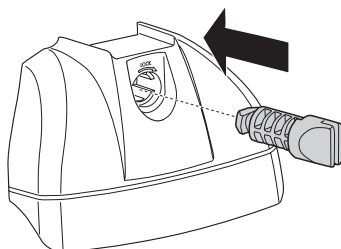

9

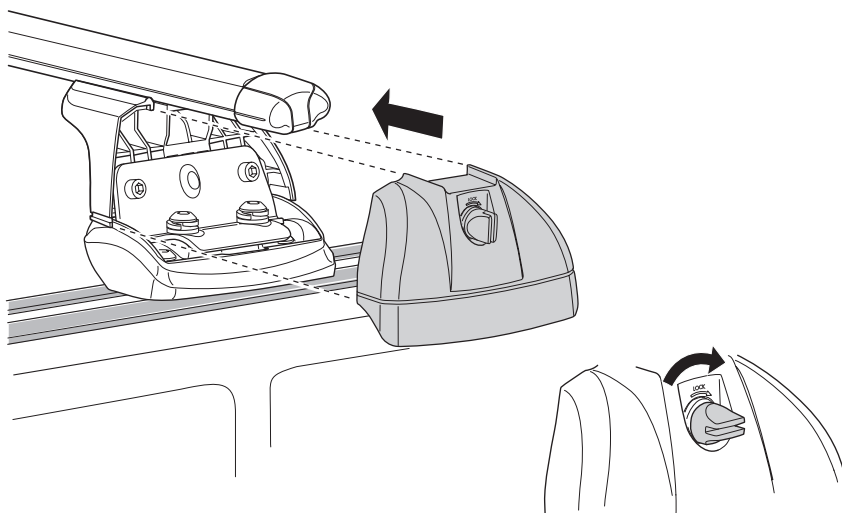

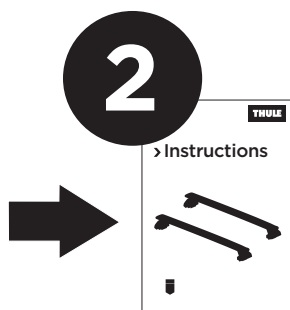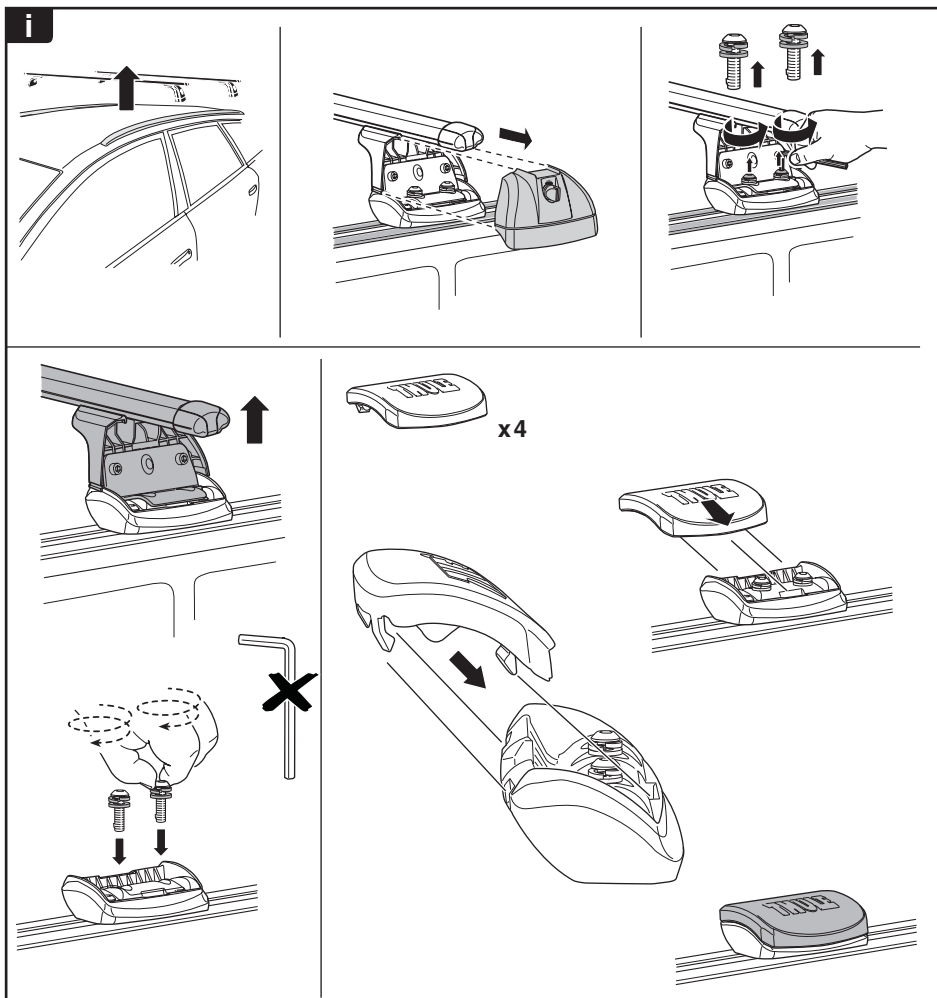



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.