

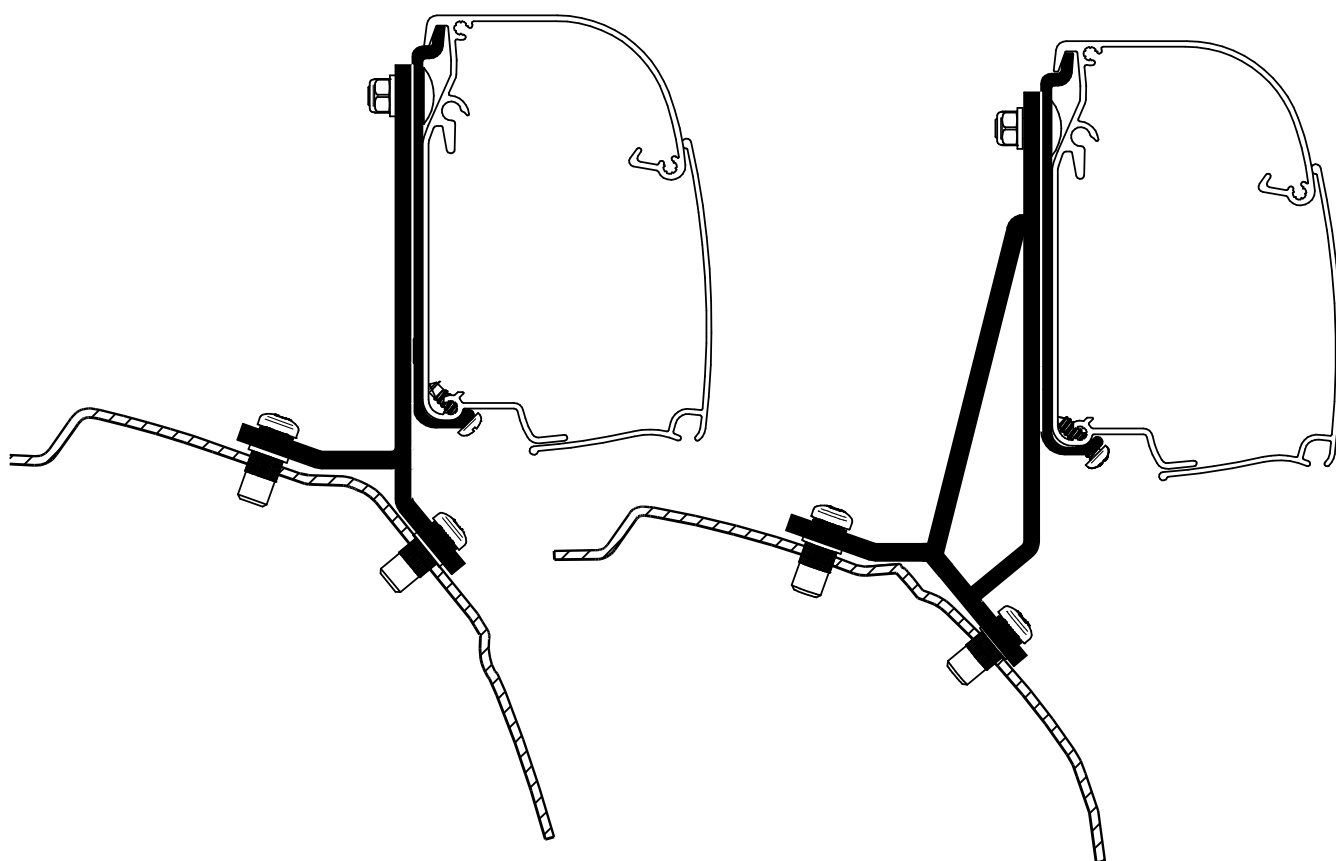
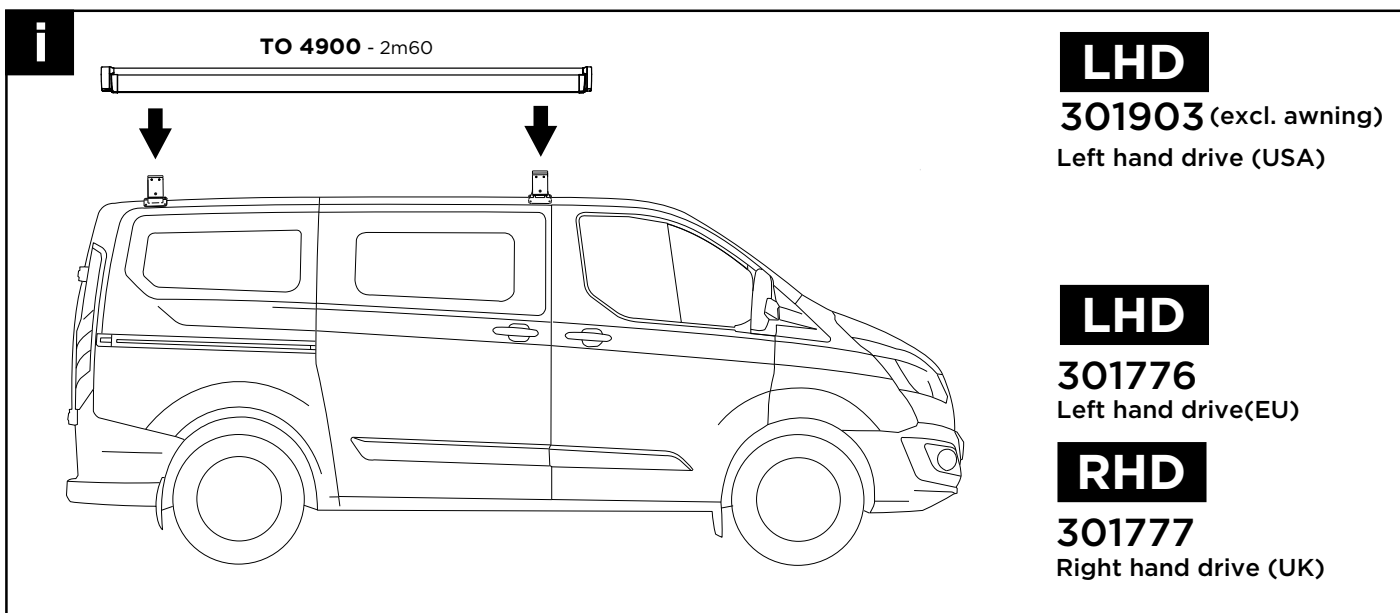
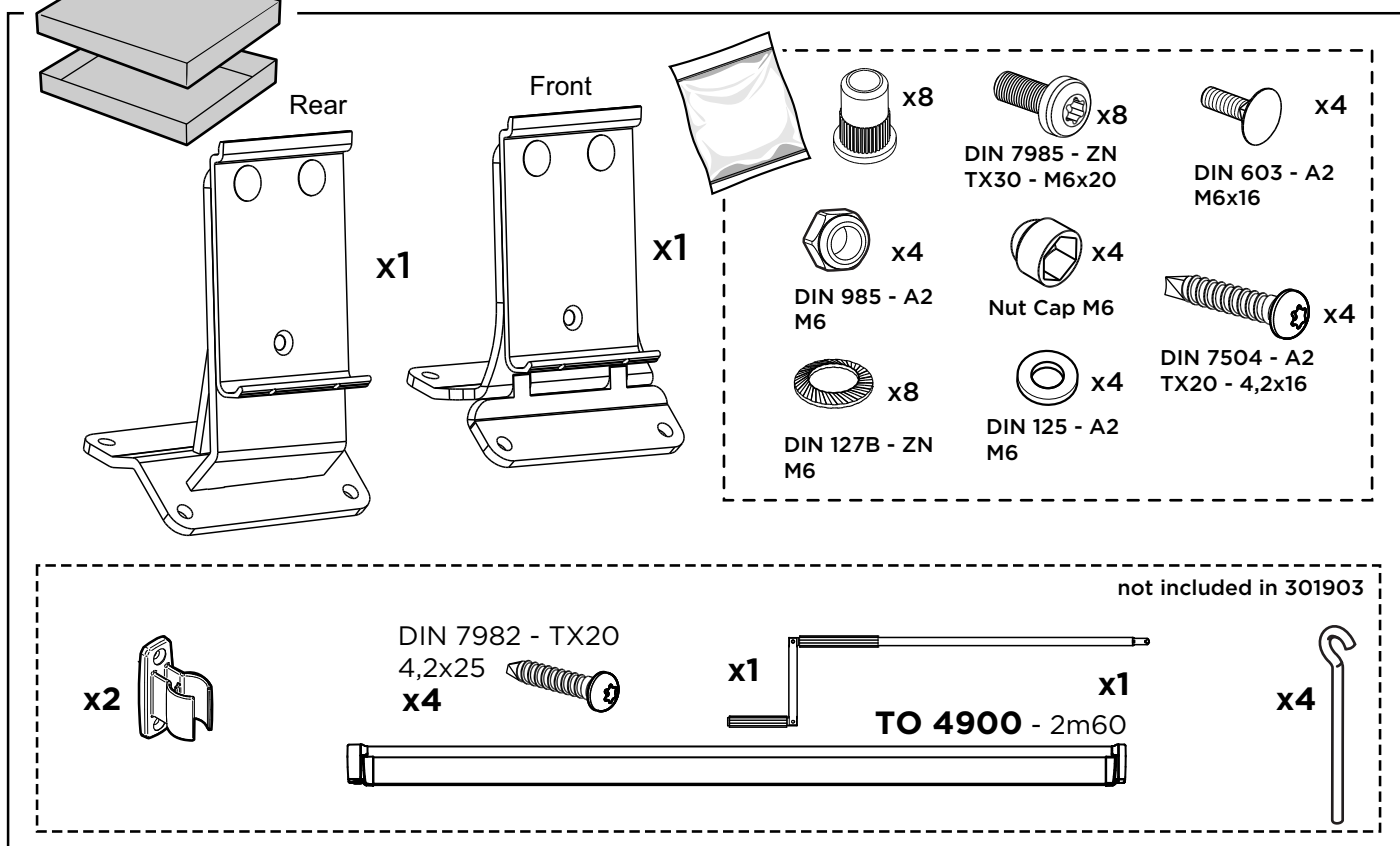


Ford Tourneo/Transit Custom adapter

> Instructions

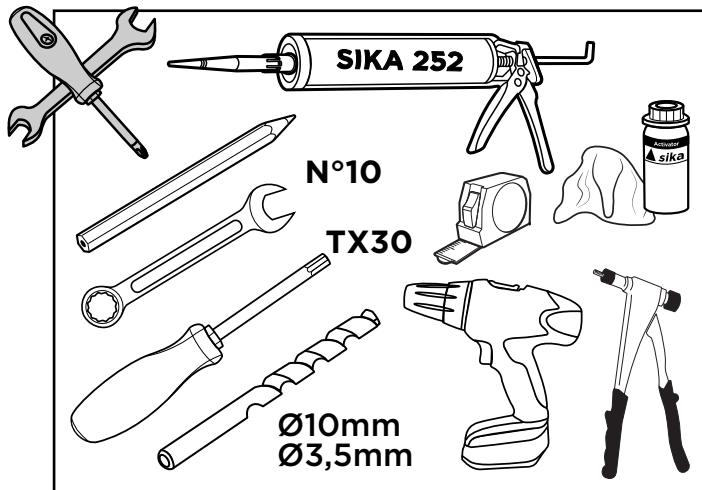

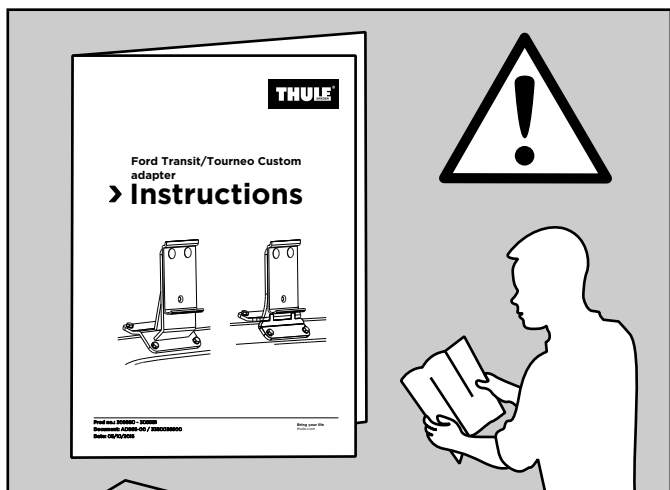


1

BACK

FRONT


A

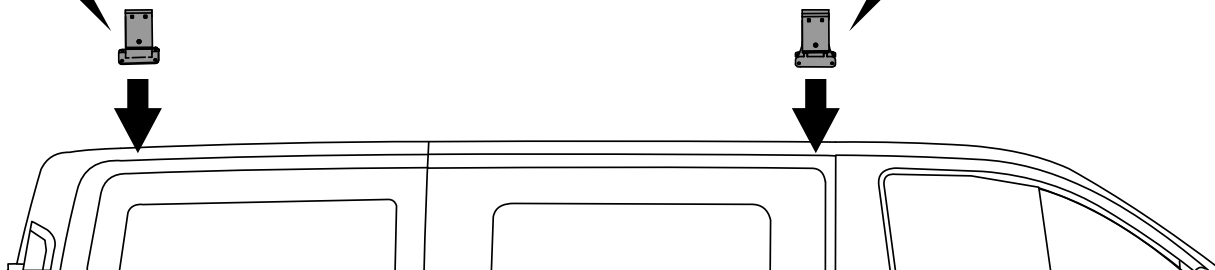


B




(230 mm)

1933 mm

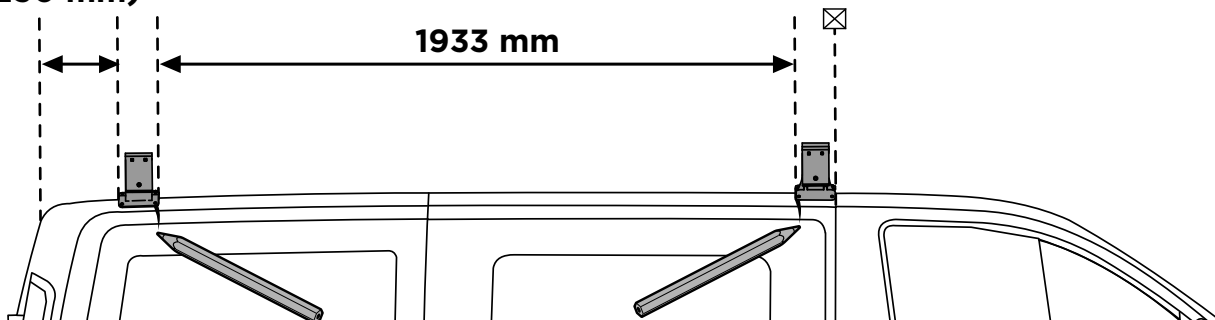


2

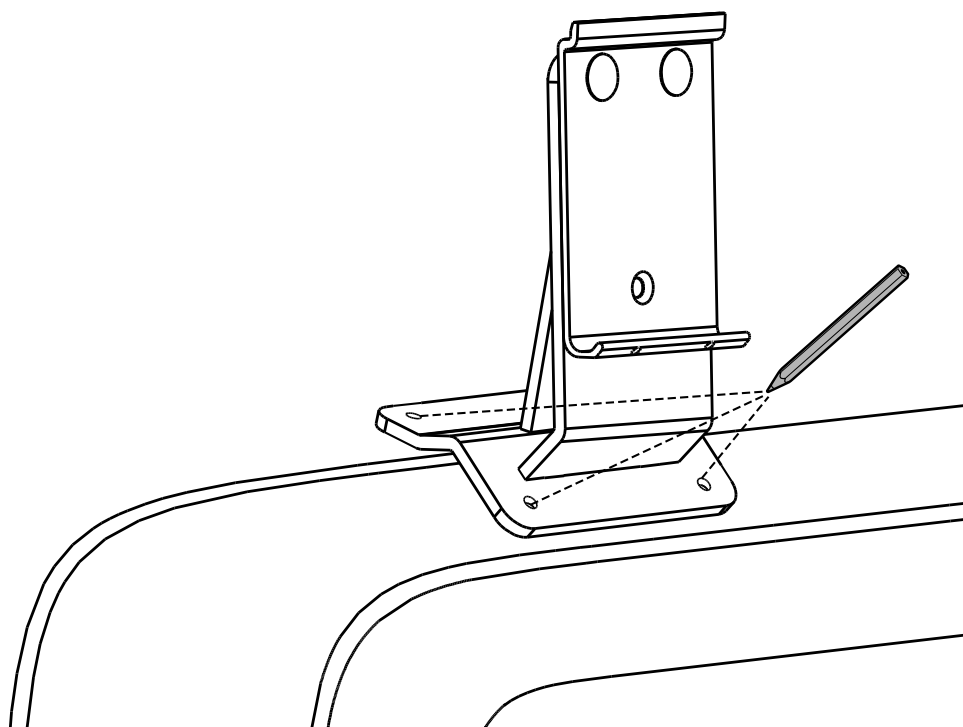


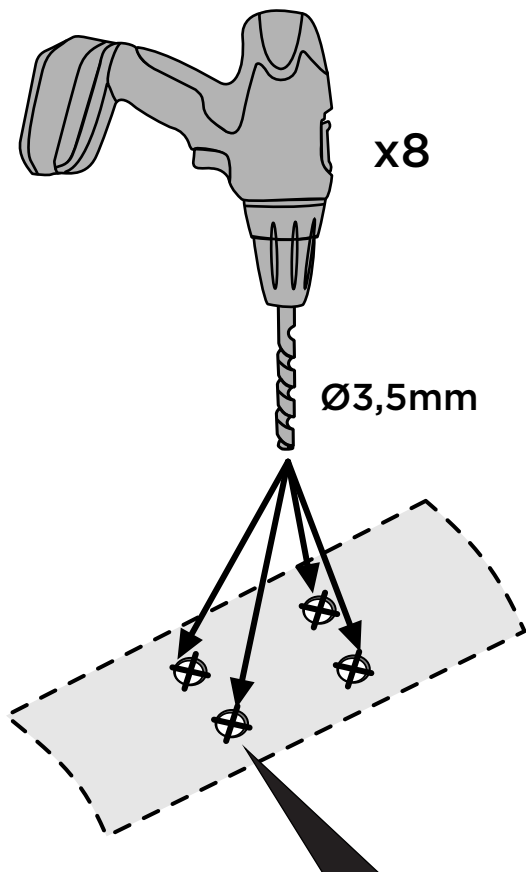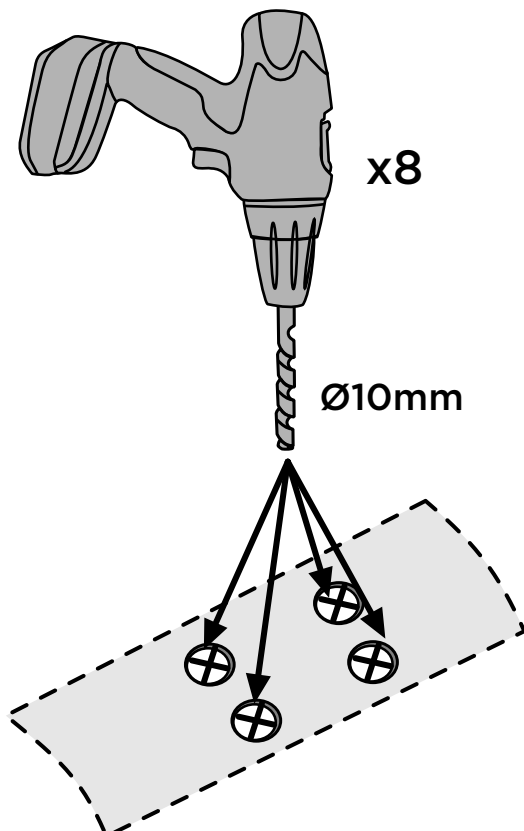3**A****B**

Thule recommends / beveelt aan / empfiehlt / recommande:
**Zinc spray surface treatment / Zink spray oppervlakte behandeling /
Zinkspray oberflächenbehandlung / traitement de surface avec pulvérisation de zinc**

Preparation according to the prescripts of the supplier.
Voorbehandeling volgens de voorschriften van de fabrikant.
Primern nach Anweisung des Hersteller.
Pour la préparation, suivre les prescriptions du fournisseur.

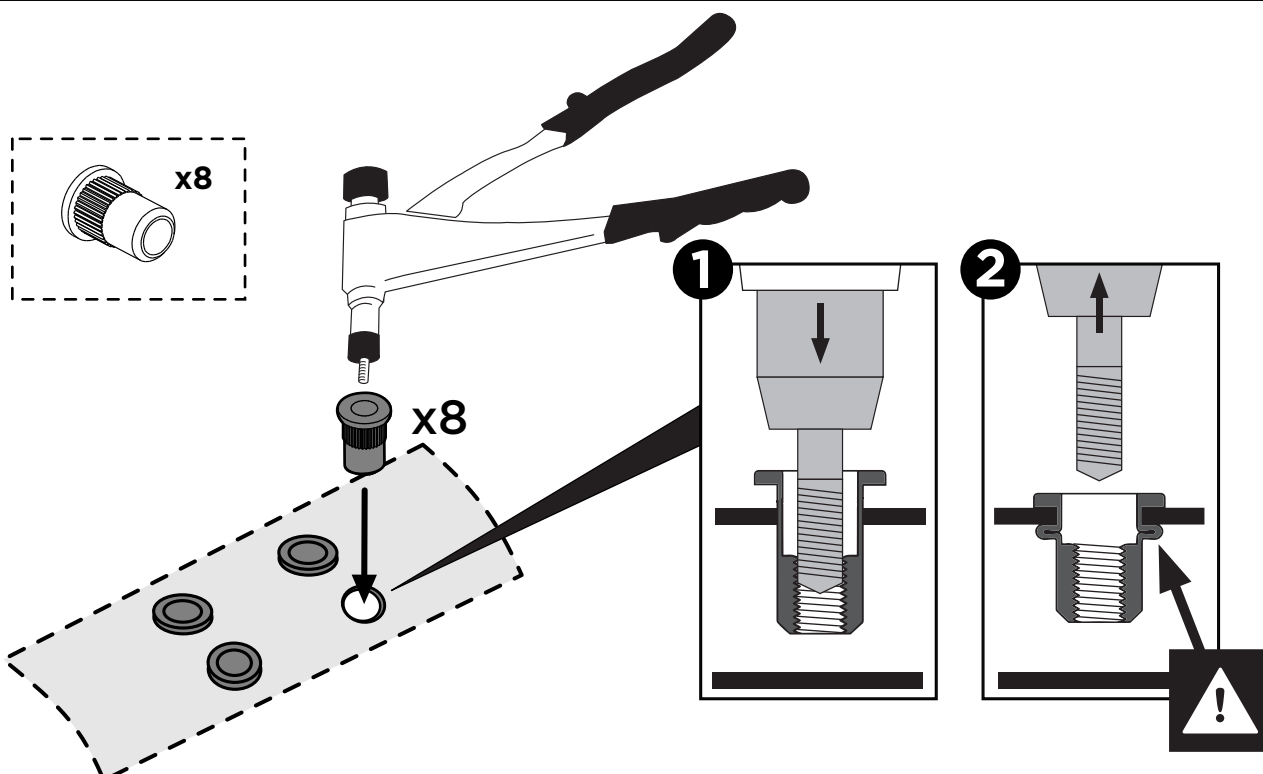C

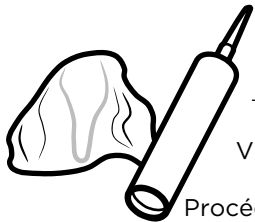

Glue / Lijmen / Verklebung / Coller:

Thule recommends / beveelt aan / empfiehlt / recommande:

SIKA 252 or Terostat MS937


Preparation and sealing according to the prescripts of the glue supplier.
Voorbehandeling en afdichting volgens de voorschriften van de lijmfabrikant.
Primern und Abdichtung nach Anweisung des Dichtmittelherstellers.

Procédure d'installation suivant les prescriptions indiquées sur l'emballage du produit.




4

A

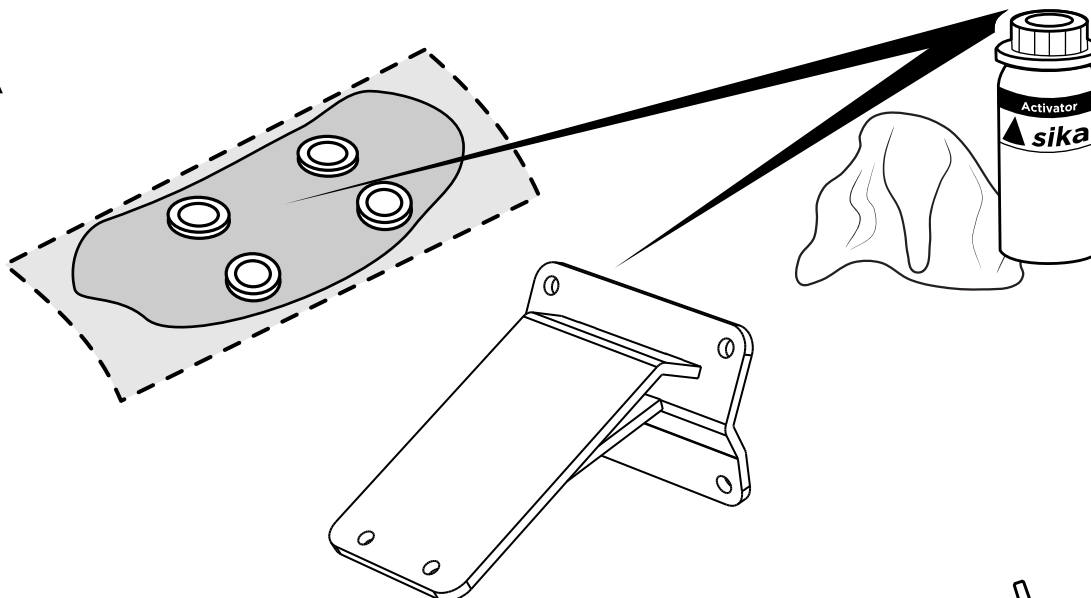


B

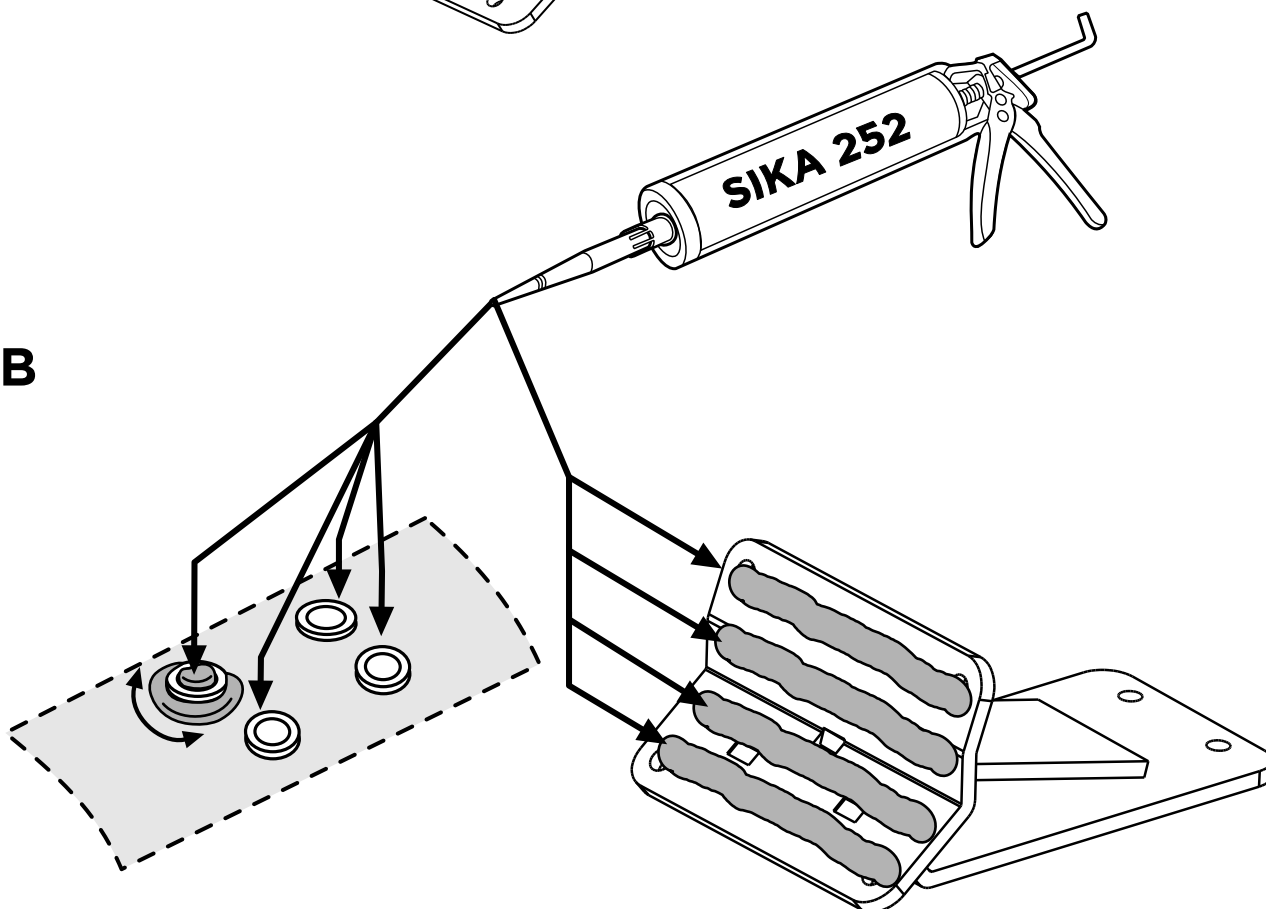

5


A

N°10

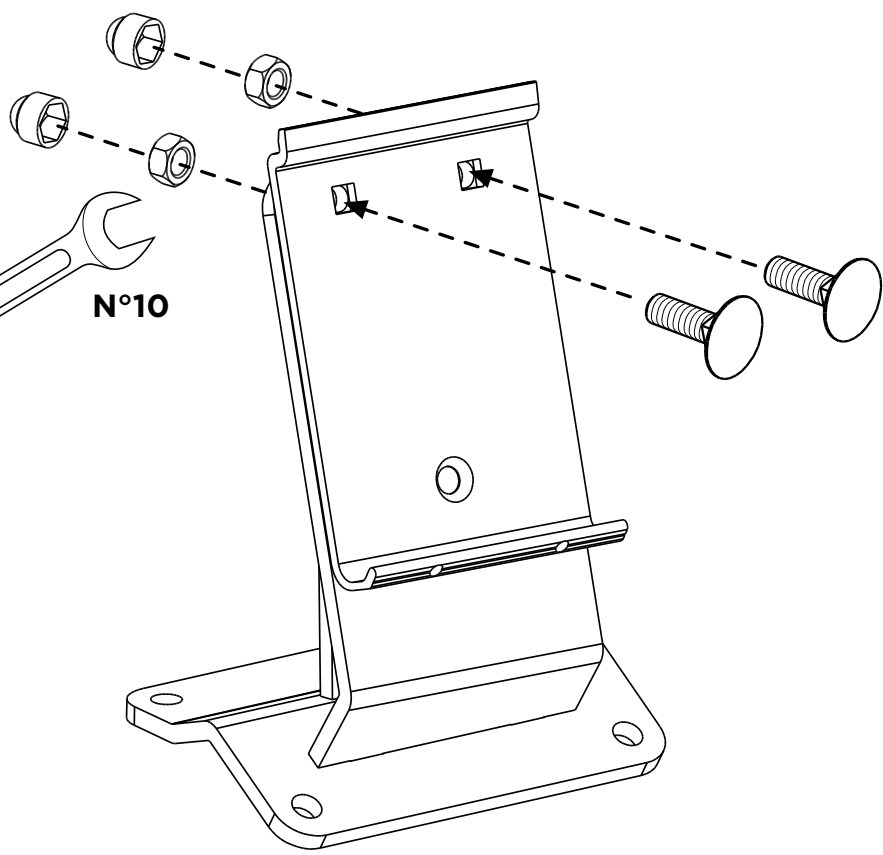

B


TX30

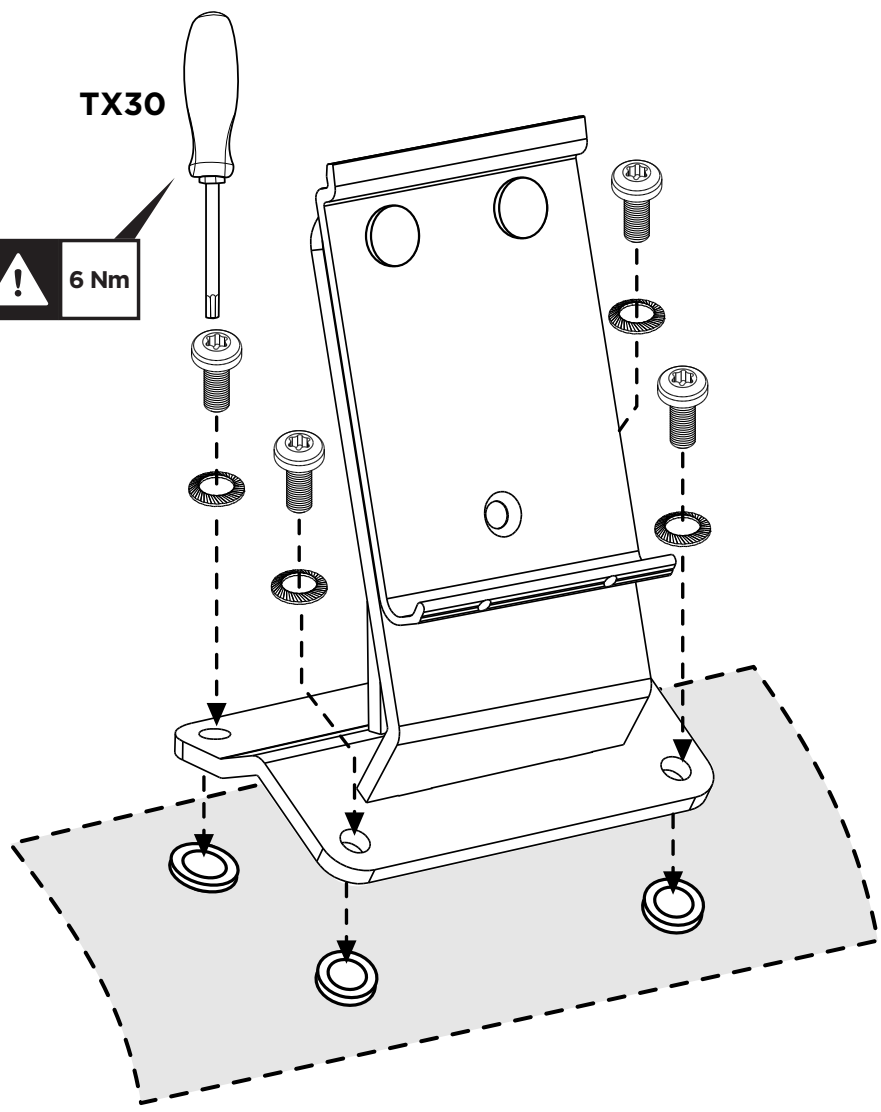


6

A

TO 4900 - 2m60

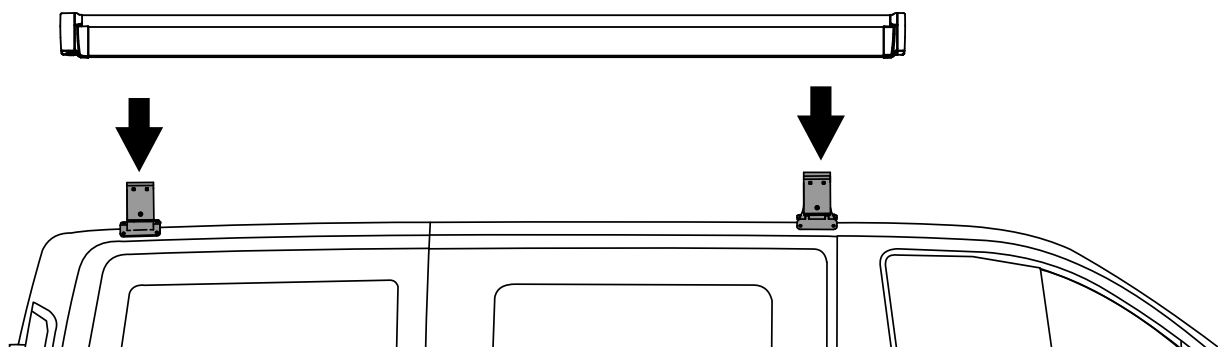

B

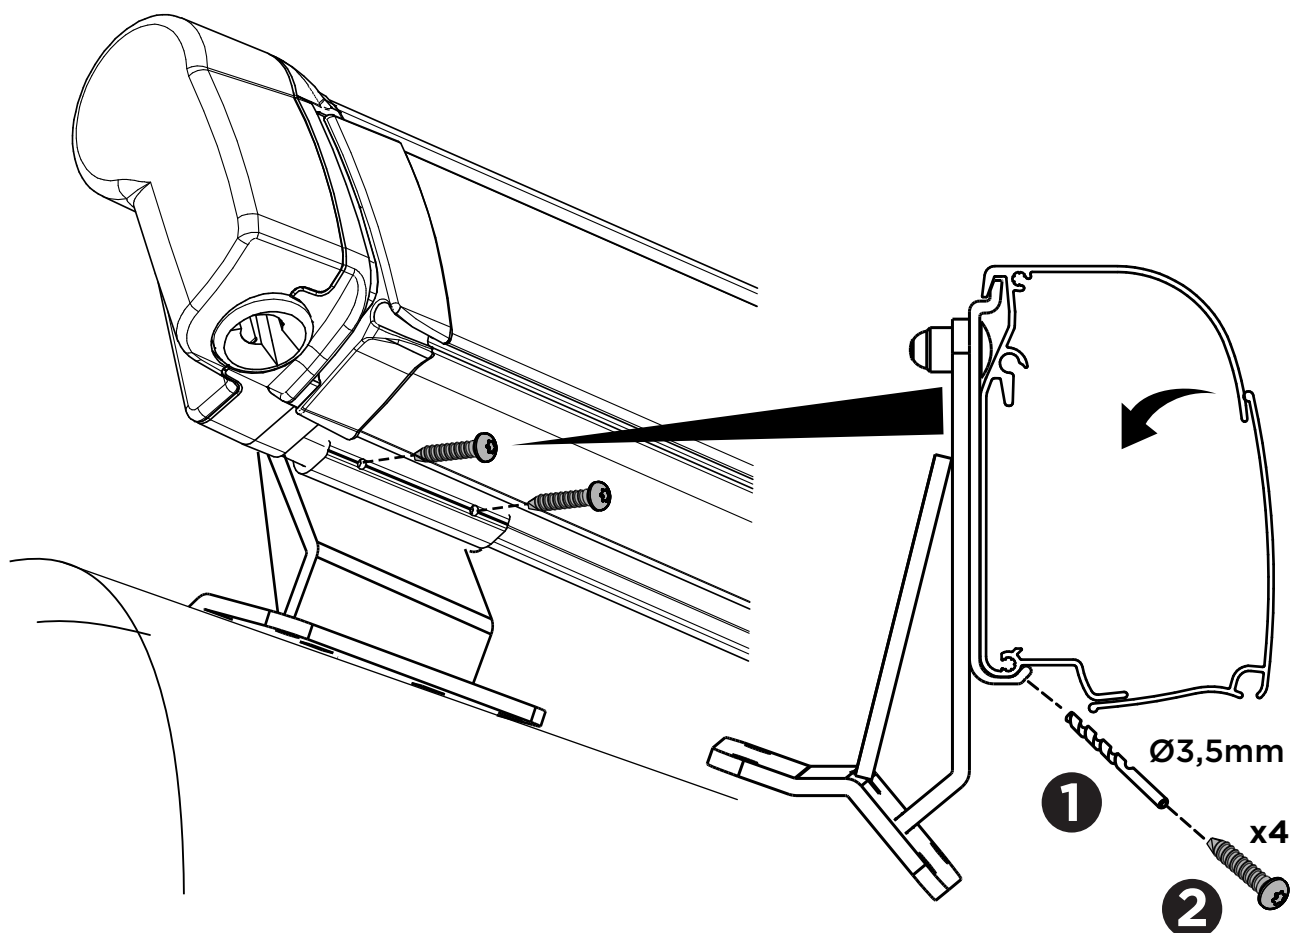



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.