

1









Kit 187009

VW California T5 & T6, 4-dr Bus, 03-15 / 15-
 VW Caravelle T5 & T6, 4-dr Bus, 03-15 / 15-
 VW Multivan T5 & T6, 4-dr Bus, 03-15 / 15-
 VW Transporter T5 & T6, 4-dr Van, 03-15 / 15-
 VW Shuttle T5 & T6, 4-dr Bus, 03-15 / 15-




ISO 11154-E


This kit is only for vehicles with T-Profile.

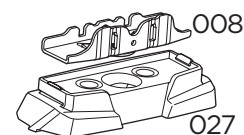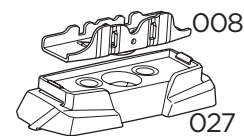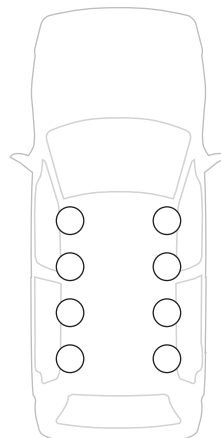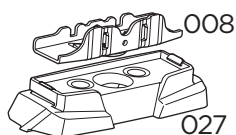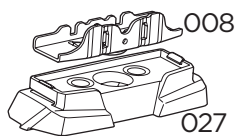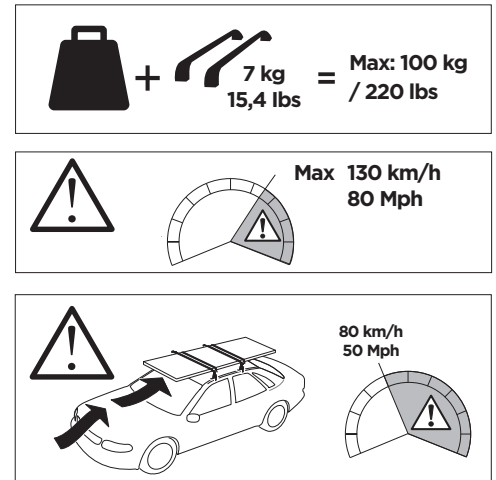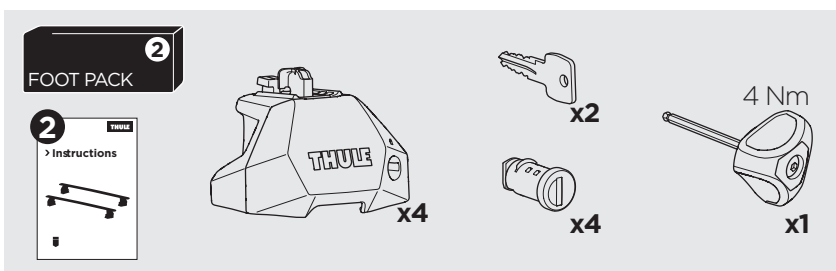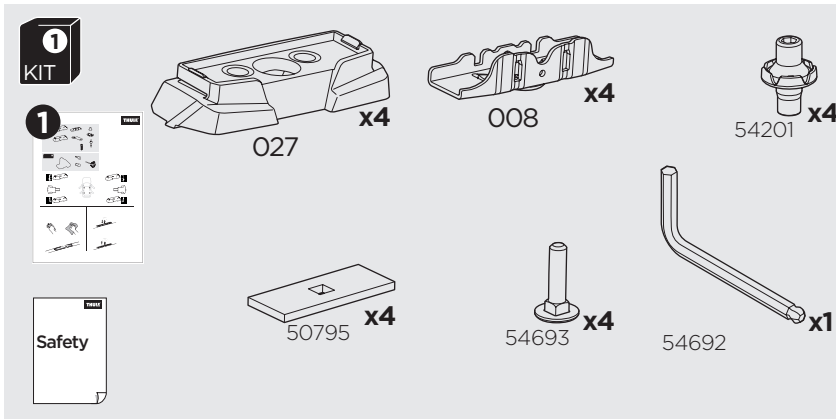


1

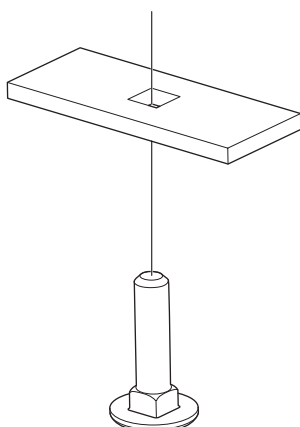


2

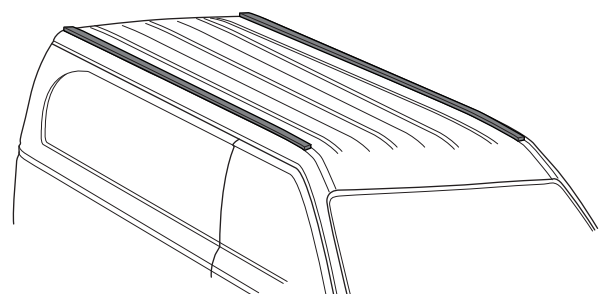


3

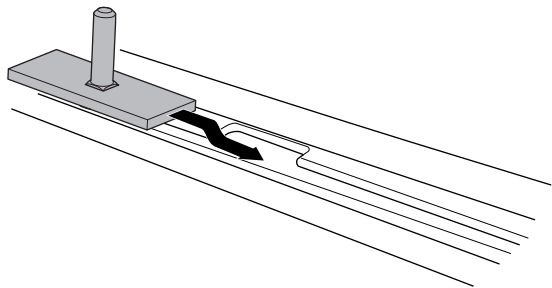


4

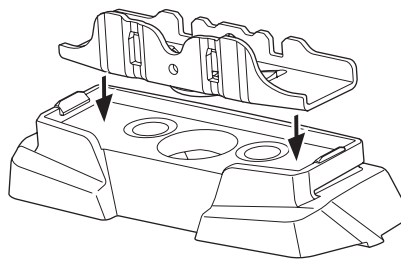


5

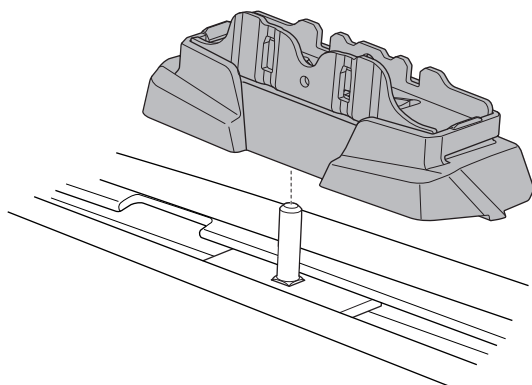


6

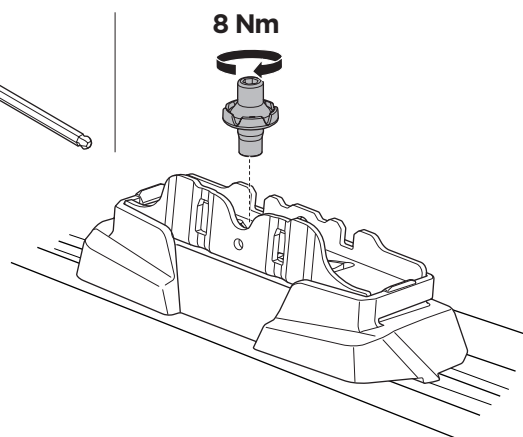


7

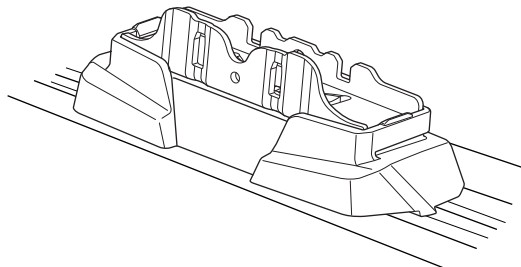

A

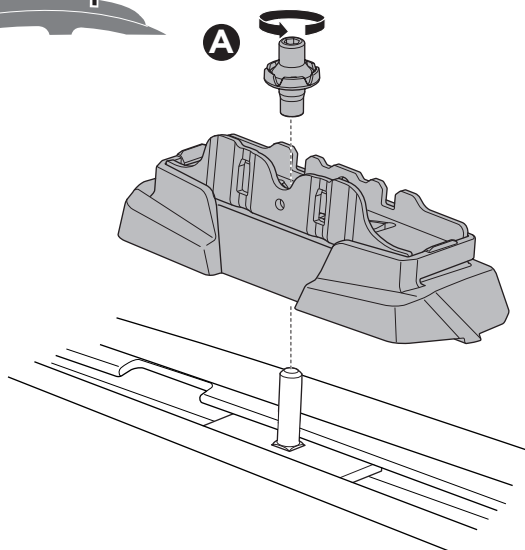

B

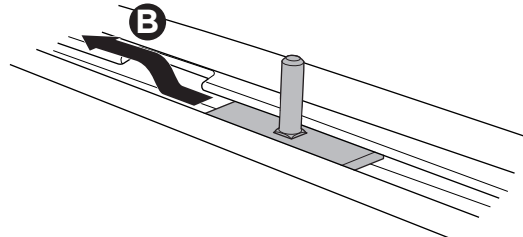



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.