



Thule Rapid System Kit 1192





> Instructions

CHRYSLER Neon, 4-dr Sedan, 00-04

DODGE Neon, 4-dr Sedan, 00-04 / *00-05

PLYMOUTH Neon, 4-dr Sedan, 00-04 / *00-01

*North America

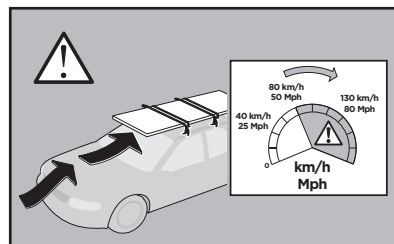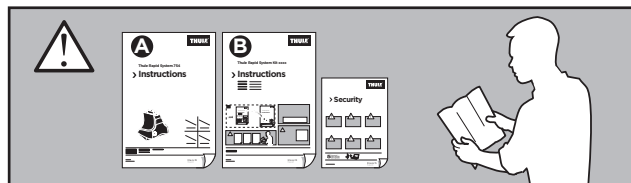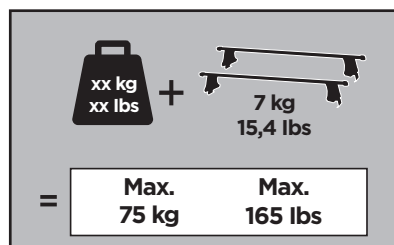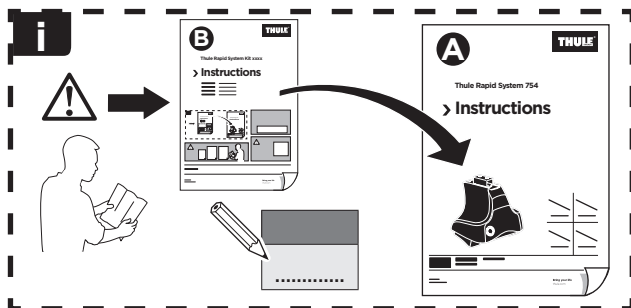


ISO 11154-E

141192


C.20130703
519-1192-02

Bring your life
thule.com

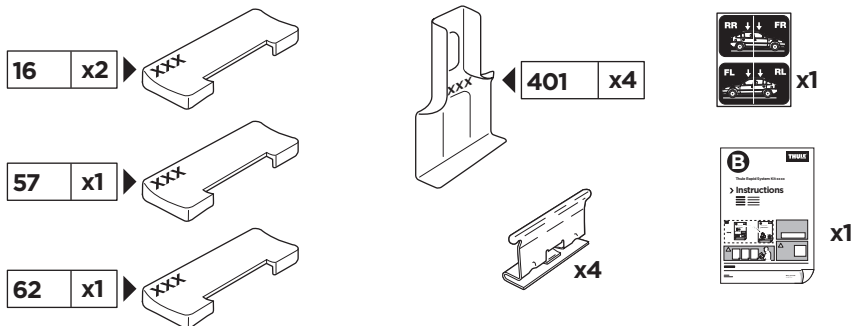

1

	X (scale)	X (mm)	X (inch)
CHRYSLER Neon , 4-dr Sedan, 00-04	20	851	33 ¹ / ₂
DODGE Neon , 4-dr Sedan, 00-04 / *00-05	20	851	33 ¹ / ₂
PLYMOUTH Neon , 4-dr Sedan, 00-04 / *00-01	20	851	33 ¹ / ₂

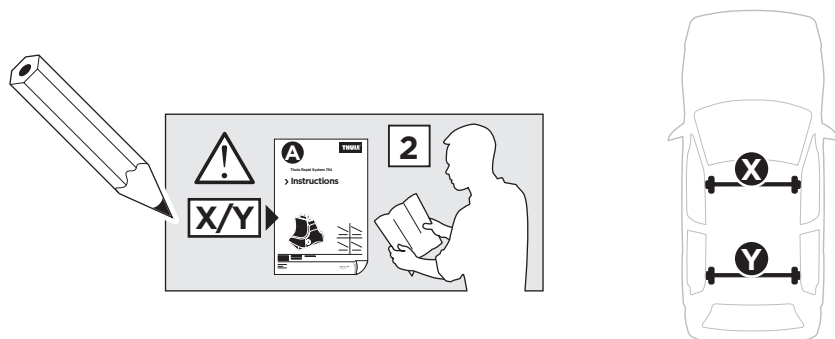



	Y (scale)	Y (mm)	Y (inch)
CHRYSLER Neon , 4-dr Sedan, 00-04	16	811	31 ⁷ / ₈
DODGE Neon , 4-dr Sedan, 00-04 / *00-05	16	811	31 ⁷ / ₈
PLYMOUTH Neon , 4-dr Sedan, 00-04 / *00-01	16	811	31 ⁷ / ₈

2



CHRYSLER Neon, 4-dr Sedan, 00-04

DODGE Neon, 4-dr Sedan, 00-04 / *00-05




PLYMOUTH Neon, 4-dr Sedan, 00-04 / *00-01

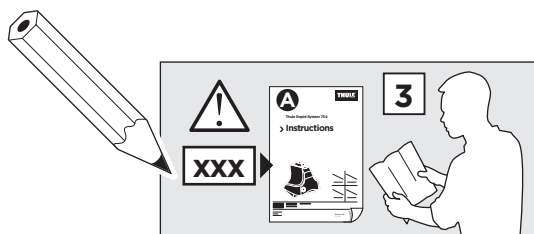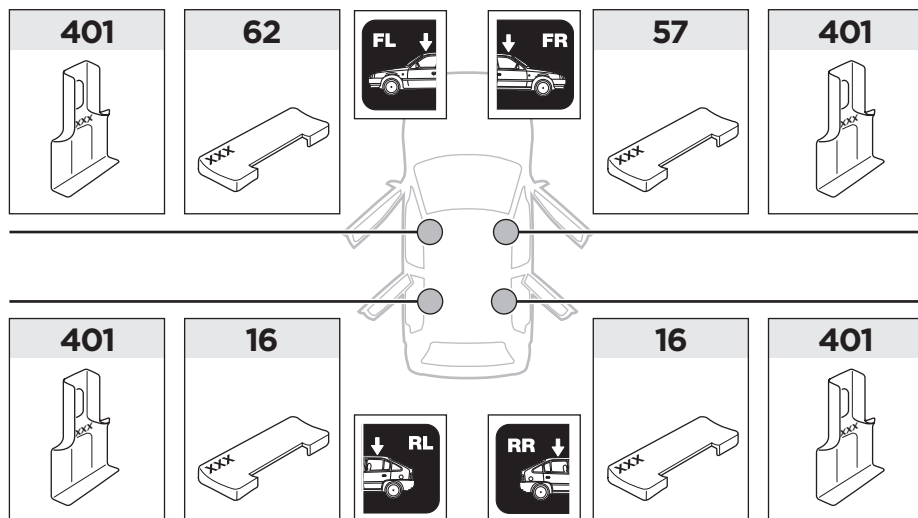

3

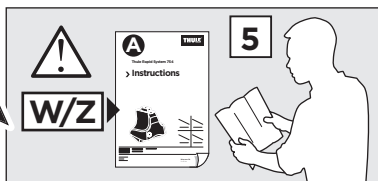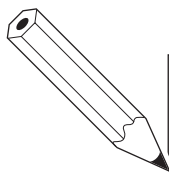

	W (mm)	Z (mm)	W (inch)	Z (inch)
CHRYSLER Neon , 4-dr Sedan, 00-04	210	650	8 1/4	25 5/8
DODGE Neon , 4-dr Sedan, 00-04 / *00-05	210	650	8 1/4	25 5/8
PLYMOUTH Neon , 4-dr Sedan, 00-04 / *00-01	210	650	8 1/4	25 5/8

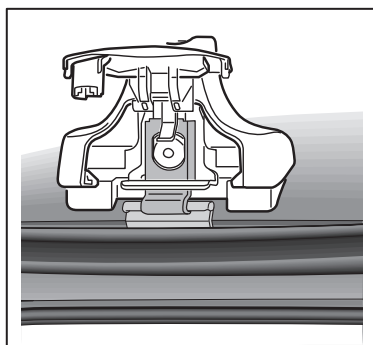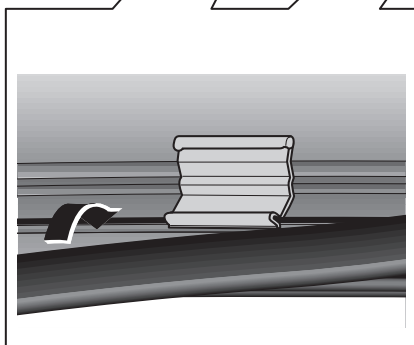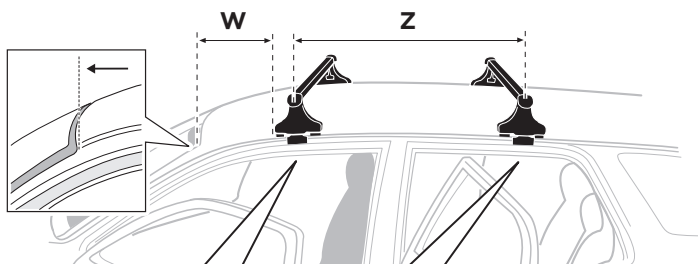



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.