


REPLACEMENT CLASS "A" MIRROR HEAD INSTALLATION INSTRUCTIONS


NOTE: MIRROR HEAD CONFIGURATION
MAY VARY.

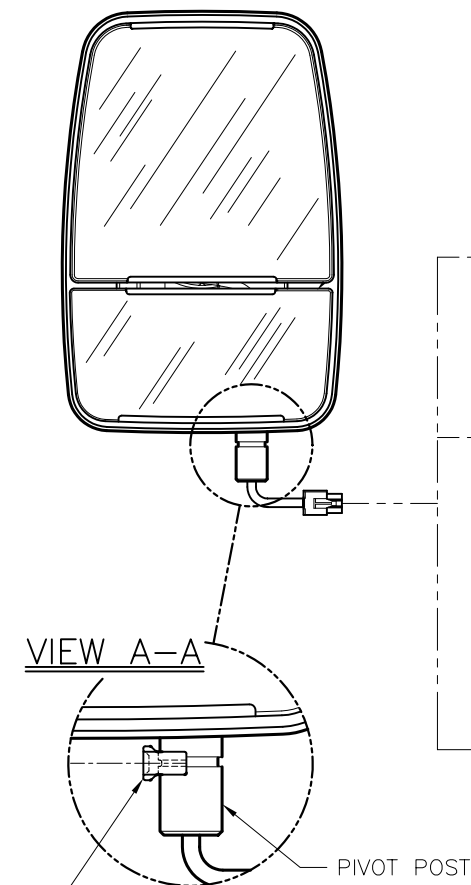

2020 STYLE

2030 STYLE

2025 STYLE

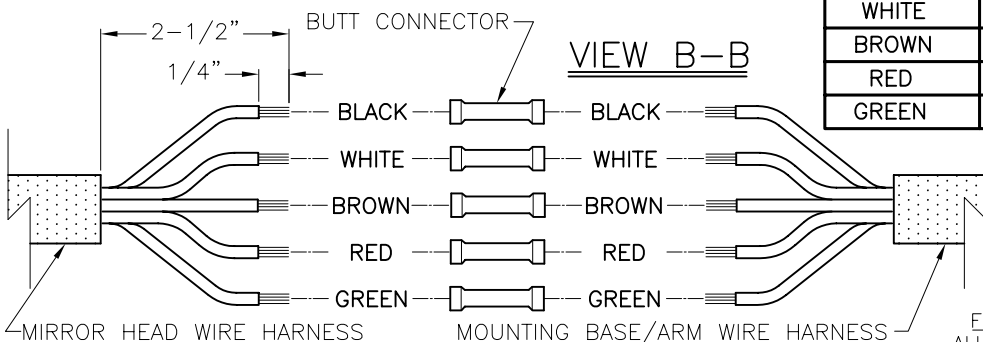

WIRE COLOR	FUNCTION
BLACK	COMMON
WHITE	VERTICAL
BROWN	HORIZONTAL
RED	HEATER
GREEN	HEATER

FUNCTIONAL REVISIONS:
ALL REVISIONS WITH SOLID
TRIANGLE ARE USABLE

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: 3/16" HEX WRENCH
WIRE CUTTERS
CRIMPING TOOL

MIRROR ASSEMBLIES WITH ELECTRICAL PLUG

- STEP #1 LOOSEN MIRROR HEAD SET SCREW.
- STEP #2 LIFT MIRROR HEAD FROM MOUNTING BASE/ARM AND REMOVE OLD HEAD BY DISCONNECTING PLUG, SAVE PIVOT CLAMP TO ATTACH REPLACEMENT HEAD. (SEE VIEW A-A)
- STEP #3 CONNECT REPLACEMENT MIRROR HEAD PLUG. (PLUG CAN ONLY BE CONNECTED ONE WAY) POSITION MIRROR HEAD INTO MOUNTING BASE/ARM. NOTE: ON 2030 AND 2025 MIRROR ASSEMBLIES, BE SURE TO PLACE CLAMP INTO MIRROR PIVOT POST PRIOR TO POSITIONING MIRROR PIVOT INTO BASE/ARM SEE VIEW A-A. (NOTE: NOT ALL ASSEMBLIES USE 5 WIRE CONDUCTORS.)
- STEP #4 PIVOT MIRROR HEAD INTO PROPER VIEWING POSITION AND TIGHTEN SET SCREW.

MIRROR ASSEMBLIES WITHOUT ELECTRICAL PLUG

- STEP #1 LOOSEN MIRROR HEAD SET SCREW.
- STEP #2 LIFT MIRROR HEAD FROM MOUNTING BASE/ARM AND REMOVE OLD HEAD BY CUTTING MIRROR HEAD WIRE OFF AS CLOSE TO MIRROR HEAD AS POSSIBLE. SAVE PIVOT CLAMP TO ATTACH REPLACEMENT HEAD. (SEE VIEW A-A)
- STEP #3 CUT PLUG OFF REPLACEMENT MIRROR HEAD LEAVING AS MUCH WIRE AS POSSIBLE.
- STEP #4 ON BOTH THE REPLACEMENT MIRROR HEAD AND EXISTING MOUNTING BASE/ARM CUT OUTSIDE WIRE JACKET BACK APPROXIMATELY 2-1/2" AS SHOWN. STRIP INDIVIDUAL WIRES BACK 1/4" (SEE VIEW B-B)
- STEP #5 CONNECT REPLACEMENT MIRROR HEAD WIRES TO EXISTING MOUNTING BASE/ARM WIRES USING BUTT CONNECTORS SUPPLIED WITH KIT MATCH WIRE COLORS IN REPLACEMENT MIRROR HEAD WITH WIRES IN MOUNTING BASE/ARM AS SHOWN IN VIEW B-B. PULL ON WIRE CONNECTIONS TO MAKE SURE BUTT CONNECTORS ARE CRIMPED PROPERLY.
- STEP #6 POSITION MIRROR HEAD INTO MOUNTING BASE/ARM. NOTE: ON 2030 AND 2025 MIRROR ASSEMBLIES, BE SURE TO PLACE CLAMP INTO MIRROR PIVOT POST PRIOR TO POSITIONING MIRROR PIVOT INTO BASE/ARM AS SHOWN IN VIEW A-A.
- STEP #7 PIVOT MIRROR HEAD INTO PROPER VIEWING POSITION AND TIGHTEN SET SCREW.



DRAWN BY: MS
DATE: 12-07-00

INSTALLATION INST. REPLACEMENT
CLASS "A" HEAD HEATED REMOTE
FLAT/MANUAL HEATED CONVEX

PROPRIETARY

SCALE:

DRAWING NO.

7145812

REVISIONS

PROJECT #1731
ECN #E00478

▲01 12-07-00 MS

ECN #E01095

▲1 REVISED STEP #3
WITH ELECTRIC PLUG

▲02 03-06-01 MS

THIS CONCEPT & DRAWING IS THE
PROPERTY OF VELVAC, INC. AND
SHALL NOT BE REPRODUCED,
COPIED, DISCLOSED, USED FOR THE
MANUFACTURE OR PROCUREMENT
FROM SOURCES OTHER THAN
VELVAC INC. WITHOUT WRITTEN
PERMISSION FROM VELVAC INC.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.