


UN-REGULATED OBSIDIAN SERIES PORTABLE SOLAR PANEL COMBO KITS QUICK START GUIDE

ZAMP  SOLAR[®]
➡ DOMETIC

CONTENTS

- A. 2x Unregulated OBSIDIAN Series Portable Solar Panels
- B. ATP Parallel (ITC1003) Y-Cable

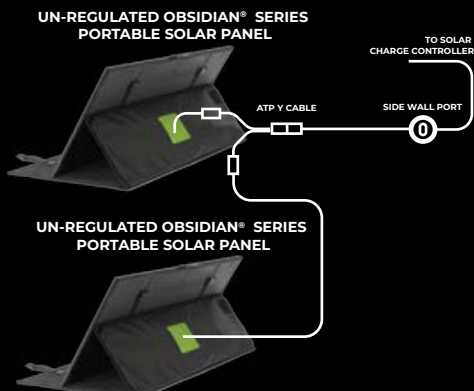

STEP 1: ENSURE THE SOLAR SIDEWALL PORT IS CONNECTED TO THE INPUT OF THE SOLAR CHARGE CONTROLLER

- If the solar sidewall port is connected to the battery, **DO NOT CONTINUE TO STEP 2.** Please see instructions at the link [HERE](#).

STEP 3: CONNECT OBSIDIAN SERIES PORTABLE SOLAR PANELS TOGETHER

1. Plug 1 portable into Y-cable.
2. Using extension cable, plug additional portable panel into Y-cable.
3. Attach 2nd extension cable from Y-cable to sidewall port.
4. Place panels in desired location.
5. Verify charge controller is now charging batteries.

**For 24v systems, use a Series Y-Cable (ITC1004)*



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.