



Figure A.

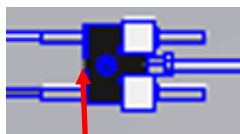

Chain Adjustment Nut

Figure B.

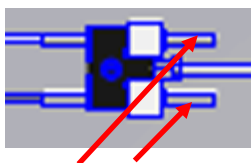

Cable Adjustment Nuts

Tools Needed:

3/8" & 7/16" Open End Wrench


(To loosen and tighten adjustment nuts)

Locking Needle-Nose Vise Grips

(to hold cable stud in place and eliminate twisting)


1. Run the room out (Extend) all the way. When working with one side, it is not necessary to place any support under the room.
2. **Figure A.** Loosen both chain nuts on the side affected, counterclockwise, until there is 2" of thread showing on both studs. If more slack is needed, loosen the Cable Adjustment nuts seen in **Figure B.**
3. Remove the chain from around the sprocket on the gearbox.
4. Reposition the chain around the sprocket of the gearbox removing the slack in the chain. This will allow more adjustment at the bracket.
5. Tighten OUT cables until the room is sealed properly in the out position. (See full Adjustment Procedure.)
6. **Figure C.** Tension the IN cables to 1/2" deflection.
7. Fully retract the room to ensure that it seals in the IN position (RETRACT).
8. **Figure D.** Tighten all jamb nuts and replace foam anti-vibration blocks.

Figure C.

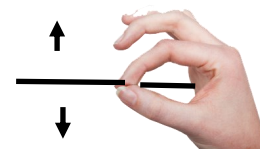


Correct Tension: Push cable up or down 1/2"

Figure D.

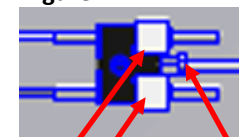

Jamb Nut
Anti-vibration blocks

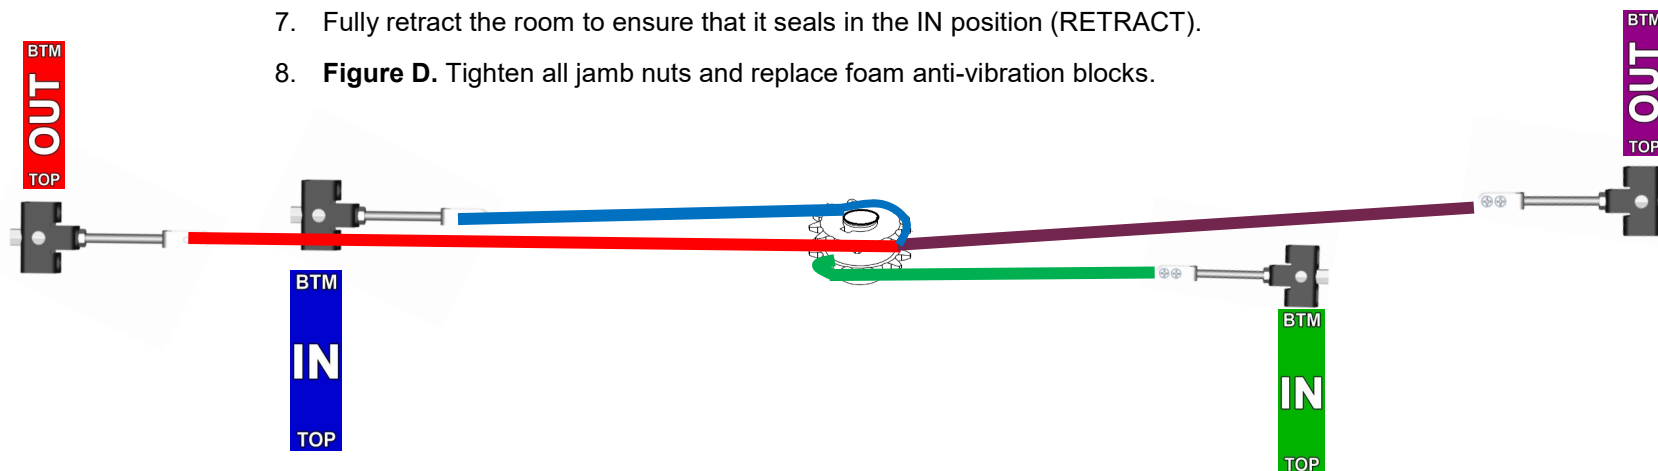



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.