

Ball & Pintle Hook Combination Safety Recall 20E-065

Inspection Instruction for Test 2 of 2 – Safety Pin Test


Revision Oct 21, 2020




1. Move your Ball & Pintle to the fully open position & install the Safety Pin. The testing may also be completed on installed Ball & Pintle units.




2. Using moderate closure force, with only the palm of your hand, rotate the Moveable Jaw in the close direction. Do not use excessive force as it may damage or bend your Safety Pin.

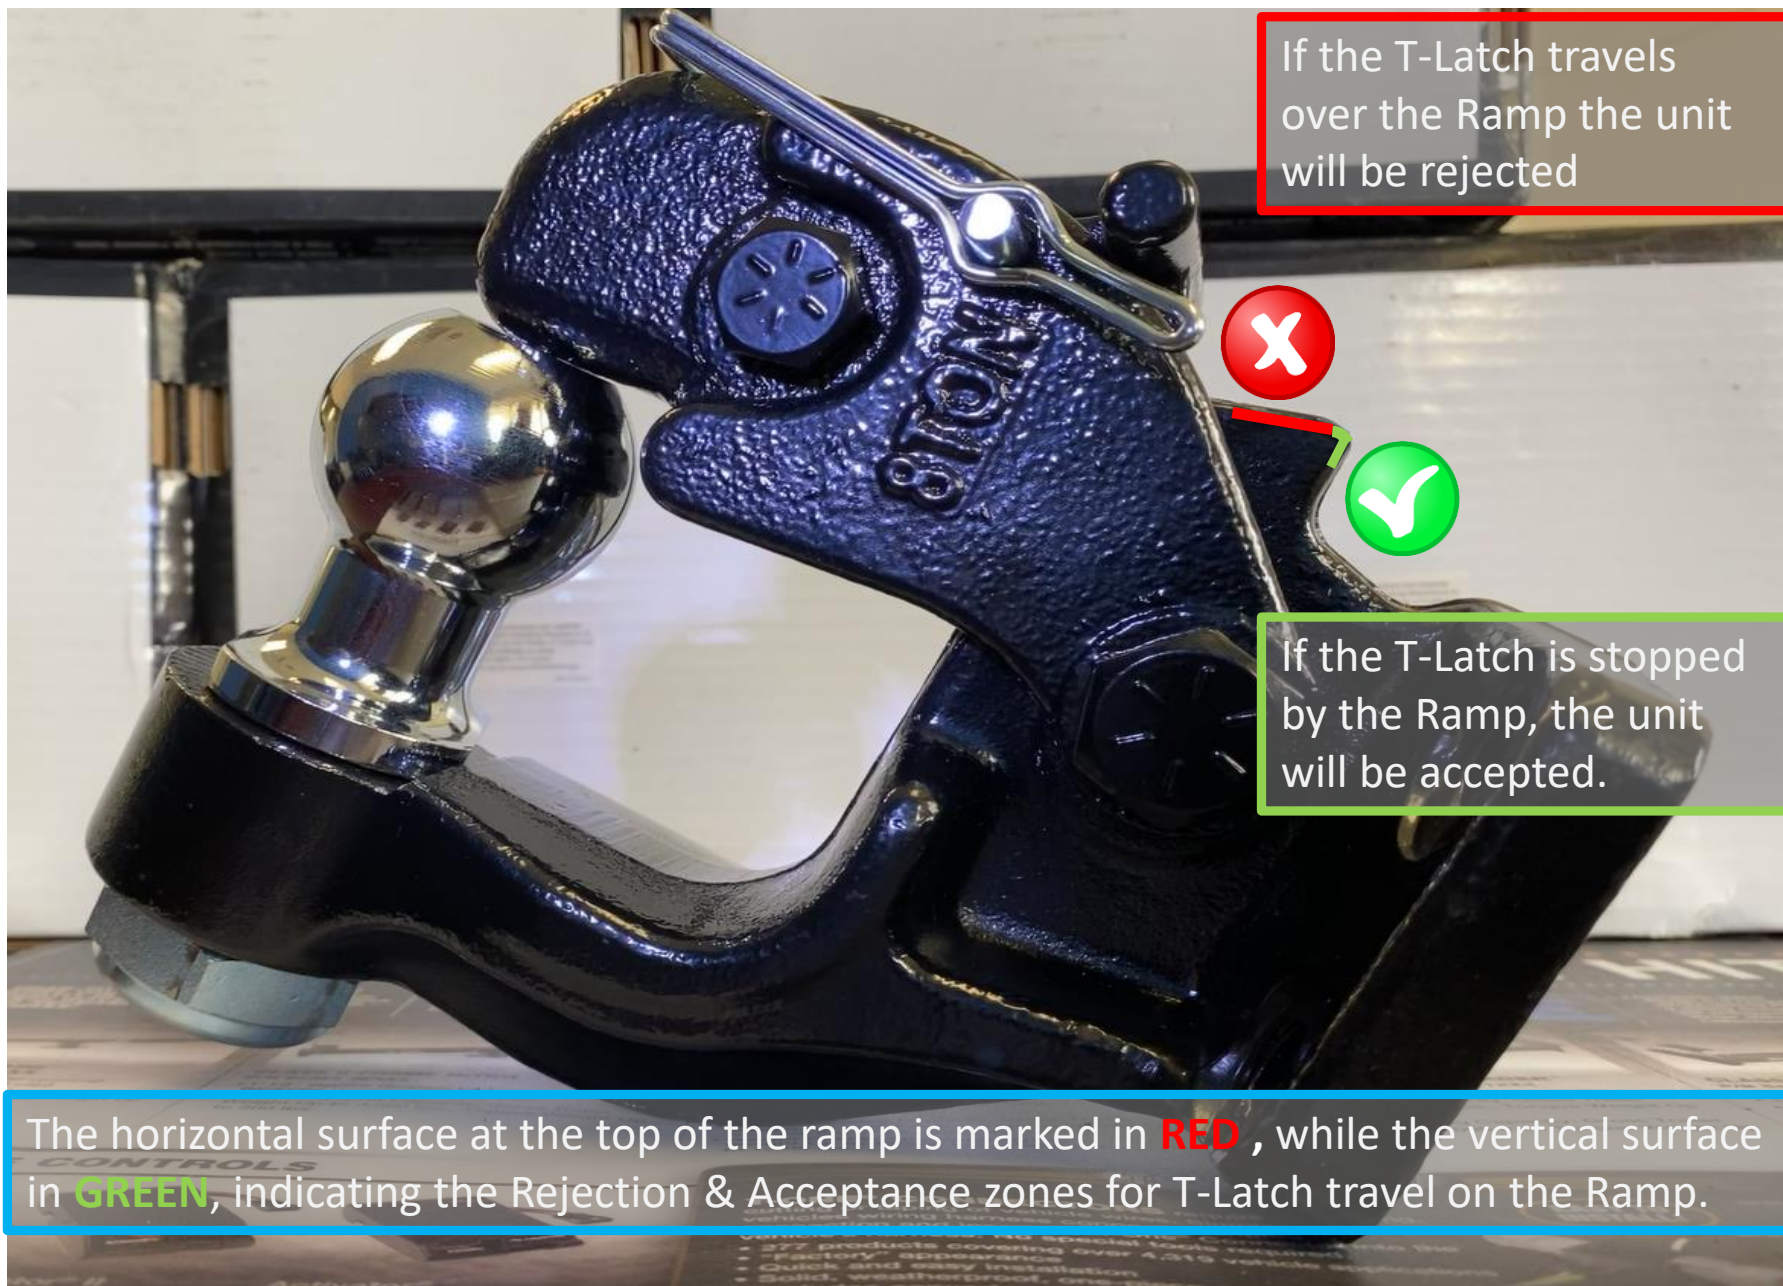


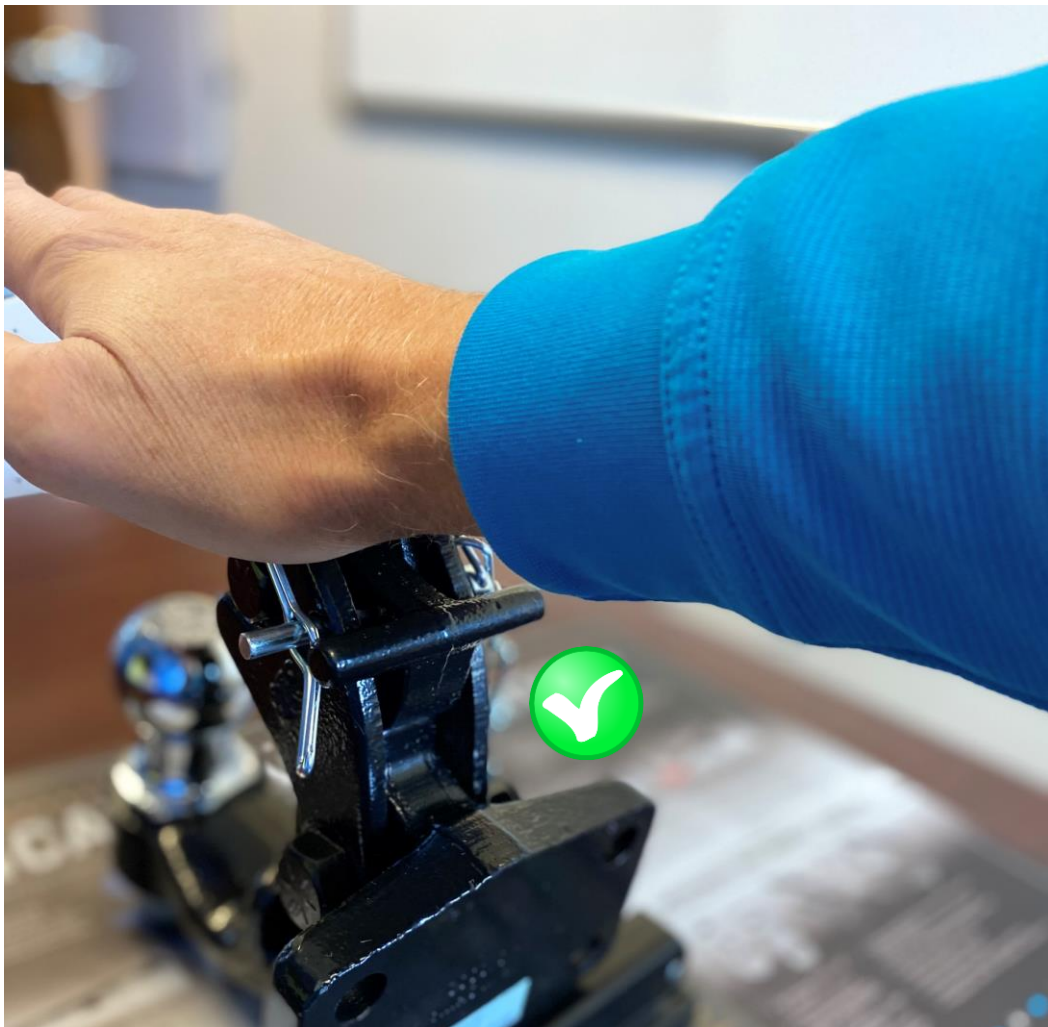


3. Check the position of your T-Latch; if it travels up, but NOT over the Ramp, the unit is not affected (is acceptable; no return is necessary). The Moveable Jaw should easily return to the fully open position. See supplemental Photo A on the next slide.

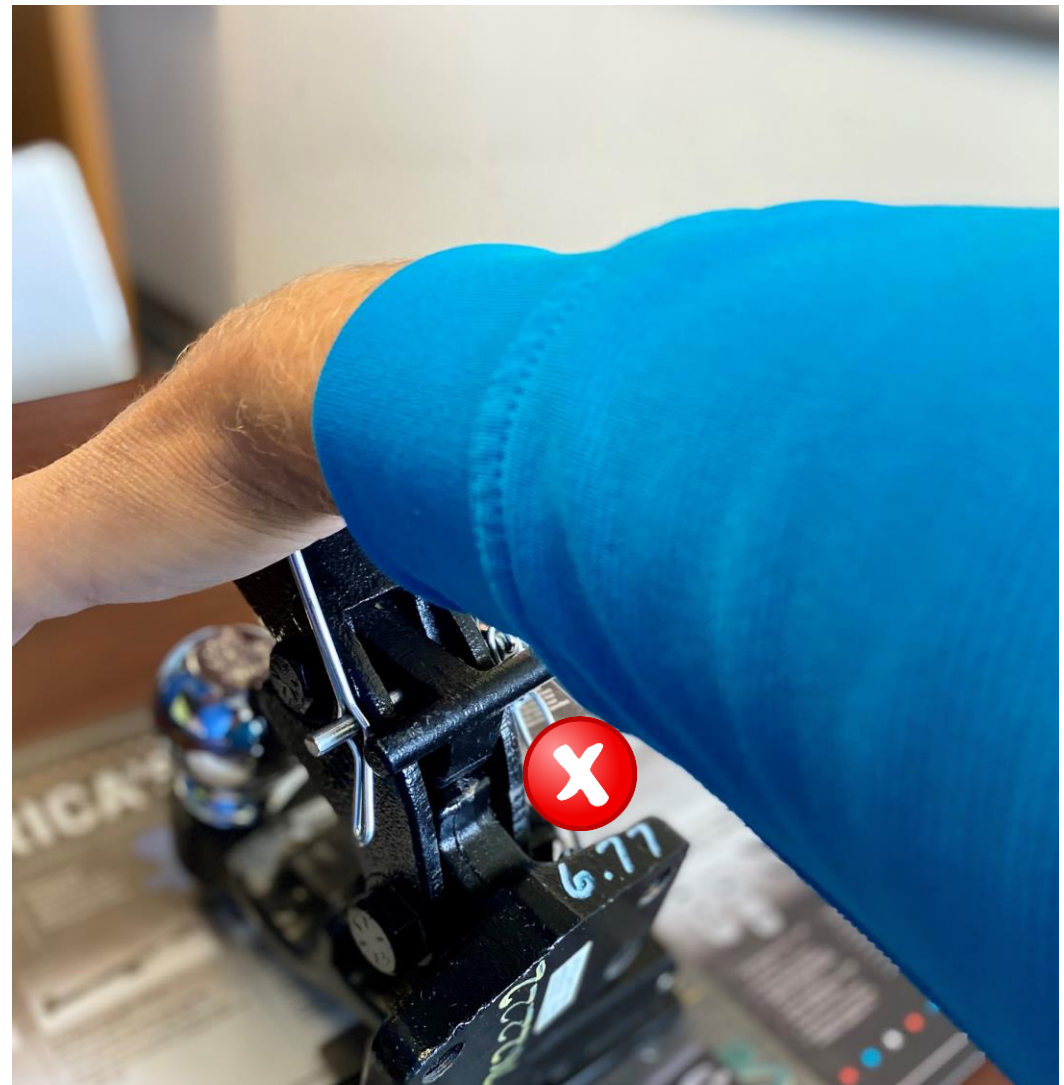

4. If the T-Latch travels up & over the Ramp, or “jams” at the top, the unit may have insufficient latch, and you should complete our Recall Registration at [Draw-Tite](#) or [Reese](#). See supplemental Photo R on the next slide.

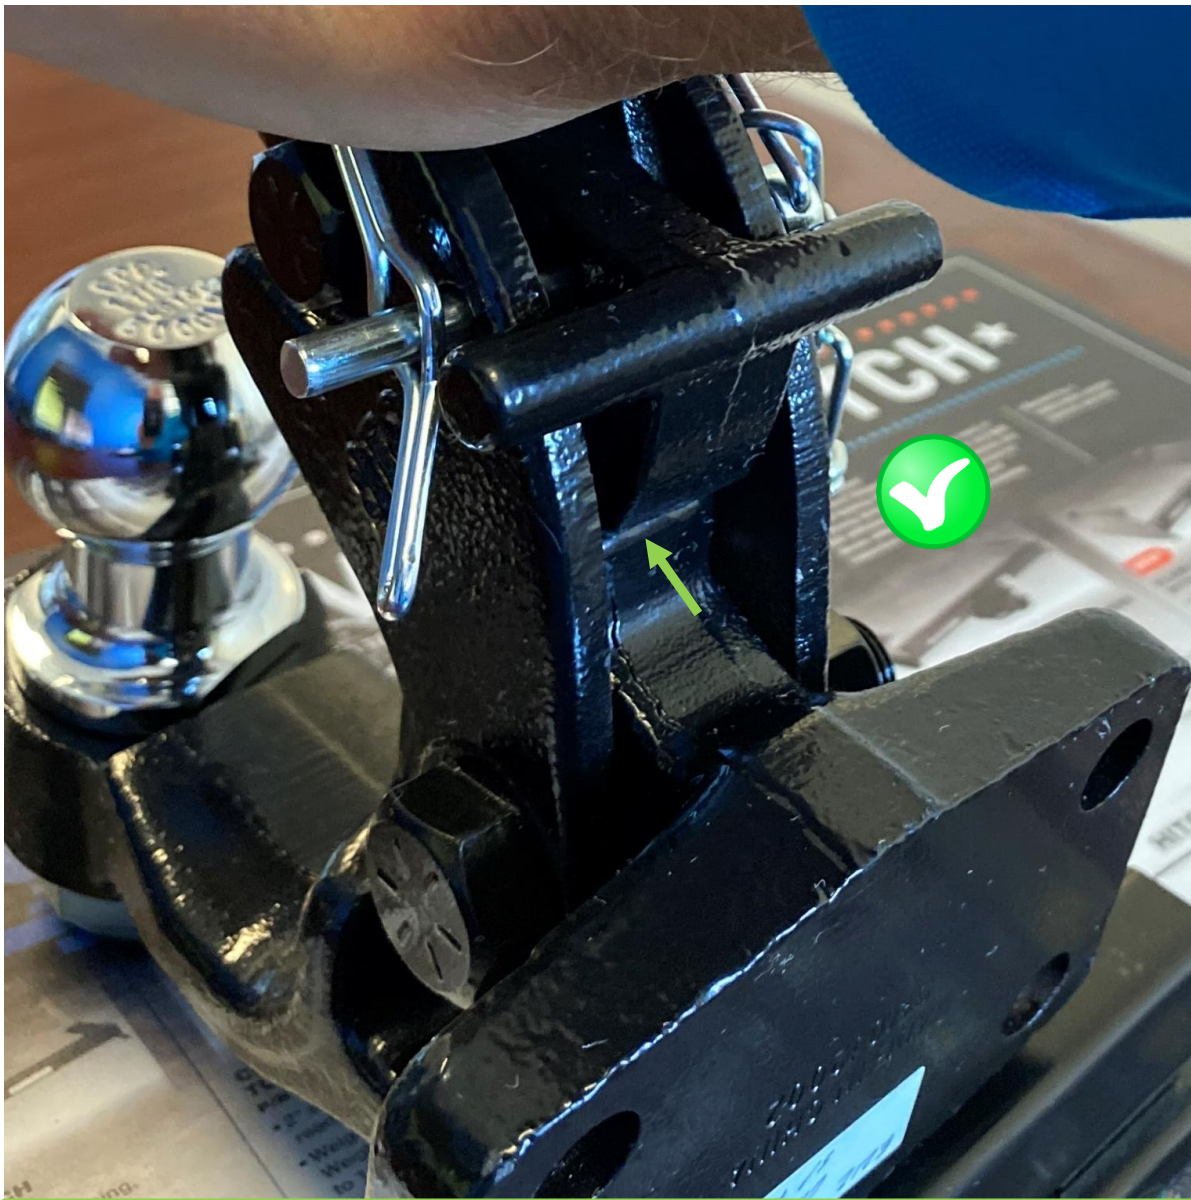

A. Supplemental photo of an Acceptable Ball & Pintle Hook Combination. Notice the position of the T-Latch has not traveled over onto the top of the Ramp.

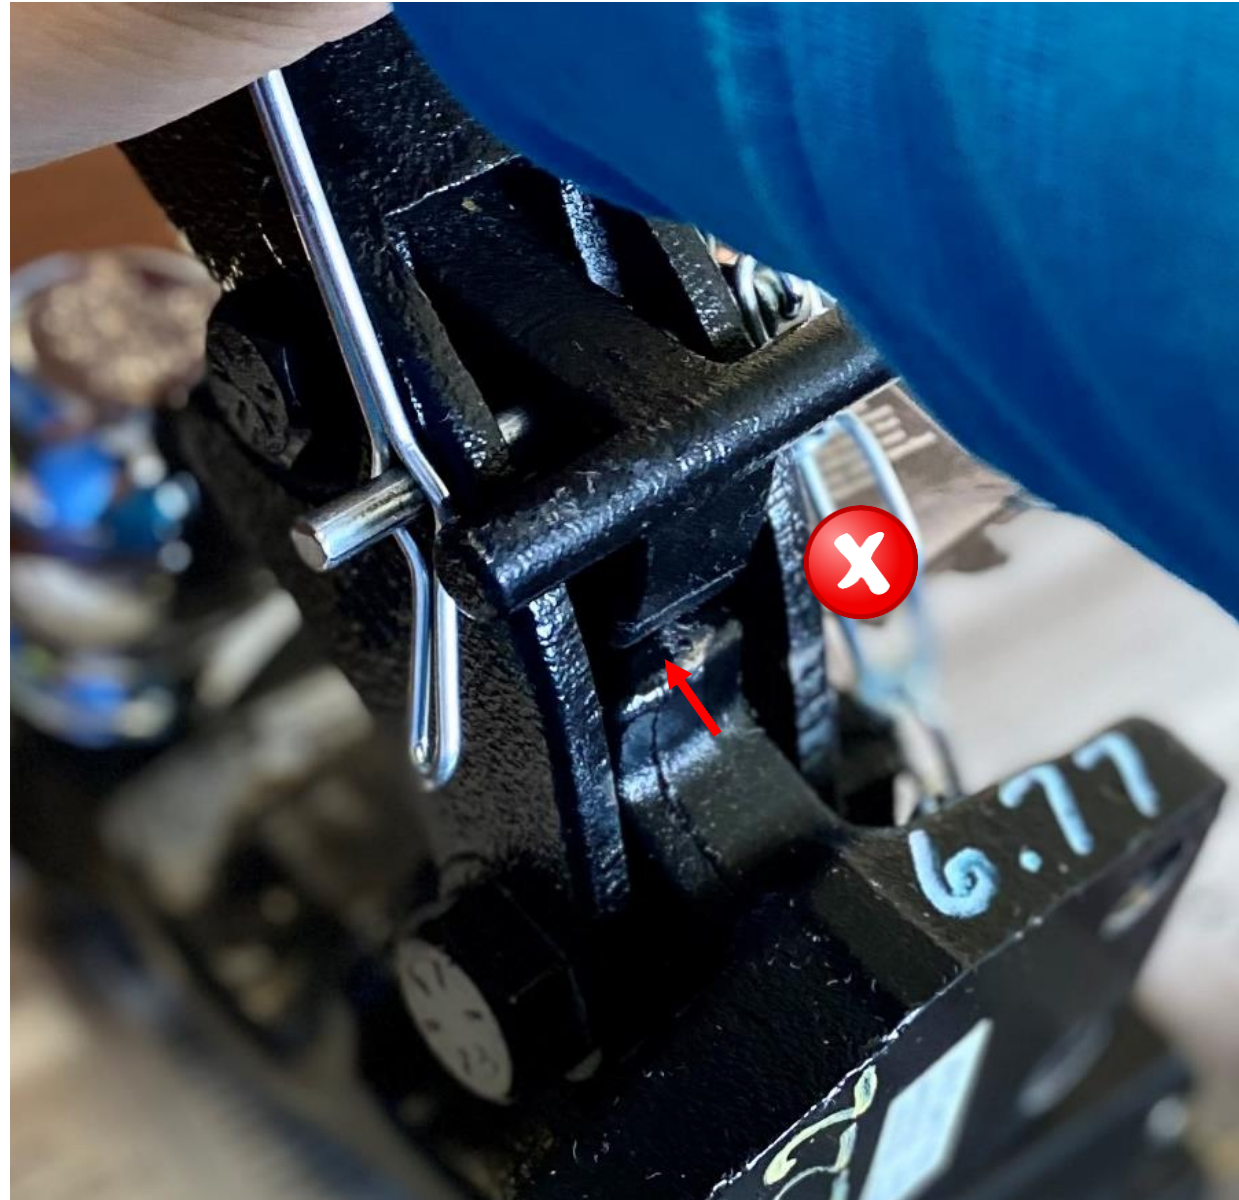

R. Supplemental photo of an Unacceptable Ball & Pintle Hook Combination. Notice the position of the T-Latch has traveled over onto the top of the Ramp.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.