

FURRION

Quick Start Guide

Guide de démarrage rapide / Guía de inicio rápido

Range Cooktop

Surface de cuisson / Anafe de cocina

Model/Modèle/Modelo: FGH4ZSA-SS, FGH4ZSA-SB



* Picture shown here is for reference only.


Thank you for purchasing this Furrion® product. Before operating your new appliance, please read the Quick Start Guide carefully. Click the website: www.furrion.com.cn to get more detail about Instruction Manual.

What's in the Box

Make sure you have all the items in the packaging as listed below. For missing item(s), contact your dealer.

- Single stainless steel gas cooker unit
- Flexible gas supply hose with a $\frac{3}{8}$ " female flare fitting with a $\frac{5}{8}$ " - 18UNF thread connection
- Butyl Tape
- 1 AA Battery
- Quick Start Guide
- Warranty Leaflet

Product Overview

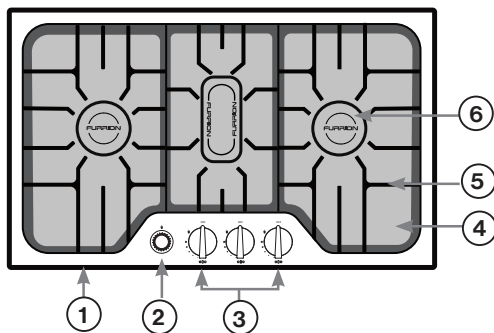


Item	Description
①	Product Rating Plate (bottom of cooktop)
②	Ignite Button
③	Control Knob
④	Burner Pan
⑤	Burner Grate
⑥	Surface Burner (large)

Installation

Cabinet Cutout Instructions

⚠ WARNING


The minimum vertical distance to combustible material above the range cooking top is 30" (762mm), provided the overhead construction does not extend 13" (330 mm) from the rear wall.

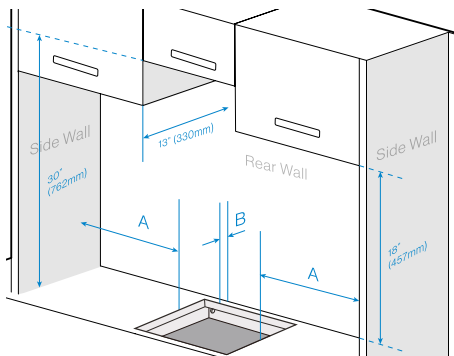

Item	Dimension
A	2" Min. (51mm Min.)
B	2" Min. (51mm Min.)

NOTE: These distances shall be from the cutout of the countertop.

Cabinet and counter cutout chart:

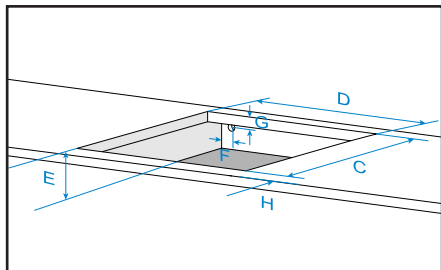

Item	Dimension
C	14 $\frac{3}{8}$ " (365mm)
D	23 $\frac{1}{2}$ " (597mm)
E	4" (102mm)
F	1 $\frac{5}{16}$ " (50mm)
G	3 $\frac{15}{16}$ " (100mm)
H	3 $\frac{3}{8}$ " (85mm)

Gas Connection (Fig. 1)

- This cooktop can be used with Propane Gas only.
- This cooktop is fitted with a gas supply hose with a $\frac{3}{8}$ " female flare fitting with a $\frac{5}{8}$ " - 18UNF thread connection. For installation use copper pipe and CSA or UL certified connectors which conform to USA and Canadian safety standards.
- Ensure when cooktop is installed the flexible gas supply hose cannot touch any moving parts.
- Make sure adequate space is available so the supply pipe will not be bent or damaged after installation.

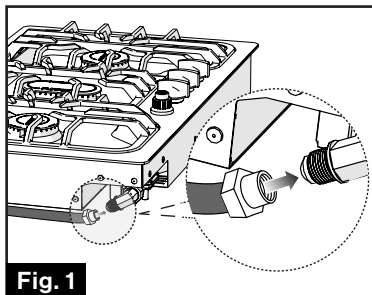


Fig. 1

Installing the Cooktop

WARNING

Gas supply pipe must be installed with clearance from knives contacting or cutting gas lines.

IMPORTANT: Before finally fixing the cooktop into the cabinet, ensure there is a ventilation hole for air circulation around the cooktop in the cabinet. The location of the ventilation hole can be located at the rear, sides or bottom of the cabinet. The minimum diameter is 2" (50mm).

The clearance between the cooktop bottom to the combustible materials is no less than 1" (25.4mm). Ensure the countertop, surrounding materials and bonding agents have a temperature rating of no less than 193°F (95°C) to avoid deformation or discoloration.

1. Affix the roll of butyl tape (included in the cooktop packaging) around the underside edge of the cooktop. Remove the butyl tape protective film. (Fig. 2)
2. Connect a propane supply line with a $\frac{3}{8}$ " Flare Female connection to the cooktop in the upper left rear corner of the cabinet. Tighten the gas line joint to the cooktop using 2 wrenches.

NOTE: Make sure the gas supply pipe cannot contact any moving parts after installed. Be sure all openings in the cabinet around the gas line are sealed at time of installation.

3. Place the cooktop into the cutout and verify that the cooktop is level from side to side and front to rear. Press on the cooktop edges to seal. (Fig. 3)

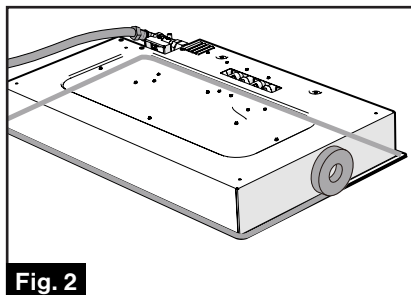


Fig. 2


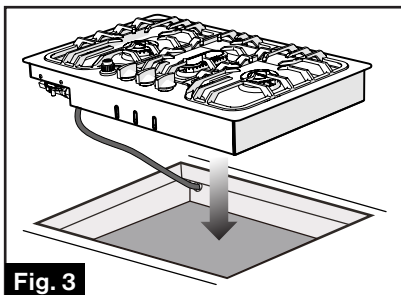


Fig. 3

Operation

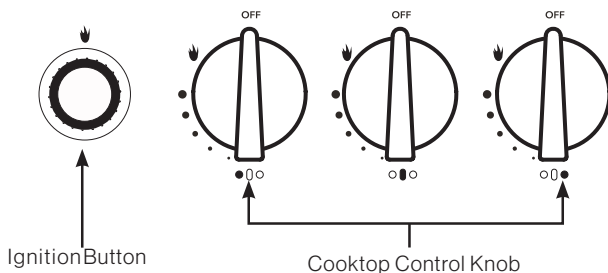

Lighting the Cooktop

Before Ensure all the cooktop knobs are turned to **OFF** position. Check the gas supply valve at the gas tank is in **OPEN** position.

Standard Ignition:

1. Push and turn the desired cooktop knob counterclockwise to 🔥 position.
2. Keep the cooktop control knob being pushed in and press the ignition button repeatedly until the burner is lit.
3. Keep the cooktop knob being pushed in for 10-15 seconds until the flame steady to disable the safety cut off.
4. Turn the control knob clockwise or counterclockwise to the desired heat level. For simmer function, turn the control knob to the lowest setting.
5. Repeat steps 1 to 4 to light the other burner(s).

NOTES:

- This cooktop is fitted with a burner safety cut off, if a flame is not present, the gas supply will shut off automatically.
- If no spark is present when pressing the igniter, check or replace the AA battery by unscrewing the igniter cover. Never attempt to operate the appliance with battery power exhausted.

Turning Off the Cooktop

⚠ WARNING

Always turn off the gas tank valve when refueling or traveling.

To turn the cooktop burners off, rotate the control knobs clockwise to the **OFF** position.


Thank you for purchasing this Furrion® product. Before operating your new appliance, please read the Quick Start Guide carefully. Click the website: www.furrion.com.cn to get more detail about Instruction Manual.

What's in the Box

Make sure you have all the items in the packaging as listed below. For missing item(s), contact your dealer.

- Single stainless steel gas cooker unit
- Flexible gas supply hose with a 3/8" female flare fitting with a 5/8"-18UNF thread connection
- Butyl Tape
- 1 AA Battery
- Quick Start Guide
- Warranty Leaflet

Product Overview

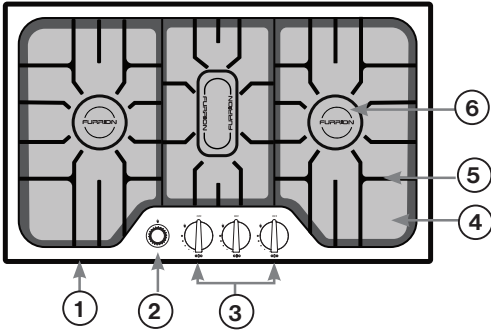


Item	Description
①	Product Rating Plate (bottom of cooktop)
②	Ignite Button
③	Control Knob
④	Burner Pan
⑤	Burner Grate
⑥	Surface Burner (large)

Installation

Cabinet Cutout Instructions

**WARNING**


The minimum vertical distance to combustible material above the range cooking top is 30" (762mm), provided the overhead construction does not extend 13" (330 mm) from the rear wall.

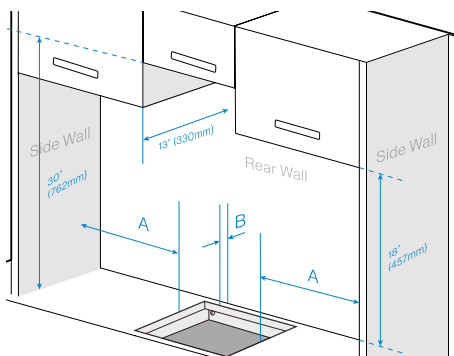

Item	Dimension
A	2" Min. (51mm Min.)
B	2" Min. (51mm Min.)

NOTE: These distances shall be from the cutout of the countertop.

Cabinet and counter cutout chart:

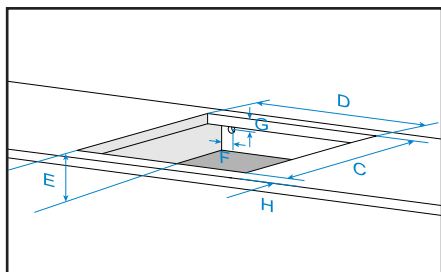

Item	Dimension
C	14 3/8" (365mm)
D	23 1/2" (597mm)
E	4" (102mm)
F	1 5/16" (50mm)
G	3 15/16" (100mm)
H	3 3/8" (85mm)

Gas Connection (Fig. 1)

- This cooktop can be used with Propane Gas only.
- This cooktop is fitted with a gas supply hose with a $\frac{3}{8}$ " female flare fitting with a $\frac{5}{8}$ " - 18UNF thread connection. For installation use copper pipe and CSA or UL certified connectors which conform to USA and Canadian safety standards.
- Ensure when cooktop is installed the flexible gas supply hose cannot touch any moving parts.
- Make sure adequate space is available so the supply pipe will not be bent or damaged after installation.

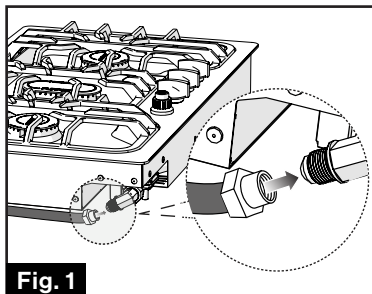


Fig. 1

Installing the Cooktop

WARNING

Gas supply pipe must be installed with clearance from knives contacting or cutting gas lines.

IMPORTANT: Before finally fixing the cooktop into the cabinet, ensure there is a ventilation hole for air circulation around the cooktop in the cabinet. The location of the ventilation hole can be located at the rear, sides or bottom of the cabinet. The minimum diameter is 2" (50mm).

The clearance between the cooktop bottom to the combustible materials is no less than 1" (25.4mm). Ensure the countertop, surrounding materials and bonding agents have a temperature rating of no less than 193°F (95°C) to avoid deformation or discoloration.

1. Affix the roll of butyl tape (included in the cooktop packaging) around the underside edge of the cooktop. Remove the butyl tape protective film. (Fig. 2)
2. Connect a propane supply line with a $\frac{3}{8}$ " Flare Female connection to the cooktop in the upper left rear corner of the cabinet. Tighten the gas line joint to the cooktop using 2 wrenches.

NOTE: Make sure the gas supply pipe cannot contact any moving parts after installed. Be sure all openings in the cabinet around the gas line are sealed at time of installation.

3. Place the cooktop into the cutout and verify that the cooktop is level from side to side and front to rear. Press on the cooktop edges to seal. (Fig. 3)

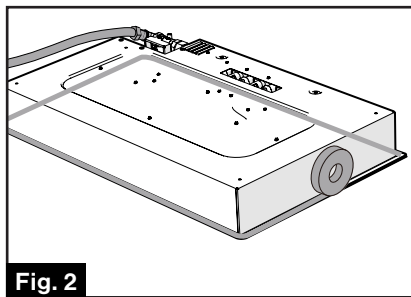


Fig. 2


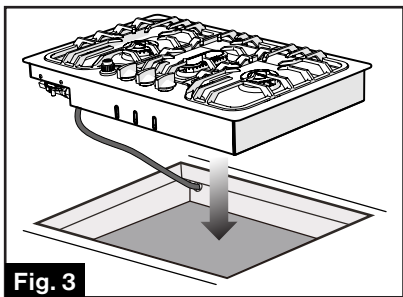


Fig. 3

Operation

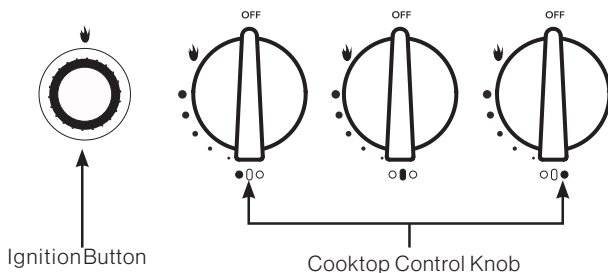

Lighting the Cooktop

Before Ensure all the cooktop knobs are turned to **OFF** position. Check the gas supply valve at the gas tank is in **OPEN** position.

Standard Ignition:

1. Push and turn the desired cooktop knob counterclockwise to 🔥 position.
2. Keep the cooktop control knob being pushed in and press the ignition button repeatedly until the burner is lit.
3. Keep the cooktop knob being pushed in for 10-15 seconds until the flame steady to disable the safety cut off.
4. Turn the control knob clockwise or counterclockwise to the desired heat level. For simmer function, turn the control knob to the lowest setting.
5. Repeat steps 1 to 4 to light the other burner(s).

NOTES:

- This cooktop is fitted with a burner safety cut off, if a flame is not present, the gas supply will shut off automatically.
- If no spark is present when pressing the igniter, check or replace the AA battery by unscrewing the igniter cover. Never attempt to operate the appliance with battery power exhausted.

Turning Off the Cooktop

⚠ WARNING

Always turn off the gas tank valve when refueling or traveling.

To turn the cooktop burners off, rotate the control knobs clockwise to the **OFF** position.


Thank you for purchasing this Furrion® product. Before operating your new appliance, please read the Quick Start Guide carefully. Click the website: www.furrion.com.cn to get more detail about Instruction Manual.

What's in the Box

Make sure you have all the items in the packaging as listed below. For missing item(s), contact your dealer.

- Single stainless steel gas cooker unit
- Flexible gas supply hose with a $\frac{3}{8}$ " female flare fitting with a $\frac{5}{8}$ " - 18UNF thread connection
- Butyl Tape
- 1 AA Battery
- Quick Start Guide
- Warranty Leaflet

Product Overview

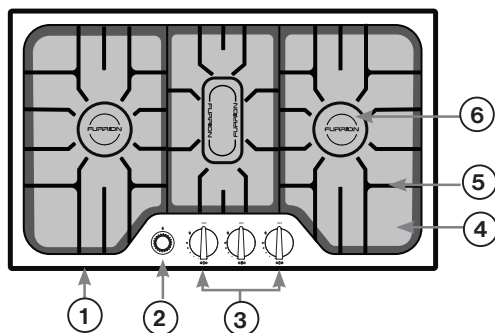


Item	Description
①	Product Rating Plate (bottom of cooktop)
②	Ignite Button
③	Control Knob
④	Burner Pan
⑤	Burner Grate
⑥	Surface Burner (large)

Installation

Cabinet Cutout Instructions

⚠ WARNING


The minimum vertical distance to combustible material above the range cooking top is 30" (762mm), provided the overhead construction does not extend 13" (330 mm) from the rear wall.

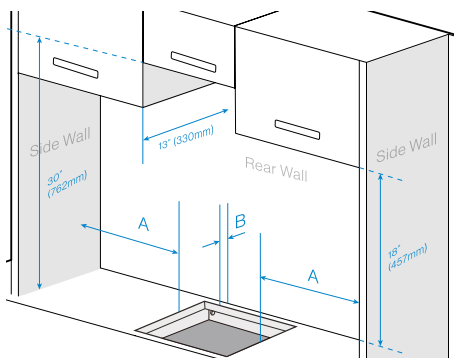

Item	Dimension
A	2" Min. (51mm Min.)
B	2" Min. (51mm Min.)

NOTE: These distances shall be from the cutout of the countertop.

Cabinet and counter cutout chart:

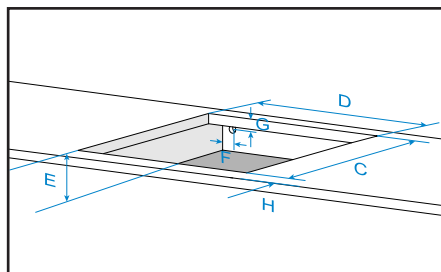

Item	Dimension
C	14 $\frac{3}{8}$ " (365mm)
D	23 $\frac{1}{2}$ " (597mm)
E	4" (102mm)
F	1 $\frac{5}{16}$ " (50mm)
G	3 $\frac{15}{16}$ " (100mm)
H	3 $\frac{3}{8}$ " (85mm)

Gas Connection (Fig. 1)

- This cooktop can be used with Propane Gas only.
- This cooktop is fitted with a gas supply hose with a $\frac{3}{8}$ " female flare fitting with a $\frac{5}{8}$ " - 18UNF thread connection. For installation use copper pipe and CSA or UL certified connectors which conform to USA and Canadian safety standards.
- Ensure when cooktop is installed the flexible gas supply hose cannot touch any moving parts.
- Make sure adequate space is available so the supply pipe will not be bent or damaged after installation.

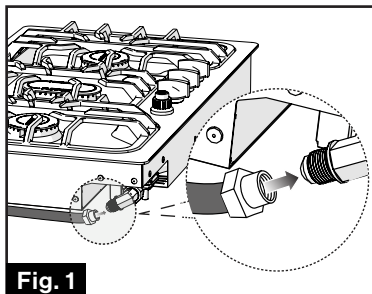


Fig. 1

Installing the Cooktop

WARNING

Gas supply pipe must be installed with clearance from knives contacting or cutting gas lines.

IMPORTANT: Before finally fixing the cooktop into the cabinet, ensure there is a ventilation hole for air circulation around the cooktop in the cabinet. The location of the ventilation hole can be located at the rear, sides or bottom of the cabinet. The minimum diameter is 2" (50mm).

The clearance between the cooktop bottom to the combustible materials is no less than 1" (25.4mm). Ensure the countertop, surrounding materials and bonding agents have a temperature rating of no less than 193°F (95°C) to avoid deformation or discoloration.

1. Affix the roll of butyl tape (included in the cooktop packaging) around the underside edge of the cooktop. Remove the butyl tape protective film. (Fig. 2)
2. Connect a propane supply line with a $\frac{3}{8}$ " Flare Female connection to the cooktop in the upper left rear corner of the cabinet. Tighten the gas line joint to the cooktop using 2 wrenches.

NOTE: Make sure the gas supply pipe cannot contact any moving parts after installed. Be sure all openings in the cabinet around the gas line are sealed at time of installation.

3. Place the cooktop into the cutout and verify that the cooktop is level from side to side and front to rear. Press on the cooktop edges to seal. (Fig. 3)

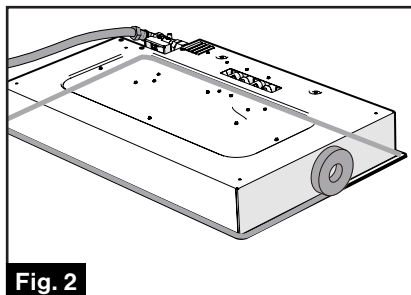


Fig. 2


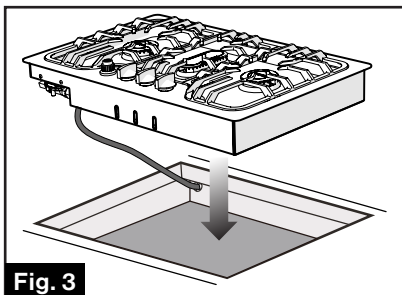


Fig. 3

Operation

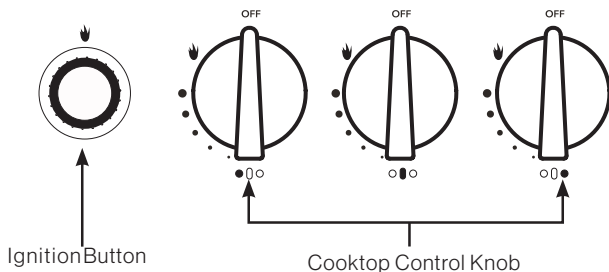

Lighting the Cooktop

Before Ensure all the cooktop knobs are turned to **OFF** position. Check the gas supply valve at the gas tank is in **OPEN** position.

Standard Ignition:

1. Push and turn the desired cooktop knob counterclockwise to 🔥 position.
2. Keep the cooktop control knob being pushed in and press the ignition button repeatedly until the burner is lit.
3. Keep the cooktop knob being pushed in for 10-15 seconds until the flame steady to disable the safety cut off.
4. Turn the control knob clockwise or counterclockwise to the desired heat level. For simmer function, turn the control knob to the lowest setting.
5. Repeat steps 1 to 4 to light the other burner(s).

NOTES:

- This cooktop is fitted with a burner safety cut off, if a flame is not present, the gas supply will shut off automatically.
- If no spark is present when pressing the igniter, check or replace the AA battery by unscrewing the igniter cover. Never attempt to operate the appliance with battery power exhausted.

Turning Off the Cooktop

⚠ WARNING

Always turn off the gas tank valve when refueling or traveling.

To turn the cooktop burners off, rotate the control knobs clockwise to the **OFF** position.



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent for an authorized Lippert representation has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert
PhL 432-LIPPert (432-547-7378) | Web: lippert.com | E-mail:
customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.