




30" POWER STEP WIRING DIAGRAM

Specifications & Operation

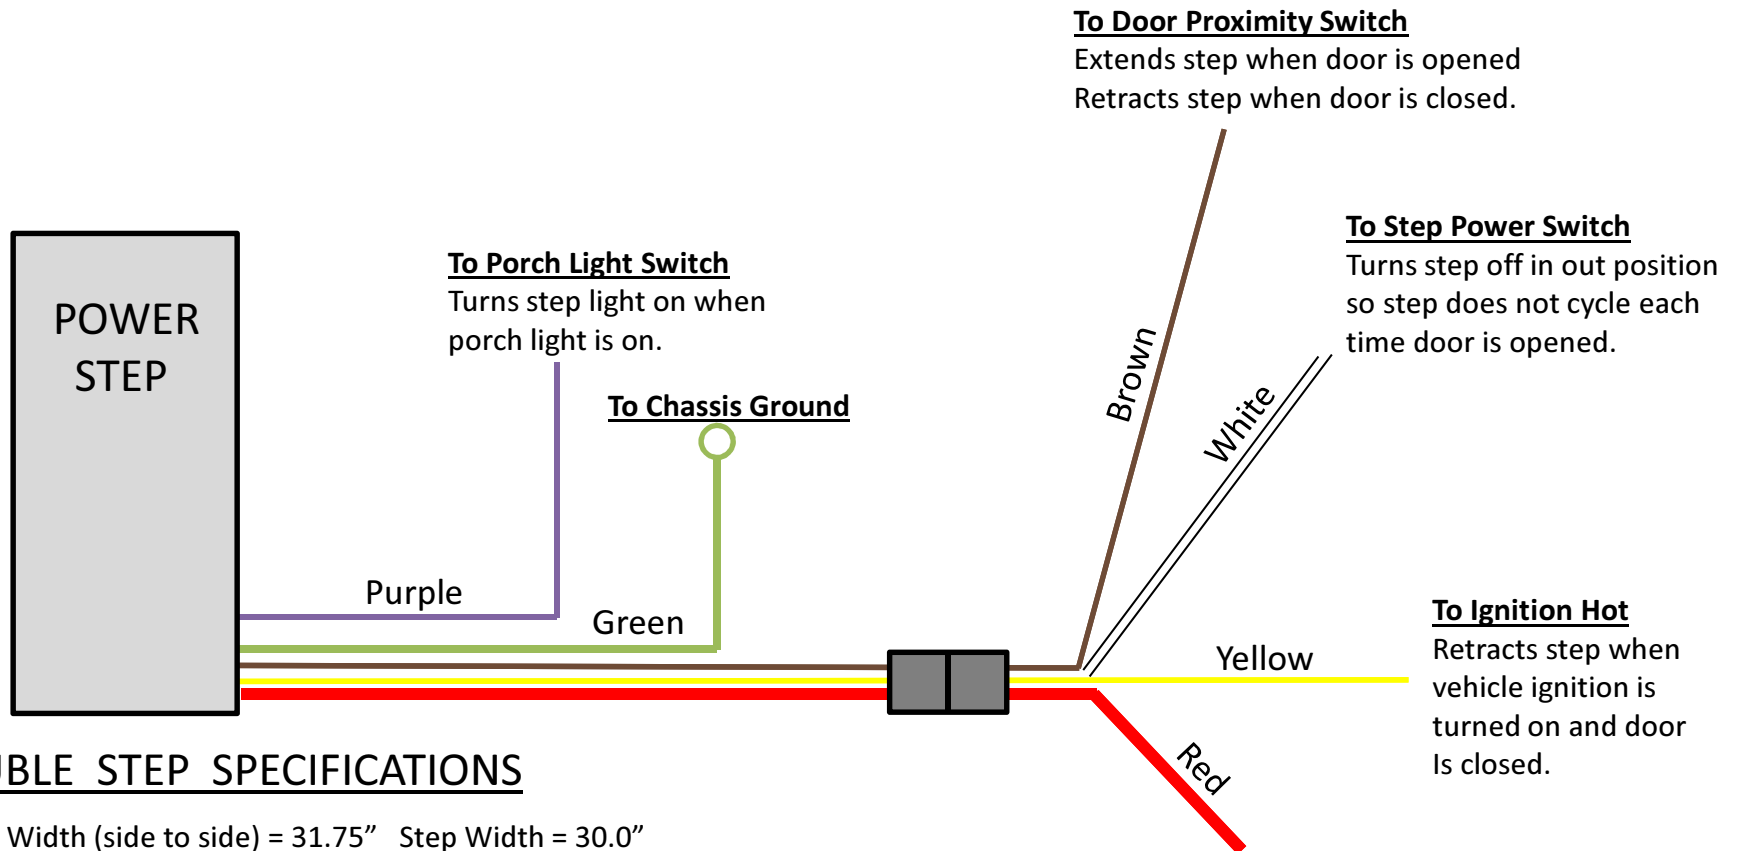

DOUBLE STEP SPECIFICATIONS

Total Width (side to side) = 31.75" Step Width = 30.0"
 Depth (front to back) Retracted = 18" Extended = 32"
 Height (top to bottom) Retracted = 7.75" Extended = 14.5"
 Step Rise = 8.5"
 Step Width = 8.5"
 Complete Assembly Weight = 54 lbs.
 Finishes = Black Satin Texture Powder (Black parts)
 Clear Zinc (Silver Parts)
 Clear Anodized Aluminum (Step plates)

To 12 VDC

Power Supply To Step.

Operating Current Draw.

2.5 – 3.0 Amps Extending

2.8 – 3.5 Amps Retracting

6-8 Amp spike current on start up.

11-12 Amp spike current on shut off.



POWER STEP OPERATION

Overview: There are four operational inputs to the step controller consisting of a door proximity switch input, a hold/cycle step input, a porch light input, and an ignition on input. Outputs are bi-directional motor drive current and 12 VDC brake release.

DOOR PROXIMITY SWITCH: Each time the door is opened, this input (wired to a step proximity switch) extends the step.
(Brown wire) When the door is closed, the step retracts.

HOLD/CYCLE INPUT: This is wired to a switch which is in turn wired to 12 VDC . When the switch is Closed (Cycle), the
(White wire) Step extends and retracts each time the door is open or closed. When moved to the Open (Hold) position, the step will remain extended until the switch is once again closed, or the ignition switch is turned on with the door closed.

PORCH LIGHT: This input can be wired to a porch light switch. Any time the porch light is on, the step light will remain on.
(Purple wire)

IGNITION ON: This input is wired to the vehicle ignition system such that when the ignition is turned on, and the vehicle
(Yellow wire) door is closed, the step (if extended) will retract, regardless of the position of the Hold/Cycle Switch.

SAFETY SHUT OFF: The step shuts off at the end of an extension or retraction cycle by sensing the spike in motor current. Such a spike will also occur and the motor will shut off if the step encounters an obstruction (rock, tree, person, etc.). The step can be retracted and the obstruction cleared.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.