
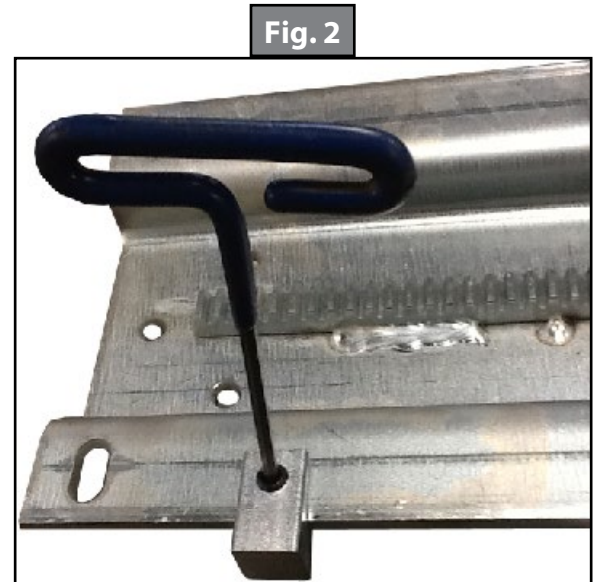


SLIDE-OUTS

Lippert's Above Floor Slide-Out Systems are available in many different configurations and applications with varying height, travel, steel or aluminum and single and double arm. Access to these mechanisms is generally from inside the coach, under the floor of the slide-out. If the fully extended or fully retracted travel of the slide-out appears to be putting pressure on the interior trim or exterior flange, stops may be missing from the mechanism and should be installed to prevent damage to the coach and slide system components.

Hard stops are added to Above Floor Slide Systems in the form of stop block assemblies (Fig. 1).

The stop block assemblies are provided as a clamp-on stop, giving the slide-out the hard stops it needs to end the extend and retract travel of the slide out mechanism. The assemblies are comprised of the aluminum block notched to fit over the ear of the slide-out hat channel or arm and the set screw.

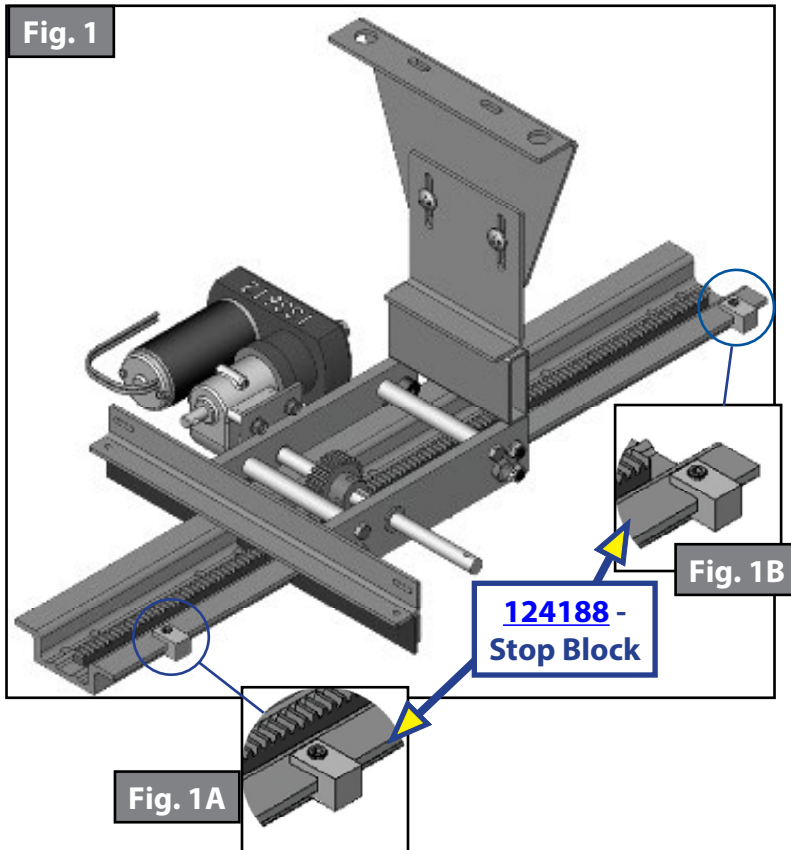

The stop block is placed on the ear of the hat channel or arm at the extend and retract points of the slide-out. The stops are set when slide-out seal is made making the slide-out weather-tight. The set screw is then tightened with a hex head wrench (Fig. 2) in order to provide the above floor slide with hard stops. Without the hard stops, the interior trim and the outside slide flange become soft stops and can be damaged as the slide controller or motor clutch will not be able to shut the system off. The hard stop will allow the motor to clutch or the control box to sense the amperage spike when the slide motor is stopped. The stops shut down the slide-out system protecting the drive shaft, shaft bolt and the crown gear.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.