

KITCHEN AND BATH

Purpose

This document outlines the procedure of replacing the cartridge in the Flow Max Faucets.

Safety

WARNING

The “WARNING” symbol above is a sign that a procedure has a safety risk involved and may cause death or serious personal injury if not performed safely and within the parameters set forth in this manual. Always wear eye protection when performing this installation procedure. Other safety equipment to consider would be hearing protection, gloves, and possibly a full face shield, depending on the nature of the installation procedure.

CAUTION

The “CAUTION” symbol above is a sign that a safety risk is involved and may cause personal injury and/or product or property damage if not safely adhered to and within the parameters set forth in this manual.

CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

Required Resources



- 2.5 mm hex wrenches
- Needle nose pliers
- Adjustable wrench
- Safety glasses

Prior to Replacement

1. Shut off the hot and cold water outlet supply valves for the existing faucet, typically located below the sink.
2. Relieve any pressure from the existing faucet by turning the existing faucet on and off.

FLOW MAX™ FAUCET CARTRIDGE REPLACEMENT

KITCHEN AND BATH

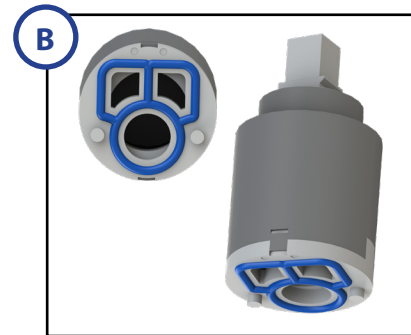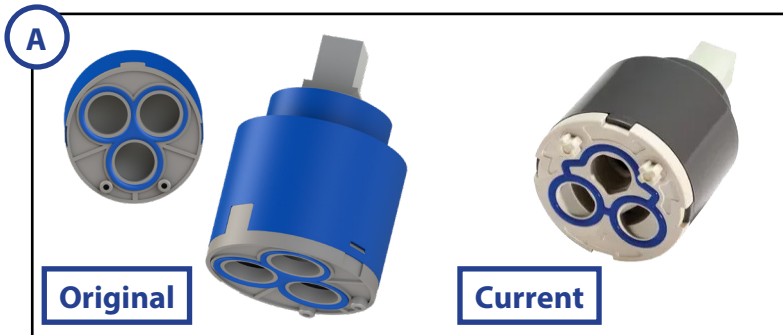

Call Out	Part #	Description
A	2021025928	Cartridge A (Shown are Original and Current Cartridge)
B	2021025929	Cartridge B



Call Out	Part #	Description	Cartridge Used
A	692179	Luminary Lavatory Faucet	A
B	808232	Black Matte Kitchen Pull Down Faucet	B
C	808235	SS Kitchen Pull Down Faucet	B
D	787509	Black Kitchen Faucet	A
E	719324	Curved Gooseneck Fixed Installation	A
F	719325	Squared Gooseneck Fixed Installation	A
G	719333	Bullet Pull Down Installation	A
H	719323	Coiled Spring Sprayer Faucet	A
I	729395	Swan Pull Down Faucet	A
J	696320	Black Hose Kitchen Faucet	A
K	729396	Waterfall Bathroom Faucet	A

Replacement

1. Locate the set screw on the faucet model. Depending on faucet model the set screw is located in three different locations.
 - A. Under the lever handle (Fig. 1): Remove lever handle by turning clockwise to access set screw.
 - B. Under the rubber plug on the faucet handle (Fig. 2): Remove rubber plug to access set screw.
 - C. Under the faucet handle (Fig. 3): Turn faucet to "ON" position to access set screw.

Fig. 1


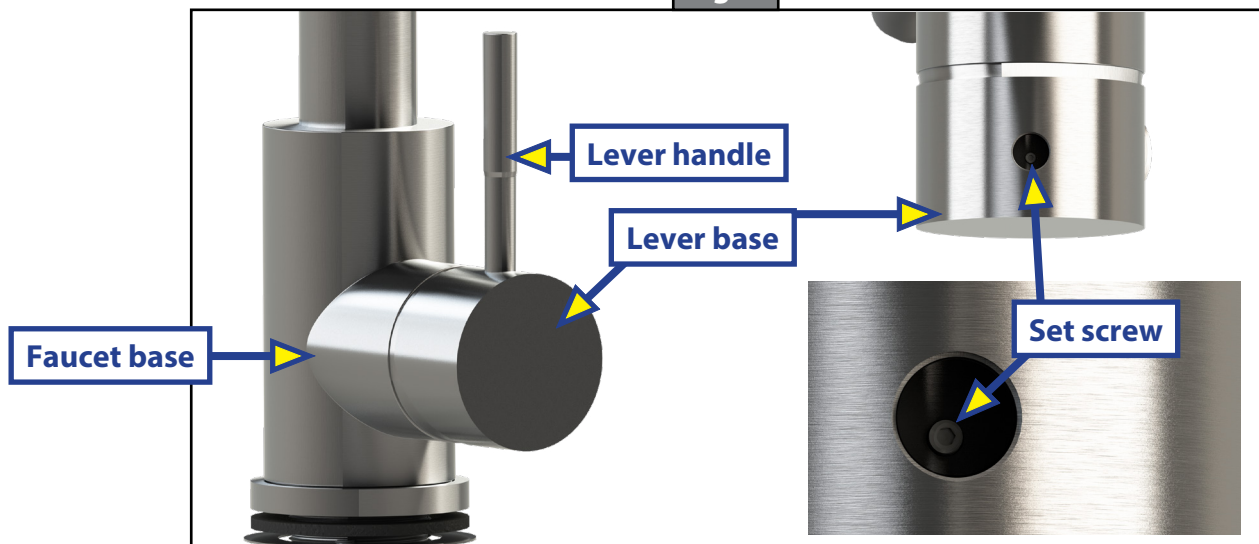


Fig. 2



Fig. 3

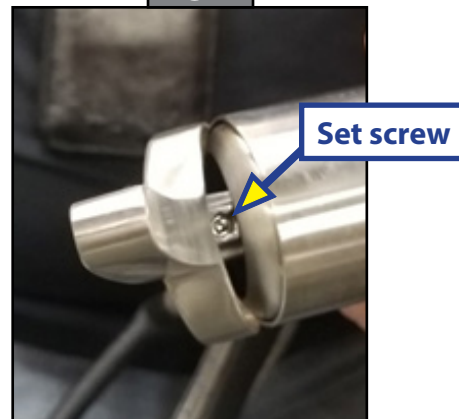

KITCHEN AND BATH

2. Using the 2.5 mm hex wrench, loosen the set screw and remove the lever base found on each model (Fig. 4).

NOTE: It is not necessary to completely remove the set screw.

Fig. 4




3. Depending on faucet model there are two styles of trim rings that need to be removed.

- A. Unscrew by hand from cartridge retainer ring (Fig. 5).
- B. Place finger under trim ring (Fig. 6A) and pull out of faucet base (Fig. 6).

Fig. 5




Fig. 6

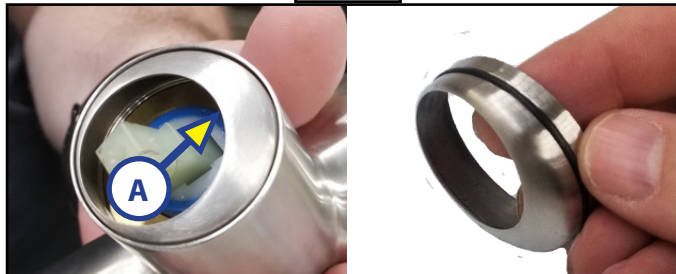

4. Remove the retainer ring that holds the cartridge in place (Fig. 7).
- A. Flat-sided (Fig. 7A): Use pliers or adjustable wrench to grip and unscrew from faucet base.
 - B. Spanner style (Fig. 7B): Open needle nose pliers and place each end in recessed spanner hole and unscrew.
 - C. Tab style (Fig. 7C): Open needle nose pliers and place each end on opposite sides of tabs and unscrew.

Fig. 7

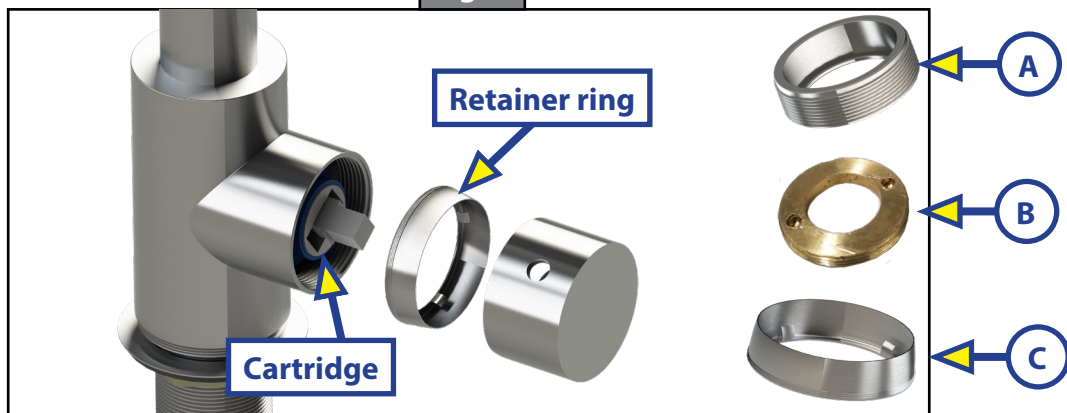

KITCHEN AND BATH

5. Remove the cartridge (Fig. 8) by pulling it away from the faucet base.

NOTE: Depending on faucet model, there are two different styles of cartridges

Fig. 8



Cartridge Installation

NOTE: Before installing the cartridge, remove any debris or build-up by wiping the installation area clean (Fig. 10).

1. Line up the pilot studs (Fig. 9A) on the bottom of the new cartridge with the indentations on the inside of the faucet base (Fig. 10A) and insert the new cartridge.

NOTE: If cartridge is not lined up correctly it will restrict water flow.

Fig. 9



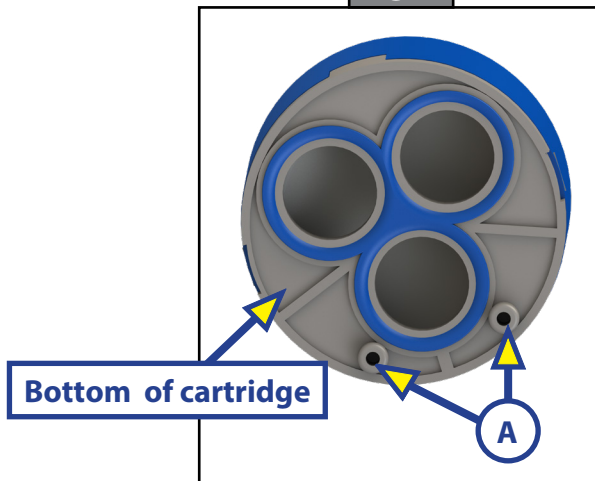


Fig. 10


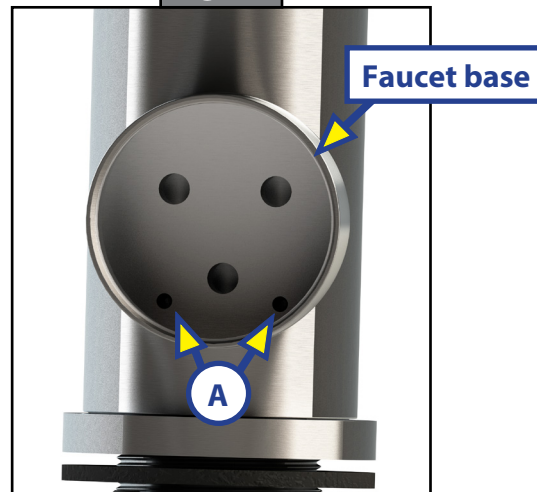


KITCHEN AND BATH

2. Replace retainer ring over the cartridge into the faucet base.
 - A. Flat-sided style: Place washer into the lever base, tighten with pliers or adjustable wrench.
 - B. Spanner style: Open needle nose pliers and place each end in recessed spanner hole and screw in.
 - C. Tab style: Open needle nose pliers and place each end on opposite sides of tabs and screw in.
3. Replace the trim ring (Fig. 11).
 - A. Tighten by hand.
 - B. Press into place until the trim ring is securely seated in the faucet base.

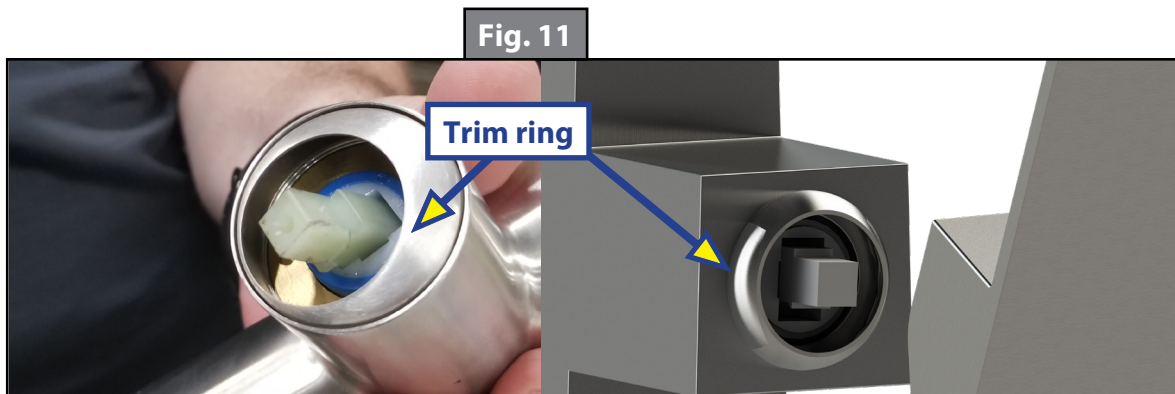

4. Replace lever base (Fig. 12) and tighten the set screw with the 2.5 mm hex wrench.
5. Replace lever handle, thread back onto lever base if faucet model requires it (Fig.13).

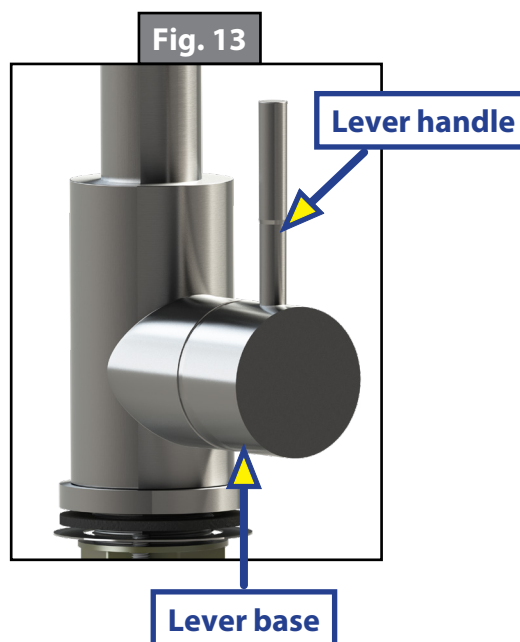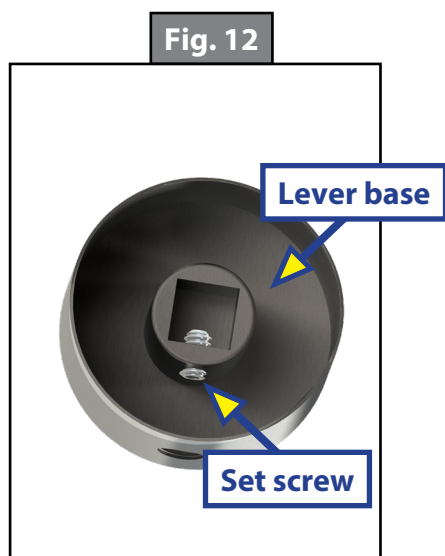

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at 432-LIPPERT (432-547-7378) or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lippert.com or by downloading the LippertNOW app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.