



**LCI PARTY DECK
OWNER'S MANUAL**

L I P P E R T
C O M P O N E N T S[®]

Introduction

Lippert Components Party Decks are designed to help transform the ramp door of a coach into a comfortable, additional living space. The LCI Party Deck takes previously unavailable space and maximizes it, converting the ramp door into a fully functional outdoor deck in minutes. The easy-to-follow instructions in this manual will describe the process of setting up the LCI Party Deck.

NOTE: While the product is water resistant, it is recommended to store the door in the closed position during periods of rain to reduce the risk of water intrusion, which may result in delamination.

⚠ WARNING

The maximum weight rating for the Ramp Door is 3,000 pounds. The maximum weight rating for the Party Deck is 1,500 pounds. Exceeding the maximum weight ratings can cause death, serious injury or damage to the unit. DO NOT allow the ramp door to fall while lowering into level position, as this could cause injury or damage to the unit or door.

⚠ CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

⚠ WARNING


Do not remove set screw. Failure to follow this warning may result in death, serious personal injury and/or property damage. See owner's manual for instructions on use of adjustable cable.

NOTE: Cables are not always shown in the images for clarity purposes.

NOTE: Some trailers are equipped with an optional adjustable cable system for the ramp door. Follow applicable set screw warning for use of the adjustable cable. The adjustable cable system allows for up to +/- 2.5" of adjustment, in order to achieve a 90° angle for the ramp door while in patio mode.


Operation

Fig. 1

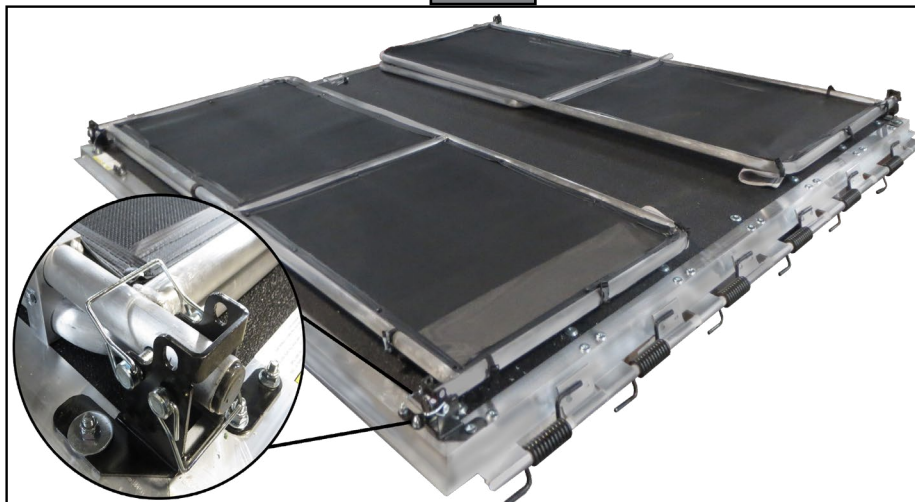

1. Lower Ramp Door to level position. Patio Kit should be folded in the storage position (Fig. 1).
2. Starting with the hanger pin closest to the coach, unpin the top (4) hanger pins from foot brackets in the corners (Fig. 2).

Fig. 2

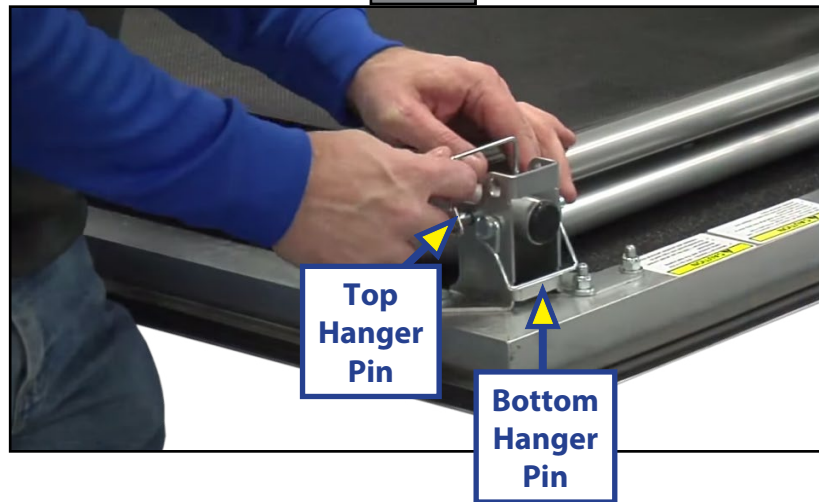

3. Firmly grasp both the top and bottom of the patio frames (Fig. 3).

Fig. 3



⚠ CAUTION

DO NOT scrape the boot and frame leg on the ramp door. Doing so may damage the coating on the floor and the frame.

4. The gate moves vertically. While SUPPORTING frame, pull towards yourself, lifting before it is rotated into either the setup or tear down position (Fig. 4).

Fig. 4




5. Replace top hanger pins (4) to secure the railing. Swing the patio kit doors away from the rest of the frame and link together in the middle (Fig. 5).

Fig. 5




6. Release leg height pin and extend leg until the foot is secured into the guide plate (Fig. 6). Replace leg height pin to secure the leg in the railing.

Fig. 6

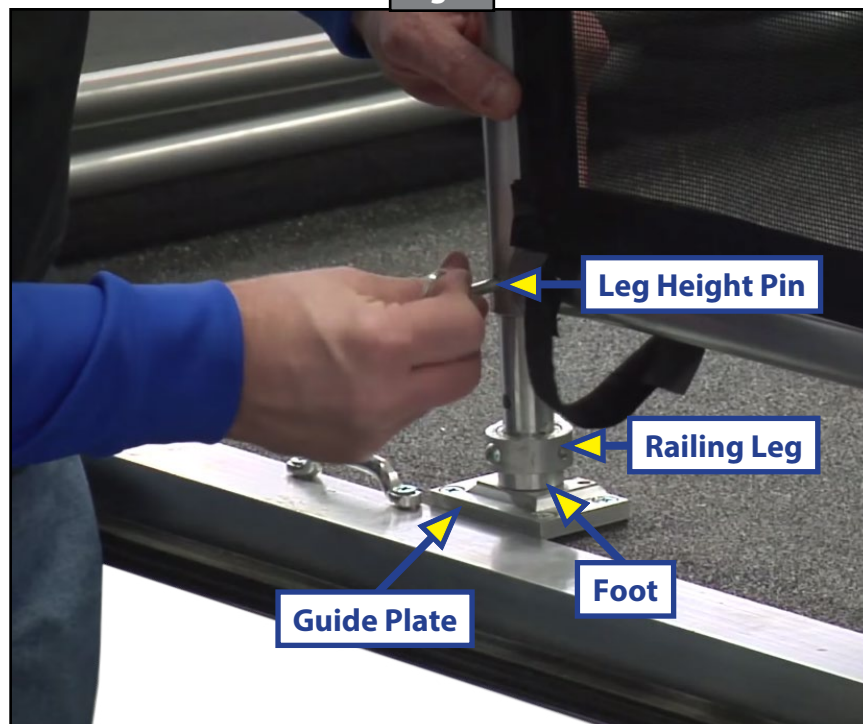

7. Attach the party deck steps and railing to the end of the deck (Fig. 7).

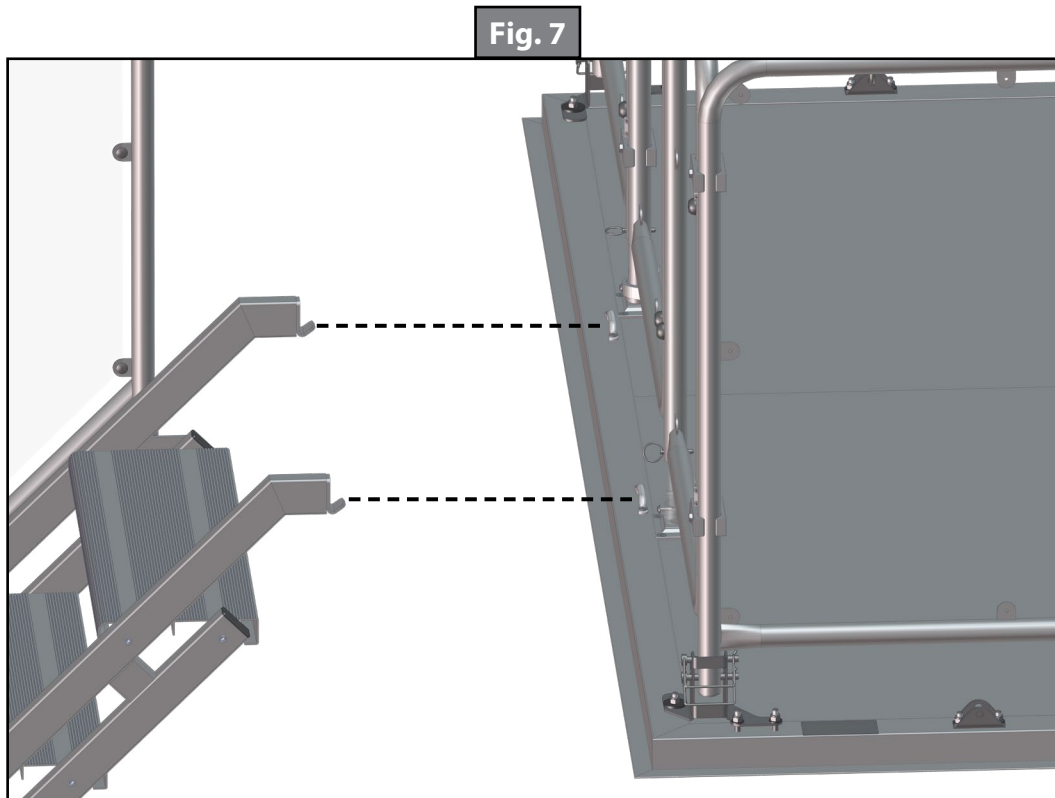

8. Insert the transition plate between the deck and the rear floor of the coach (Fig. 8).



9. Slide canopy fabric cord into awning cord rail on rear of coach. Roll out the Party Deck canopy (Fig. 9).

Fig. 9




10. Fold the canopy legs (Fig. 10A) out from the canopy and telescope them to the floor (Fig. 10).

Fig. 10



11. Once fully extended, snap the bottom of the legs into the sockets (Fig. 11).

Fig. 11

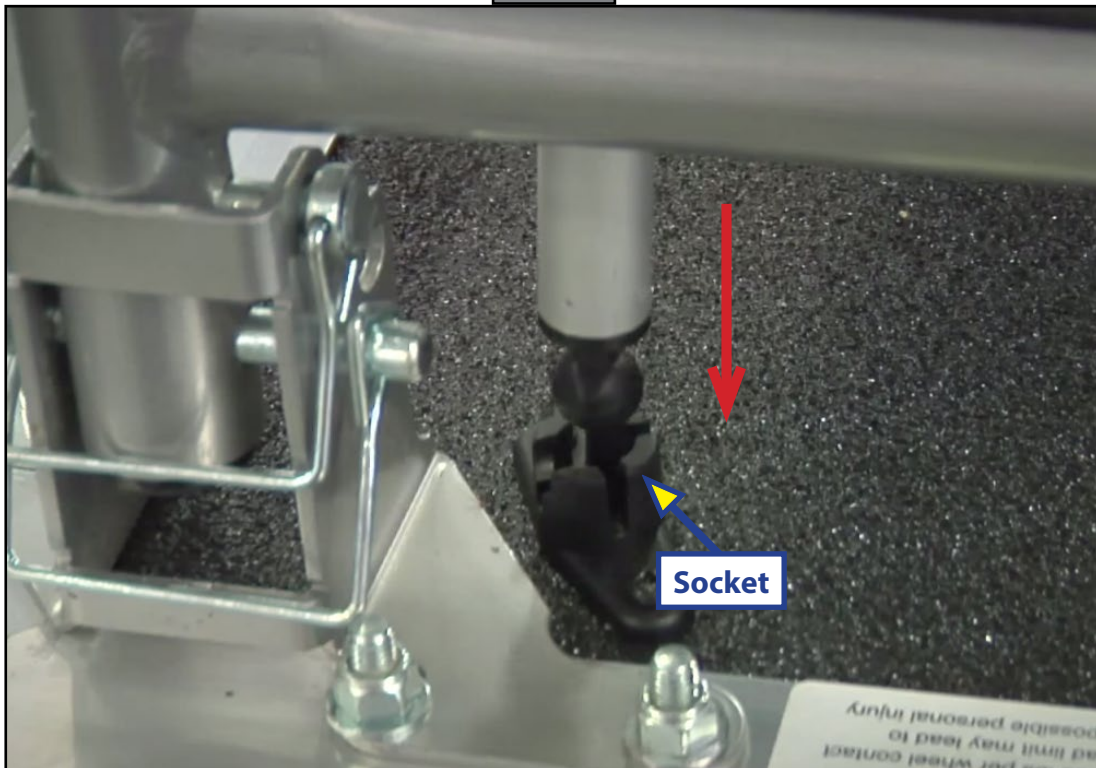

12. Fold out the side supports (Fig. 12) from the canopy. Unlatch tensioner, telescope out, and insert the hook into the triangular gusset (Fig. 13). This will support the canopy.

Fig. 12


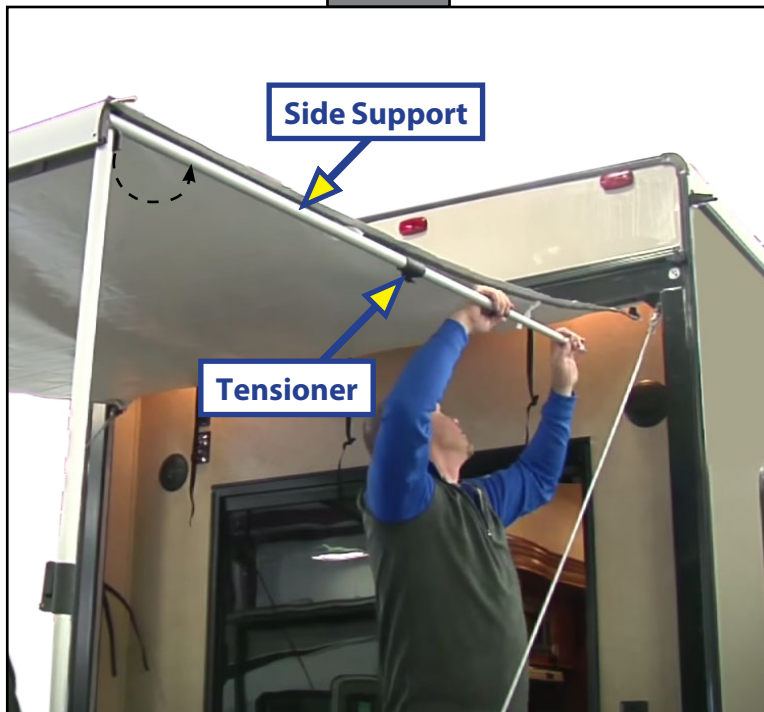


Fig. 13

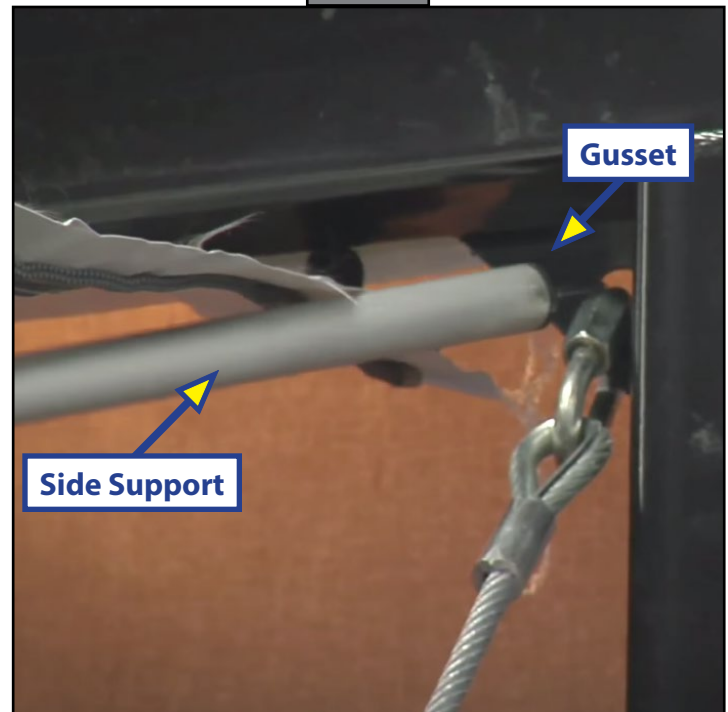

- 13.** Assemble the roof bow supports by inserting the end sections of the support into the middle section (Fig. 14), and position them evenly under the canopy to ensure proper water runoff. Press the clips into the side supports as shown (Fig. 15).

Fig. 14



Fig. 15



- 14.** Unfold the side panels, and zip them onto the roof's left and right side (Figs. 16 and 17).

Fig. 16



Fig. 17



- 15.** Slide the rear canopy cord into the cord rail (Fig. 18).
16. Zip the corners to the left and right side panels (Fig. 19).

Fig. 18

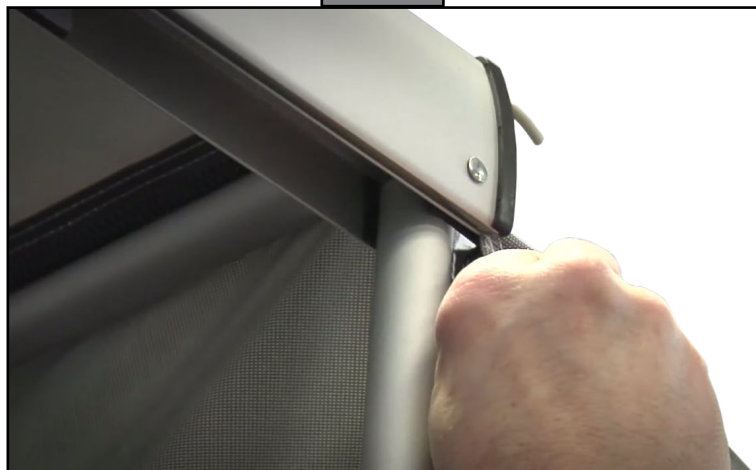


Fig. 19



17. Secure the bungee cords to the eyelets underneath the deck (Fig. 20).

⚠ CAUTION

Ensure the bungee cords do not snap back, which could cause injury.

Fig. 20



Fig. 21 - Finished Assembly




Maintenance

Prior to long periods of storage, it is recommended that the foot brackets and hanger pins of the patio railing assembly be lubricated to prevent rust.

REPLACEMENT PARTS


DOORS

Tent Room

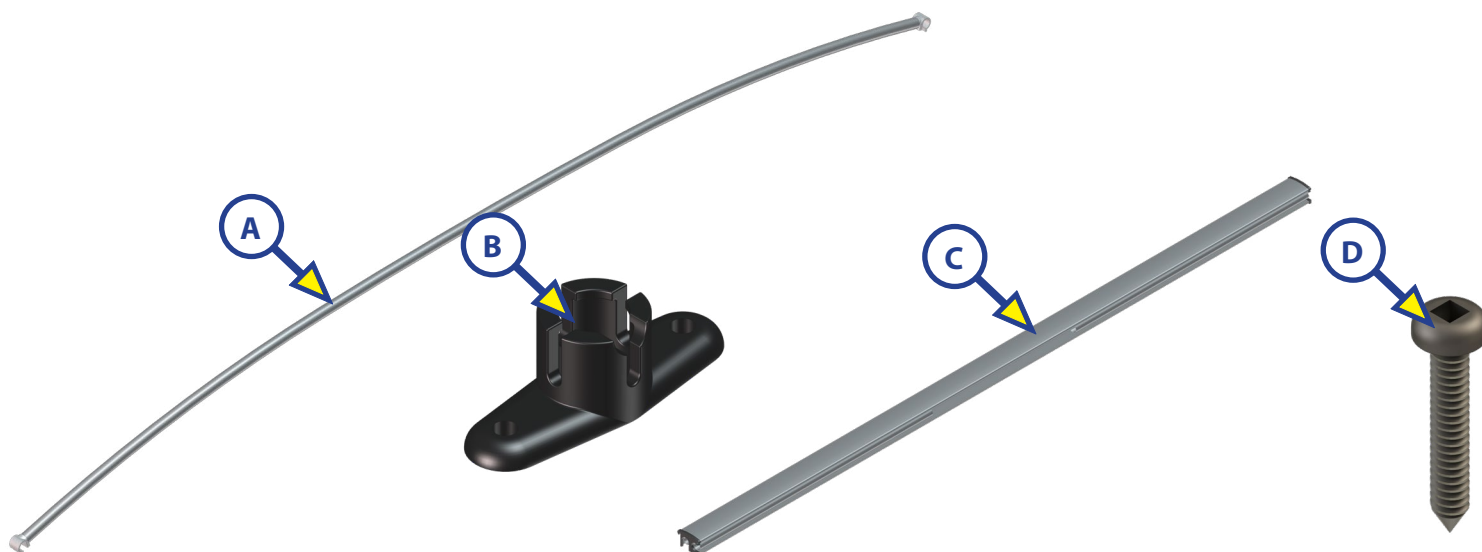

Callout	Part #	Description
A	354223	Tent Pole Roof Bow - 7' (NOT AVAILABLE FOR PURCHASE)
B	354224	Base Mount, Tent Pole (NOT AVAILABLE FOR PURCHASE)
C	354225	Main Frame - Adjustable Fold Out - 7' (NOT AVAILABLE FOR PURCHASE)
D	227619	Screw #8 x 1

Railing Kit

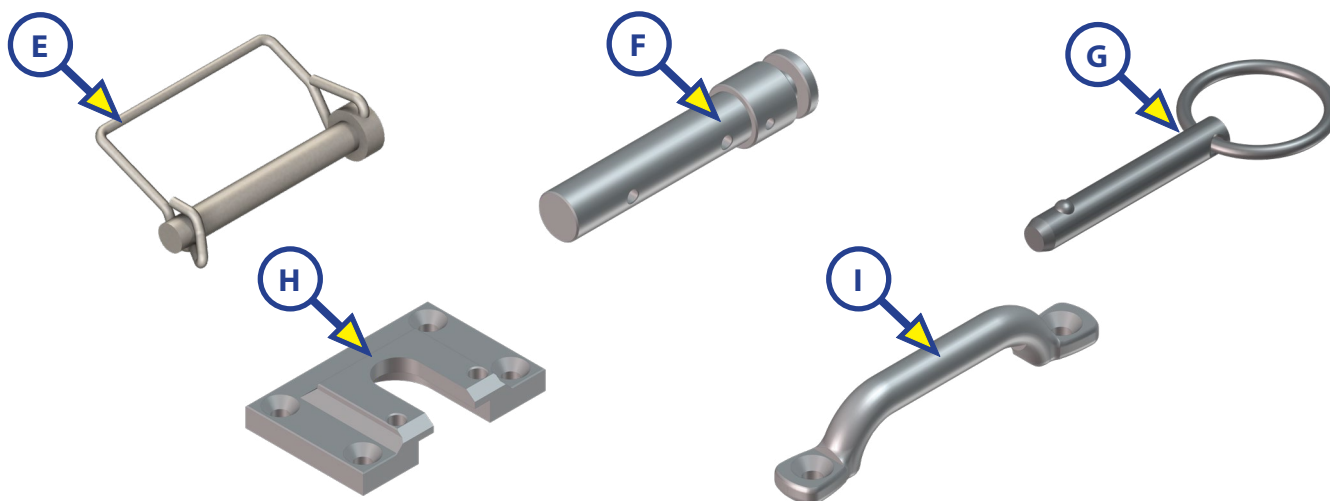

Callout	Part #	Description
E	225598	Snap Pin
F	328643	Adapter, Railing Foot
G	328645	Cotterless Hitch Pin
H	299999	Railing Foot Plate
I	299932	Step Mounting Bracket



REPLACEMENT PARTS

DOORS

Not Shown

Part #	Description
354217	Tent Entrance (NOT AVAILABLE FOR PURCHASE)
354220	Tent Side Wall (NOT AVAILABLE FOR PURCHASE)
354221	Tent Top (NOT AVAILABLE FOR PURCHASE)
354226	Storage Bag (NOT AVAILABLE FOR PURCHASE)

Part #	Description
257048	120 1/4" Cable Kit
280663	94" Cable Kit
289182	112 3/4" Cable Kit
325325	114 3/4" Cable Kit
328142	89" Cable Kit



L I P P E R T C O M P O N E N T S®

The contents of this manual are proprietary and copyright protected by Lippert Components, Inc. ("LCI"). LCI prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized LCI representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of LCI.

Revised editions are available for free download from lci1.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact
Lippert Components, Inc.

Ph: (574) 537-8900 | Web: lci1.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.