

LEVELING AND STABILIZATION

Fig. 1 Pressure to Open (2075 PSI) - Part # [142927](#)

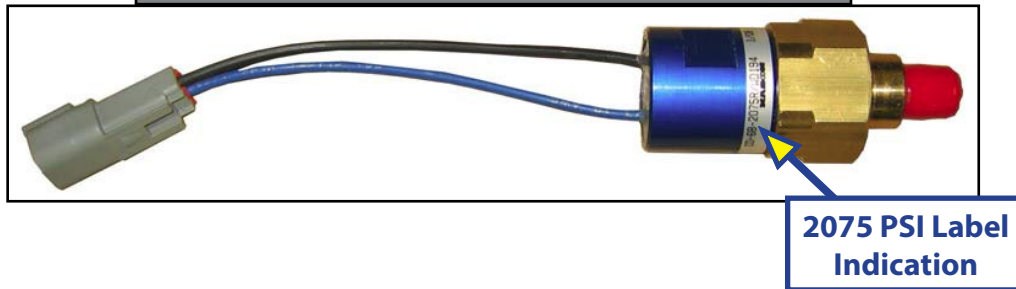


Fig. 2 Pressure to Open (2350 PSI) - Part # [159321](#)



Indications

Diesel units ONLY with Parker Pumps.

Rear jack(s) will not retract completely before system shuts down.

"JACKS DOWN" light goes out and system operates normally, rear jacks remain extended 3-6 inches.

System will retract jacks in MAN MODE to finish.

Cause

System reaches peak pressure of 2075 PSI prior to jacks completely retracting.

Pressure switch opens and disconnects circuit; "JACKS DOWN" light goes out indicating jacks completely retracted.

Solution

Replace Pressure Switch [142927](#) with [159321](#).

Notice label on diagrams above to identify.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at www.lci1.com or by downloading the MyLCI app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.