


REED SWITCH

LIMIT SWITCH



- 1 FULLY RETRACT THE JACK
- 2 DISCONNECT THE TWO PRONG AUTOMOTIVE CONNECTOR FROM THE SWITCH.
- 3 REMOVE THE ALLEN HEAD SCREWS (#1) FROM THE TOP OF THE JACK WITH A 5/32 ALLEN WRENCH.
- 4 REMOVE THE SWITCH AND ROD (#3)
- 5 PUT THE NEW ROD AND SWITCH (#4) IN PLACE AND TIGHTEN DOWN THE SCREWS (#1).
- 6 PLACE A PENNY BETWEEN THE ROD AND SWITCH (ZONE #5). SLIDE THE SWITCH DOWN THE SLOTS IN THE BRACKET.
- 7 TIGHTEN THE NUTS (#2) TO SECURE THE SWITCH AND REMOVE THE PENNY.
- 8 RECONNECT THE WIRES.

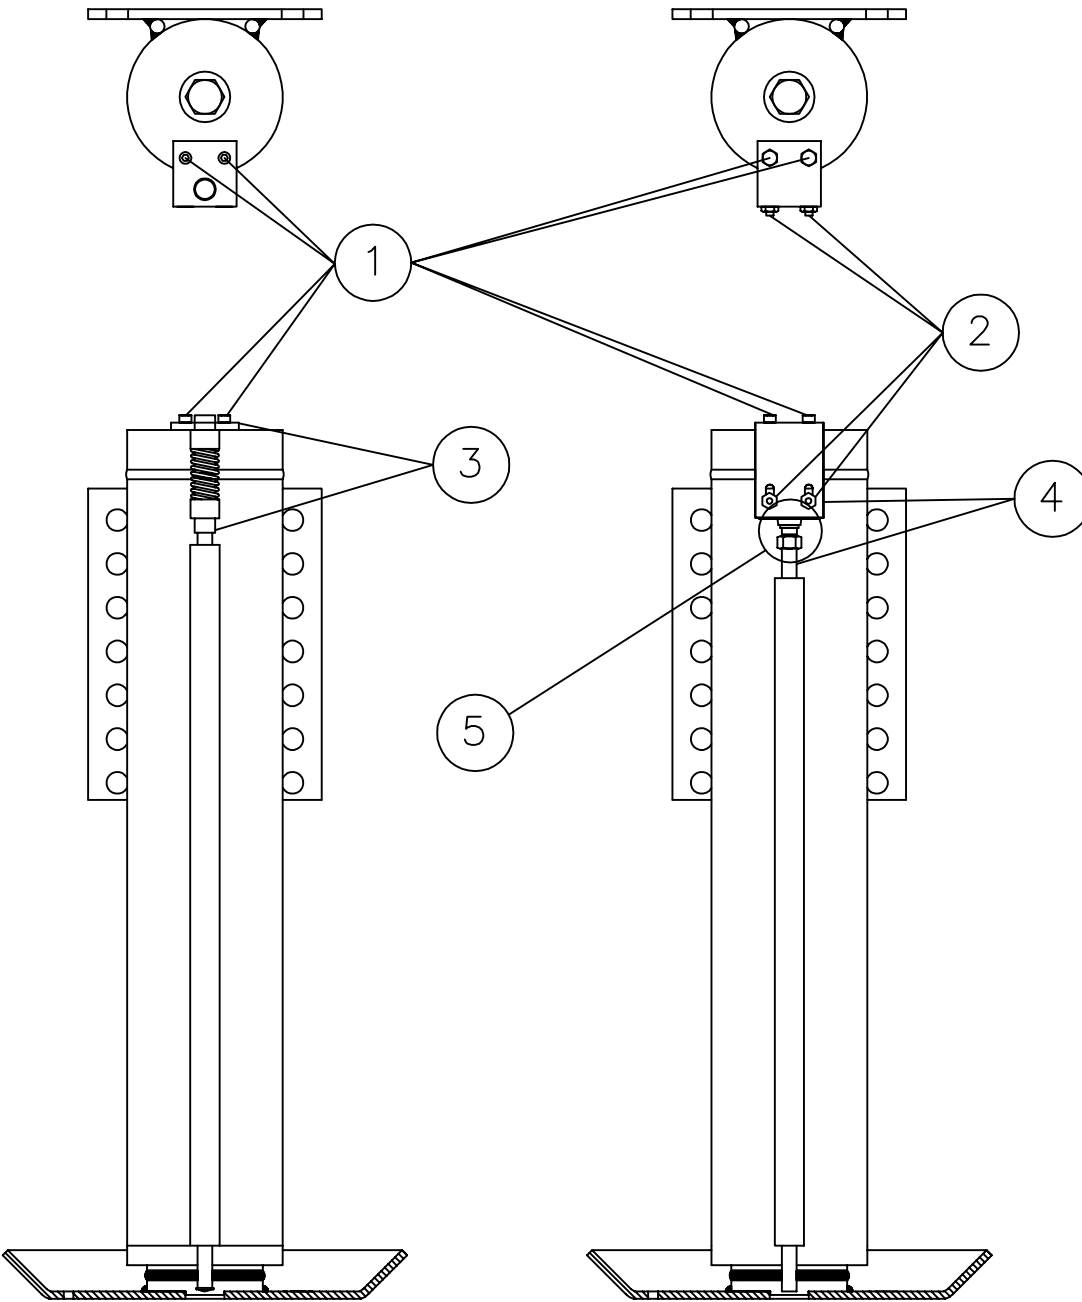

This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.