

AWNINGS

Purpose

This document outlines the removal and replacement of the Thule 5200 Awning motor.

Safety

Read and understand all instructions before installing or operating this product. Adhere to all safety labels.

This document provides general instructions. Many variables can change the circumstances of any procedure, i.e. the degree of difficulty involved in the service operation and the ability level of the individual performing the operation. In the event the skill level required is too advanced or the procedure too difficult, a certified technician should be consulted before performing the necessary operation. Failure to correctly install, remove or service the system may result in voiding the warranty, inflicting injury or even death.


Resources Required

- Ladder
- Star screwdriver (various sizes)
- Adjustable straps
- Duct tape

Procedure


1. Extend the awning 12" - 18 " inches (Fig. 1).

Fig. 1

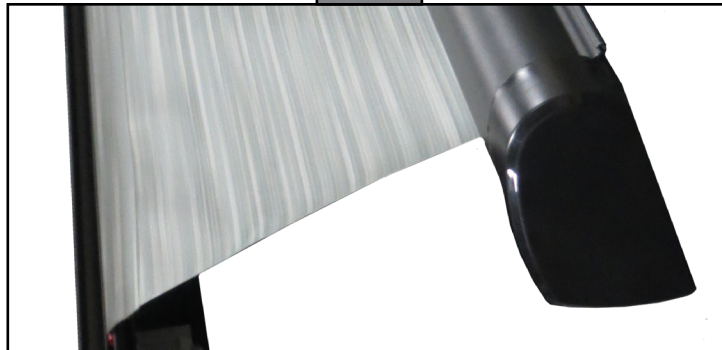



2. Secure the arms on both sides of the awning with adjustable straps (Fig. 2A) to keep the awning from opening. Secure the straps with duct tape to keep the straps from sliding along the arms.

Fig. 2

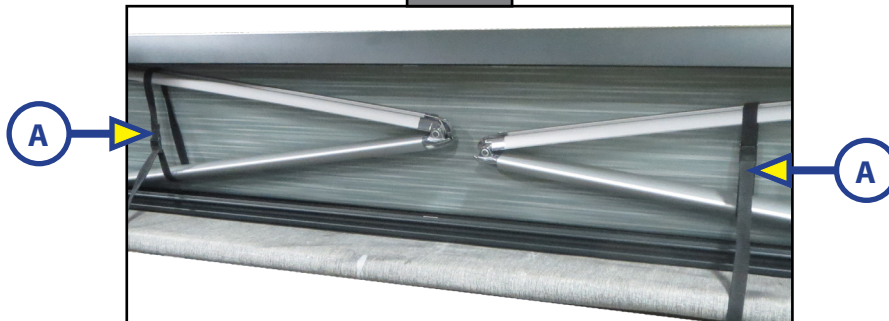


AWNINGS

3. Remove the two screws securing the motor cover to the motor (Fig 3).
4. Remove the motor cover from the awning roll tube by gently prying it out of the notches (Fig. 4).

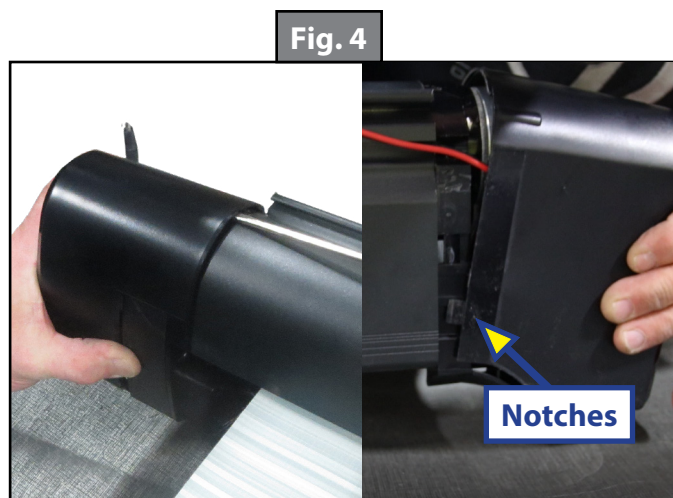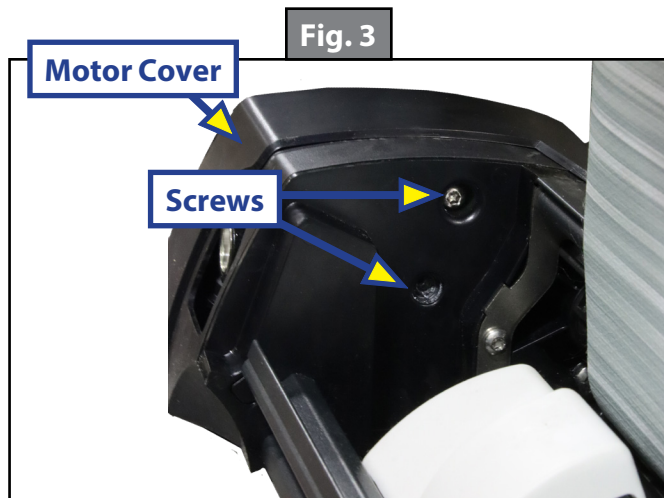


5. Using a star screwdriver, remove the three screws holding the motor in place (Fig. 5A) and set the screws aside for later use.

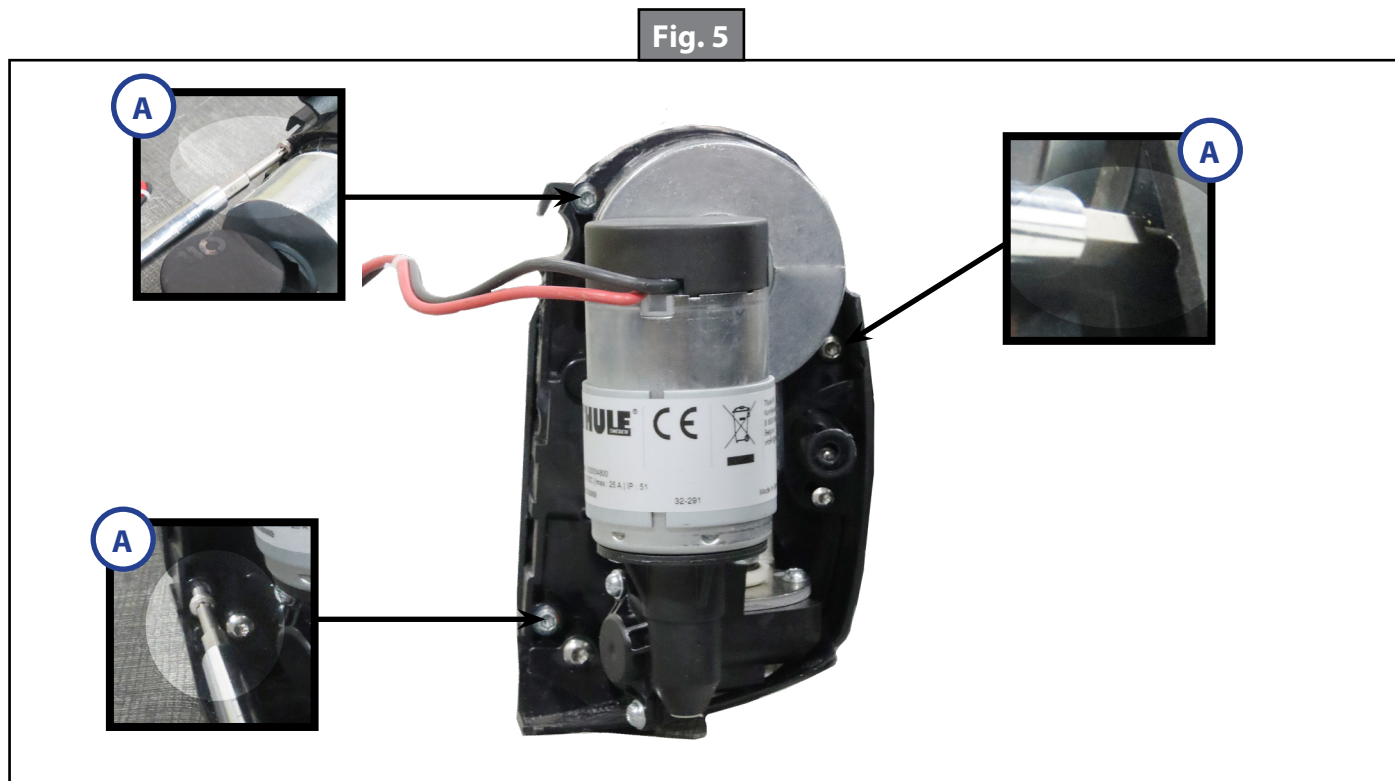

AWNINGS


6. Remove the motor from the square rod and awning roll tube (Fig. 6).

Fig. 6

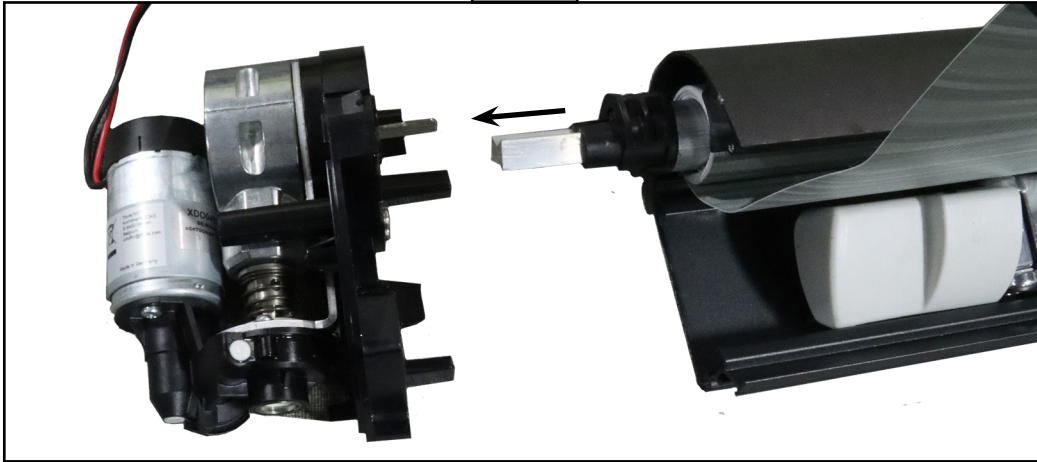

7. Remove the trim piece (Fig. 7B) by unscrewing the two screws (Fig. 7A) securing the trim piece and set the trim piece and screws aside for later use.

Fig. 7

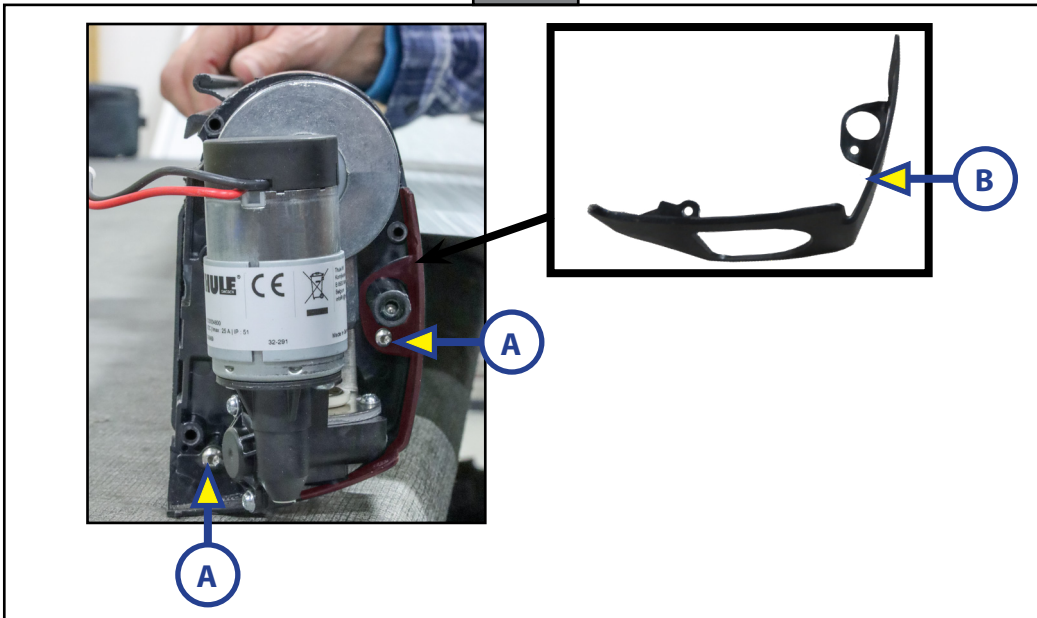

8. Install the trim piece on the new motor using the two previously-removed screws.
9. Align the square rod with the new motor and insert the motor onto the square rod.
10. Install the previously-removed three screws to secure the motor.

NOTE: When reinserting the motor screws, start all three in the holes and then go back and fully tighten.

11. Reinstall the motor cover using the two previously-removed screws.
12. Remove adjustable straps and duct tape.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at 432-LIPPERT (432-547-7378) or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lippert.com or by downloading the LippertNOW app.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.