



Taylor Made Products T-Top Boat Cover Instructions





Taylor Made Products

T-Top Boat Cover Instructions

This unique 2-part T-top cover can easily be installed by one person without ladders. It offers total protection for your center console boat that has a fixed T-top. The cover is installed by zipping two halves together at mid-console. The cover has multiple adjustment points that allow you to tighten the cover the best possible way for your boat. These adjustments need to be made only once. The front half of the cover incorporates a protective weather flap that covers the open area between the supports. Initial installation should be performed while the boat is on the trailer but can be performed while the boat is afloat.



Taylor Made Products T-Top Boat Cover Instructions

Step 1:

Unfold the boat cover. Unzip both sides of the boat cover and unbuckle all (4) "non-adjustable" side release buckles located at the top and bottom of each zipper. Separate the cover into two pieces.

Locate the bow/front section of the boat cover. The bow section will have a sewn in bow/front ticket. With the cover good side up, place the bow section of the cover over the bow of the boat and pull the cover back to the T-Top.



Next, take the stern section of the cover, good side up, and place it over the stern corners of the boat. Pull the stern section up until it meets the bow/front section of the cover at mid-console.



Taylor Made Products T-Top Boat Cover Instructions



Step 2:

While standing on top deck, locate the sewn in loops (at the top of the console tube) on the right and left side of the zipper.





Taylor Made Products T-Top Boat Cover Instructions



Use (1) length of rope (provided) and thread it through the loops. Use a basic over-hand knot to secure the cover to the top of the T-Top frame. You may need to re-adjust the rope once you have fully installed the cover in order to set the console tube to the correct height.




Step 3:

While standing on top deck, locate the (2) side release buckles at the top of the console tube. The buckles are sewn to the bad side of the material on the bow section side of the cover (just below the weather flap). The side release



Taylor Made Products T-Top Boat Cover Instructions

buckles will correspond with (2) straps sewn to the outside of the cover on the opposite side (just above the console tube seam). These straps will help support your cover by going over the hand rail or windscreen like suspenders. Thread the straps through the buckles and pull the straps tightly. This will help to prevent water from pooling in front of the console and behind the console. You only need to make these adjustments once.

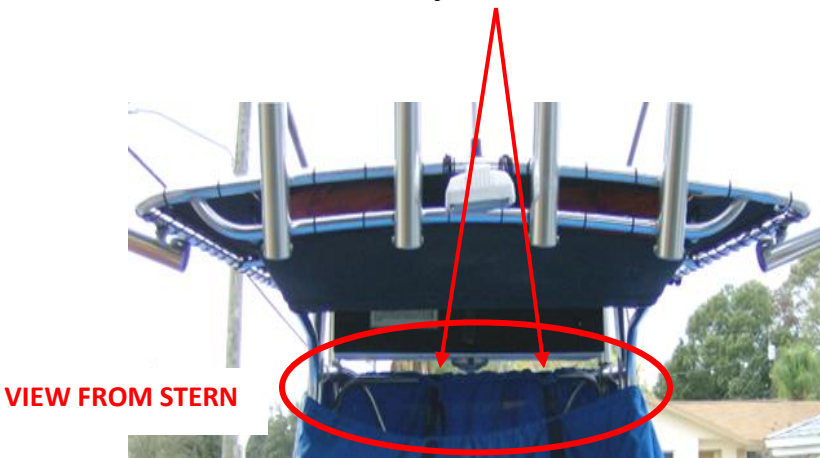

Step 4:

On the stern section of the console tube, locate the strap and side release buckle sewn horizontally to the good side of the material.



Taylor Made Products T-Top Boat Cover Instructions



Thread the webbing through the side release buckle and draw the webbing to the desired tension. This will help draw in any excess material around the console.



Step 5:

Once the console tube is in place and secured, locate the weather flap on the front section of the console tube. Pull the flap over the open section between the t-top and secure it using the (2) side release buckles sewn to the flap and (2) straps sewn to the cover. Thread the straps



Taylor Made Products T-Top Boat Cover Instructions

through the buckles and pull the straps downward to the desired tension.



Step 6:

Starting at the top of the console tube, zip one side of the boat cover together.





Taylor Made Products T-Top Boat Cover Instructions

Secure the “non-adjustable” side release buckles at the top and bottom of the zipper to help eliminate any stress on the zipper.



Step 7:

Thread the rope lock. Remove any excess slack but do not tighten the cover fully yet.





Taylor Made Products T-Top Boat Cover Instructions

Thread the rope lock through the holes following the numbers as seen below.



Start the rope here (#1)

Step 8:

Go to the other side of the boat and repeat steps 2, 5, 6 and 7 to complete the installation of the boat cover. Use the rope lock and pull the rope tight around the boat body. You will need to tighten the rope on both sides. Once you have secured the rope, you can re-tie the rope lock knots and trim the rope as best suits your installation. Burn the cut ends of the rope with a lighter to prevent fraying.



Taylor Made Products T-Top Boat Cover Instructions

Step 9:

When trailering your boat and to help prevent water from pooling on your boat cover it is necessary to secure the hem of the cover to the frame. A number of tie down loops with buckles are sewn into the hem of the cover for this purpose. Our trailerable T-Top boat cover includes (1) 80ft long webbing coil that can be cut to the desired length. Once cut, burn the cut end of the webbing with a lighter to prevent fraying.






Taylor Made Products T-Top Boat Cover Instructions

Adjustable Buckle Assembly Instructions:

Thread the webbing through the adjustable buckle. Insert the end from the back side of the buckle through the middle opening, as seen below.



Now insert the end of the webbing through the bottom opening of the buckle (from the front side) and pull down until the strap is tight.

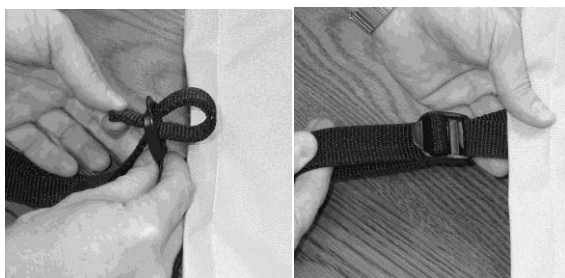



Taylor Made Products
T-Top Boat Cover Instructions



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.