

Thetford Corp.

Refrigerator Replacement Parts List

Australian Models


N301.3, N304.3

N401.3, N404.3

N501.3, N504.3

**Part No. 631515
NORCOLD 2/8/2018**

Cabinet Area - Front View - N301.3 and N304.3

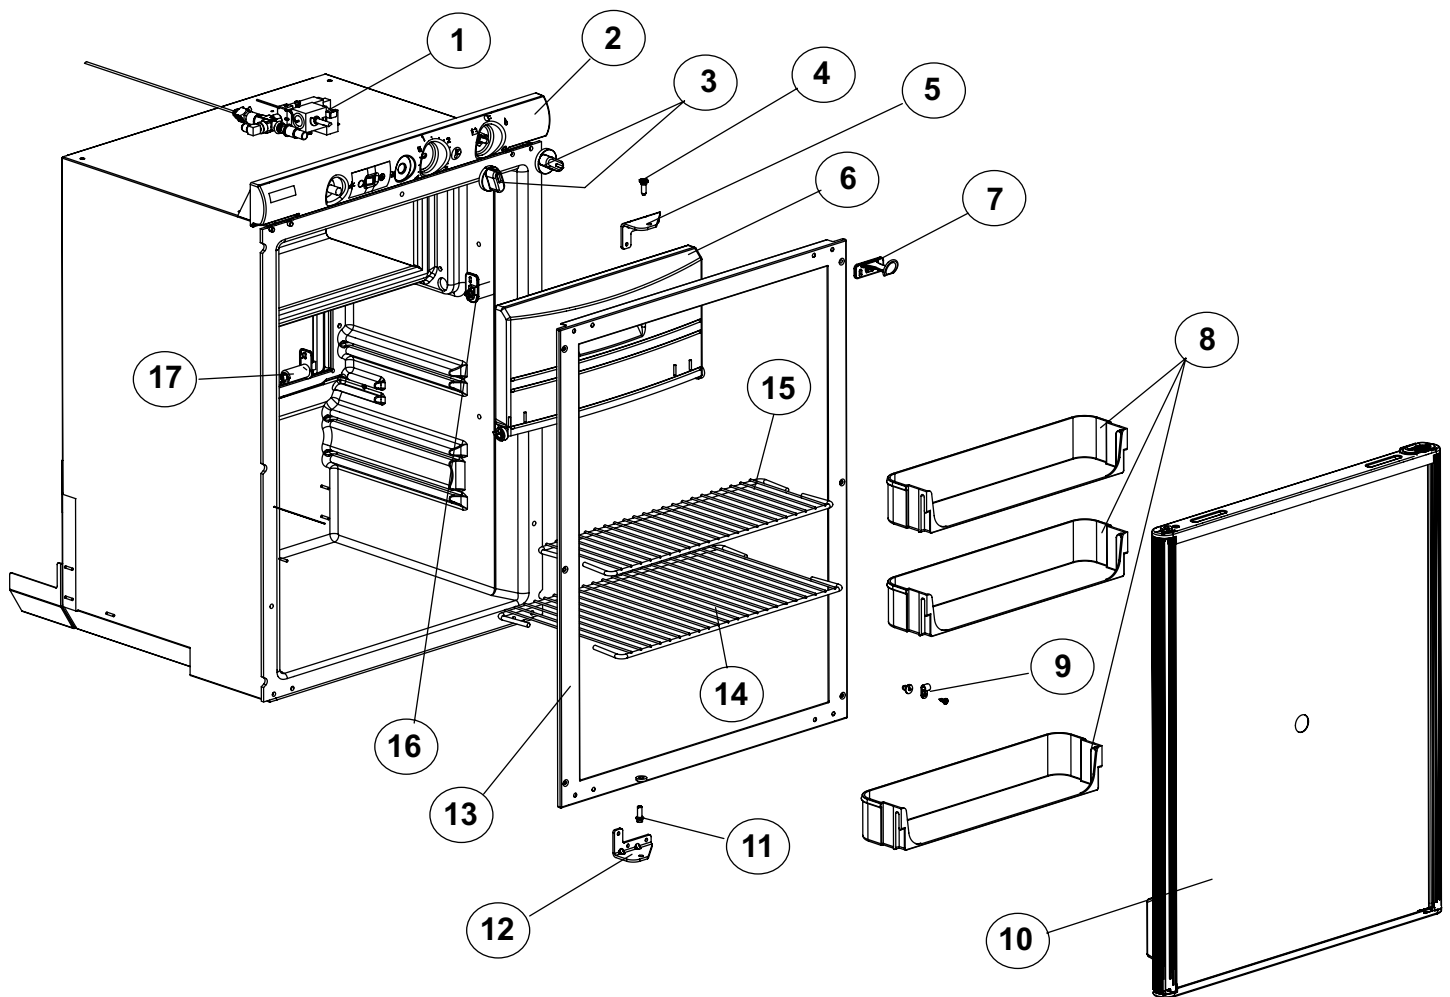


NO.	PART #	DESCRIPTION	N301.3	N304.3
1	619147	CONTROL ASSY-GAS (RED BUTTON)	X	
	634023	CONTROL ASSY-GAS (BLACK BUTTON)		X
NS	621321	SHROUD-TUBING AND CONTROL	X	X
2	630024	CONTROL PANEL ASSY-LT. BROWN	X	
	634024	CONTROL PANEL ASSY-BLACK		X
3	629357	KNOB-SELECTOR/WARM GRAY	X	
	634044	KNOB-SELECTOR/BLACK		X
4	61114600	HINGE PIN-TOP-LT. BROWN (USE638630)	X	
	638630	KIT SERVICE UPPER HINGE PIN REPLACEMENT	X	
	623899	HINGE PIN-TOP-BLACK (USE 638780)		X
	638780	KIT SERVICE UPPER HINGE PIN REPLACEMENT		X
5	621498	HINGE-CABINET/UPPER LH/LOWER RH-LT. BROWN	X	
	626717	HINGE-CABINET/UPPER LH/LOWER RH-BLACK		X
6	619117	EVAPORATOR DOOR ASSY (FREEZER)	X	X
7	619103	LATCH-DOOR-LT. BROWN	X	
	627677	LATCH-DOOR-BLACK		X
8	619033	BIN-DOOR SHELF (3 PER REFRIGERATOR)	X	X
9	61409622	CLIP-SHELF	X	X
	623121	CLIP-SHELF	X	X
10	619030	DOOR ASSY-CABINET-LT. BROWN	X	
	627461	DOOR ASSY-CABINET-BLACK		X
11	61550722	HINGE PIN-BOTTOM (USE 638636)	X	X
	638636	KIT SERVICE LWR HINGE PIN REPLACEMENT	X	X
12	621497	HINGE-CABINET/UPPER RH/LOWER LH-LT. BROWN	X	
	626716	HINGE-CABINET/UPPER RH/LOWER LH-BLACK		X
13	619097	BREAKER-CABINET-LT. BROWN	X	
	626715	BREAKER-CABINET-BLACK		X
14	619102	SHELF-WIRE/BOTTOM (S/N 18797959 AND BELOW)	X	X
	632437	SHELF-WIRE/BOTTOM (S/N 18797960 AND ABOVE)	X	X
15	619123	SHELF-WIRE/TOP (USE 632438)	X	X
	632438	SHELF-WIRE/TOP	X	X
16	619041	SPRING HOLDER ASSY-RH/EVAP DOOR/SILVER SPRING	X	X
17	619042	SPRING HOLDER ASSY-LH/EVAP DOOR/YELLOW SPRING	X	X
NS	63291812	ICE CUBE TRAY-12/AUSTRALIAN	X	X
NS	61619930	DRIP TRAY-INSIDE	X	X

NS = NOT SHOWN

PART NO LONGER AVAILABLE

Cabinet Area - Front View - N401.3 and N404.3

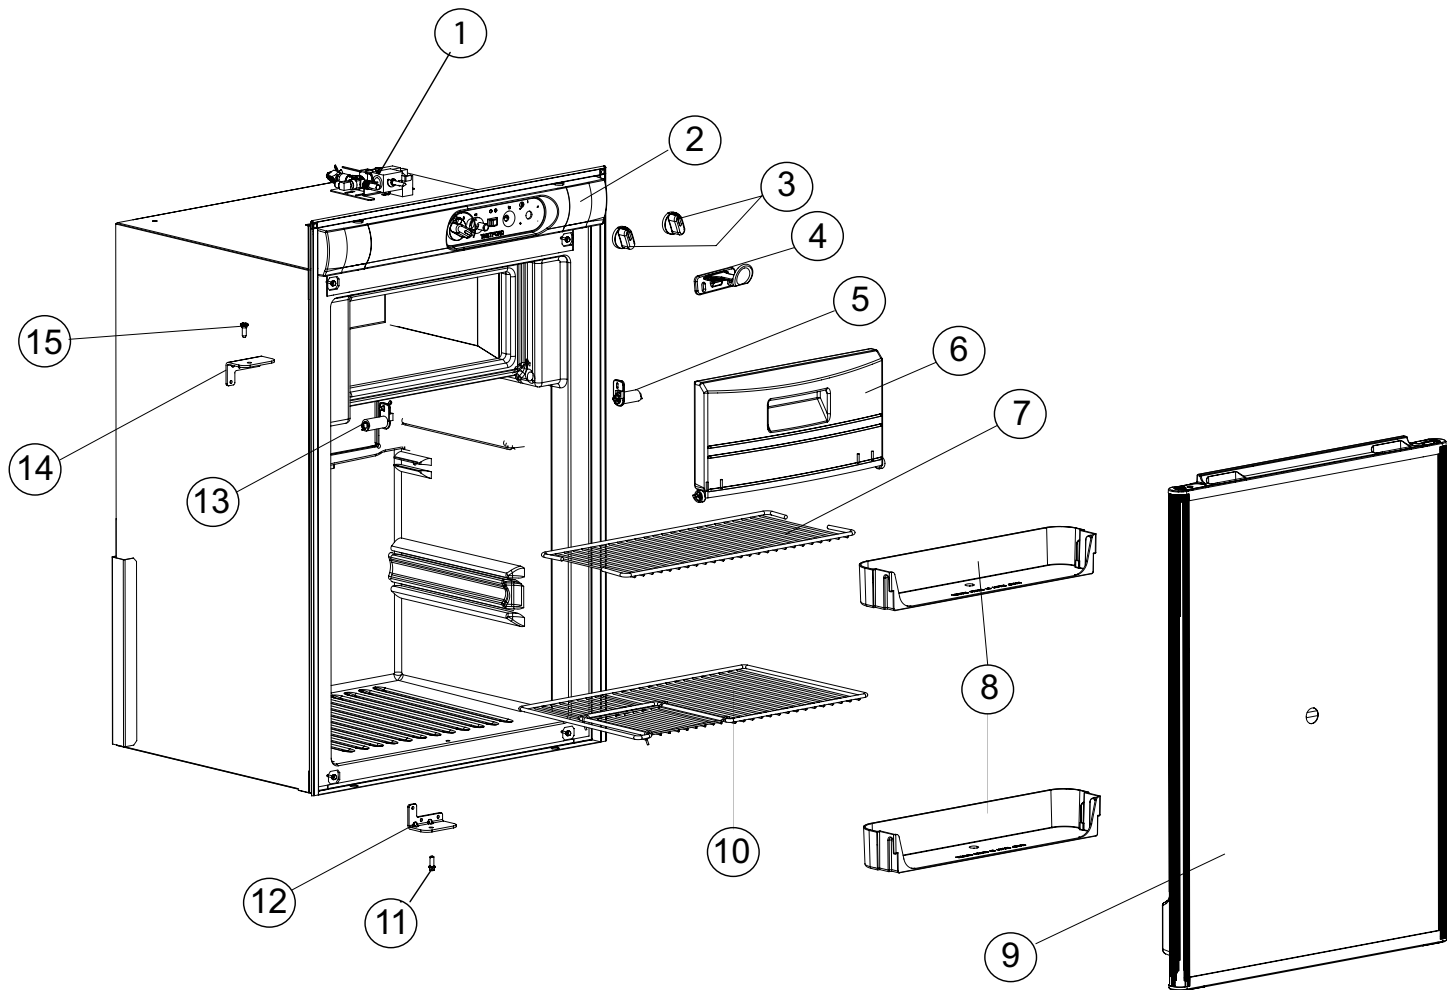


NO.	PART #	DESCRIPTION	N401.3	N404.3
1	620196	CONTROL ASSY-GAS (RED BUTTON)	X	
	634030	CONTROL ASSY-GAS (BLACK BUTTON)		X
NS	620881	SHROUD-UPPER CONTROL AREA	X	X
2	630026	CONTROL PANEL ASSY-LT. BROWN	X	
	634029	CONTROL PANEL ASSY-BLACK		X
3	629357	KNOB-SELECTOR/WARM GRAY	X	X
	634044	KNOB-SELECTOR-BLACK		
4	619103	LATCH-DOOR-LT. BROWN	X	
	627677	LATCH-DOOR-BLACK		X
5	619041	SPRING HOLDER ASSY-RH/EVAP DOOR/SILVER SPRING	X	X
6	619117	EVAPORATOR DOOR ASSY (FREEZER)	X	X
7	620156	SHELF-WIRE/TOP/SHORT (USE 632442)	X	X
	632442	SHELF-WIRE/TOP/SHORT	X	X
NS	61409622	CLIP-SHELF	X	X
8	624863	BIN-DOOR SHELF (2 PER REFRIGERATOR)	X	X
9	620164	DOOR ASSY-CABINET-LT. BROWN	X	
	627465	DOOR ASSY-CABINET-BLACK		X
10	620178	SHELF-WIRE/LOWER/FLIPPER (S/N 18721782 AND BELOW)	X	X
	632443	SHELF-WIRE/LOWER/FLIPPER (S/N 18721783 AND ABOVE)	X	X
NS	618065	CAP-CLEAR/FOR FLIPPER SHELF	X	X
11	61550722	HINGE PIN-BOTTOM (USE 638636)	X	X
	638636	KIT SERVICE LWR HINGE PIN REPLACEMENT	X	X
12	620187	HINGE-CABINET/UPPER RH/LOWER LH-LT. BROWN	X	
	626728	HINGE-CABINET/UPPER RH/LOWER LH-BLACK		X
13	619042	SPRING HOLDER ASSY-LH/EVAP DOOR/YELLOW SPRING	X	X
14	620188	HINGE-CABINET/UPPER LH/LOWER RH-LT. BROWN	X	
	626729	HINGE-CABINET/UPPER LH/LOWER RH-BLACK		X
15	61114600	HINGE PIN-TOP-LT. BROWN (USE 638630)	X	
	638630	KIT SERVICE UPPER HINGE PIN REPLACEMENT	X	
	623899	HINGE PIN-TOP-BLACK (USE 638780)		X
	638780	KIT SERVICE UPPER HINGE PIN REPLACEMENT		X
NS	63291812	ICE CUBE TRAY-12/AUSTRALIAN	X	X
NS	622858	DRIP TRAY-INSIDE	X	X
NS	620464	INSTALLATION PACK ASSY-BTM BREAKER/SCREW-LT BROWN	X	
	627466	INSTALLATION PACK ASSY-BTM BREAKER/SCREW-BLACK		X

NS = NOT SHOWN

 PART NO LONGER AVAILABLE

Cabinet Area - Front View - N501.3 and N504.3

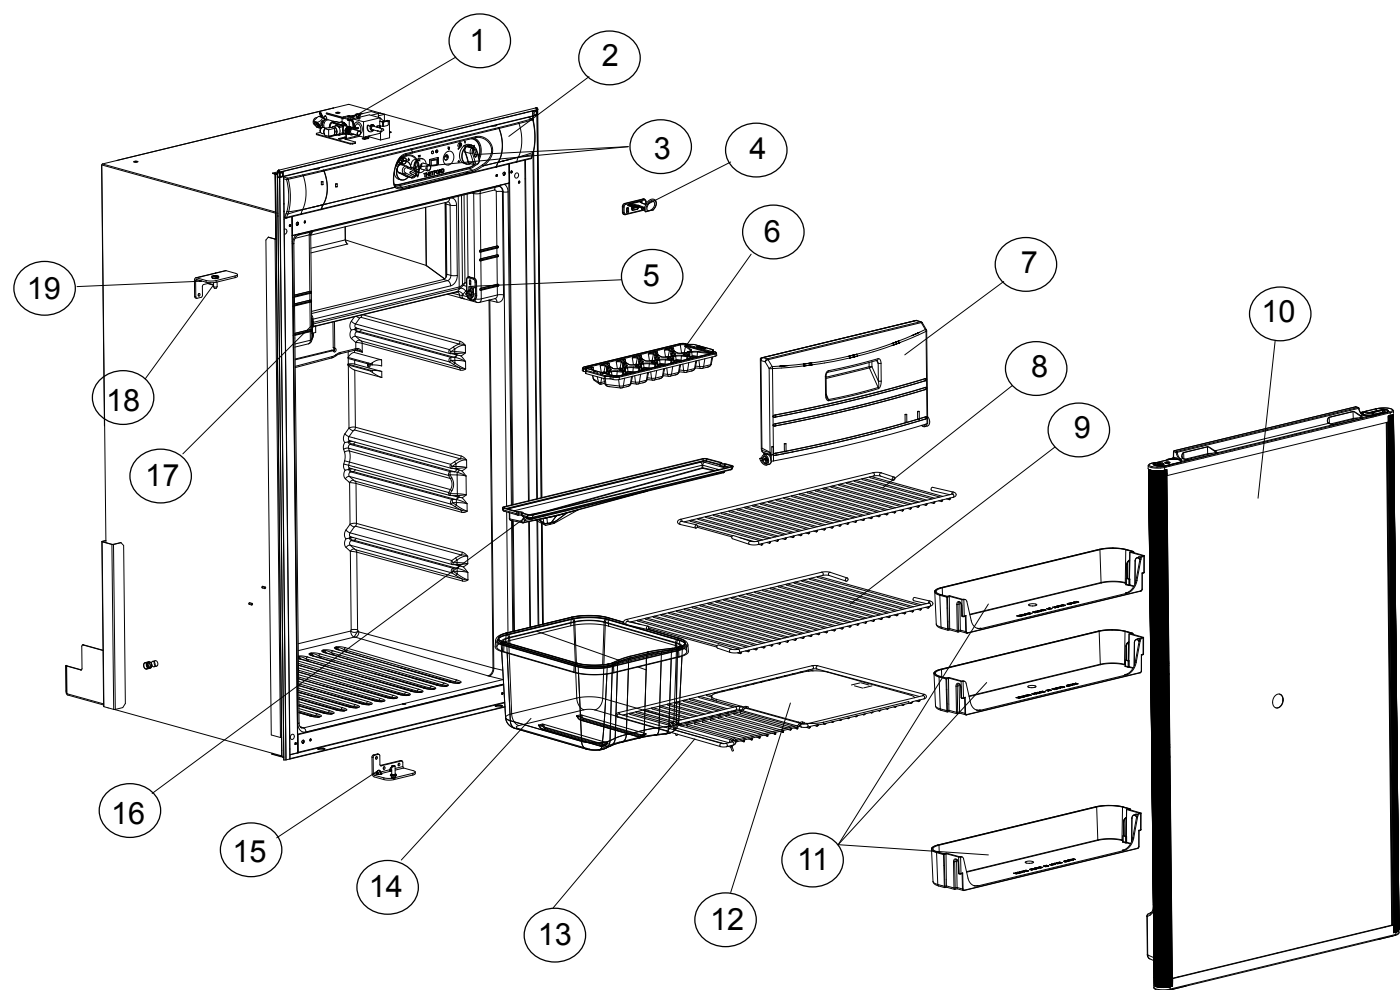


NO.	PART #	DESCRIPTION	N501.3	N504.3
1	620196	CONTROL ASSY-GAS (RED BUTTON)	X	
	634030	CONTROL ASSY-GAS (BLACK BUTTON)		X
NS	620881	SHROUD-UPPER CONTROL AREA	X	X
2	629365	CONTROL PANEL ASSY-LT. BROWN	X	
	634033	CONTROL PANEL ASSY-BLACK		X
3	629357	KNOB-SELECTOR/WARM GRAY	X	
	634044	KNOB-SELECTOR/BLACK		X
4	619103	LATCH-DOOR-LT. BROWN	X	
	627677	LATCH-DOOR-BROWN		X
5	619041	SPRING HOLDER ASSY-RH/EVAP DOOR/SILVER SPRING	X	X
6	63291812	ICE CUBE TRAY-12/AUSTRALIAN	X	X
7	619117	EVAPORATOR DOOR ASSY	X	X
8	620156	SHELF-WIRE/TOP/SHORT	X	X
NS	61409622	CLIP-SHELF	X	X
9	620155	SHELF-WIRE/MIDDLE (S/N 18721782 AND BELOW)	X	X
	632441	SHELF-WIRE/MIDDLE (S/N 18721783 AND ABOVE)	X	X
10	620125	DOOR ASSY-CABINET - LT. BROWN	X	
	627472	DOOR ASSY-CABINET - BLACK		X
11	624863	BIN-DOOR SHELF (3 PER REFRIGERATOR)	X	X
12	621412	CRISPER COVER-GLASS SHELF	X	X
13	620178	SHELF-WIRE/LOWER/FLIPPER (S/N 18721782 AND BELOW)	X	X
	632443	SHELF-WIRE/LOWER/FLIPPER (S/N 18721783 AND ABOVE)	X	X
NS	618065	CAP-CLEAR/FOR FLIPPER SHELF	X	X
14	621309	BIN-CRISPER	X	X
15	61550722	HINGE PIN-BOTTOM (USE 638636)	X	X
	638636	KIT SERVICE LWR HINGE PIN REPLACEMENT	X	X
16	620187	HINGE-CABINET/UPPER RH/LOWER LH-LT. BROWN	X	
	626728	HINGE-CABINET/UPPER RH/LOWER LH-BLACK		X
17	622858	DRIP TRAY-INSIDE	X	X
18	619042	SPRING HOLDER ASSY-LH/EVAP DOOR/YELLOW SPRING	X	X
19	61114600	HINGE PIN-TOP-LT. BROWN (USE 638630)	X	
	638630	KIT SERVICE UPPER HINGE PIN REPLACEMENT	X	
	623899	HINGE PIN-TOP-BLACK (USE 638780)		X
	638780	KIT SERVICE UPPER HINGE PIN REPLACEMENT		X
20	620188	HINGE-CABINET/UPPER LH/LOWER RH-LT. BROWN	X	
	626729	HINGE-CABINET/UPPER LH/LOWER RH-BLACK		X
NS	620464	INSTALLATION PACK ASSY-BTM BREAKER/SCREW-LT. BROWN	X	
	627466	INSTALLATION PACK ASSY-BTM BREAKER/SCREW-BLACK		X

NS = NOT SHOWN

PART NO LONGER AVAILABLE

Cabinet Area - Rear View - N301.3 and N304.3

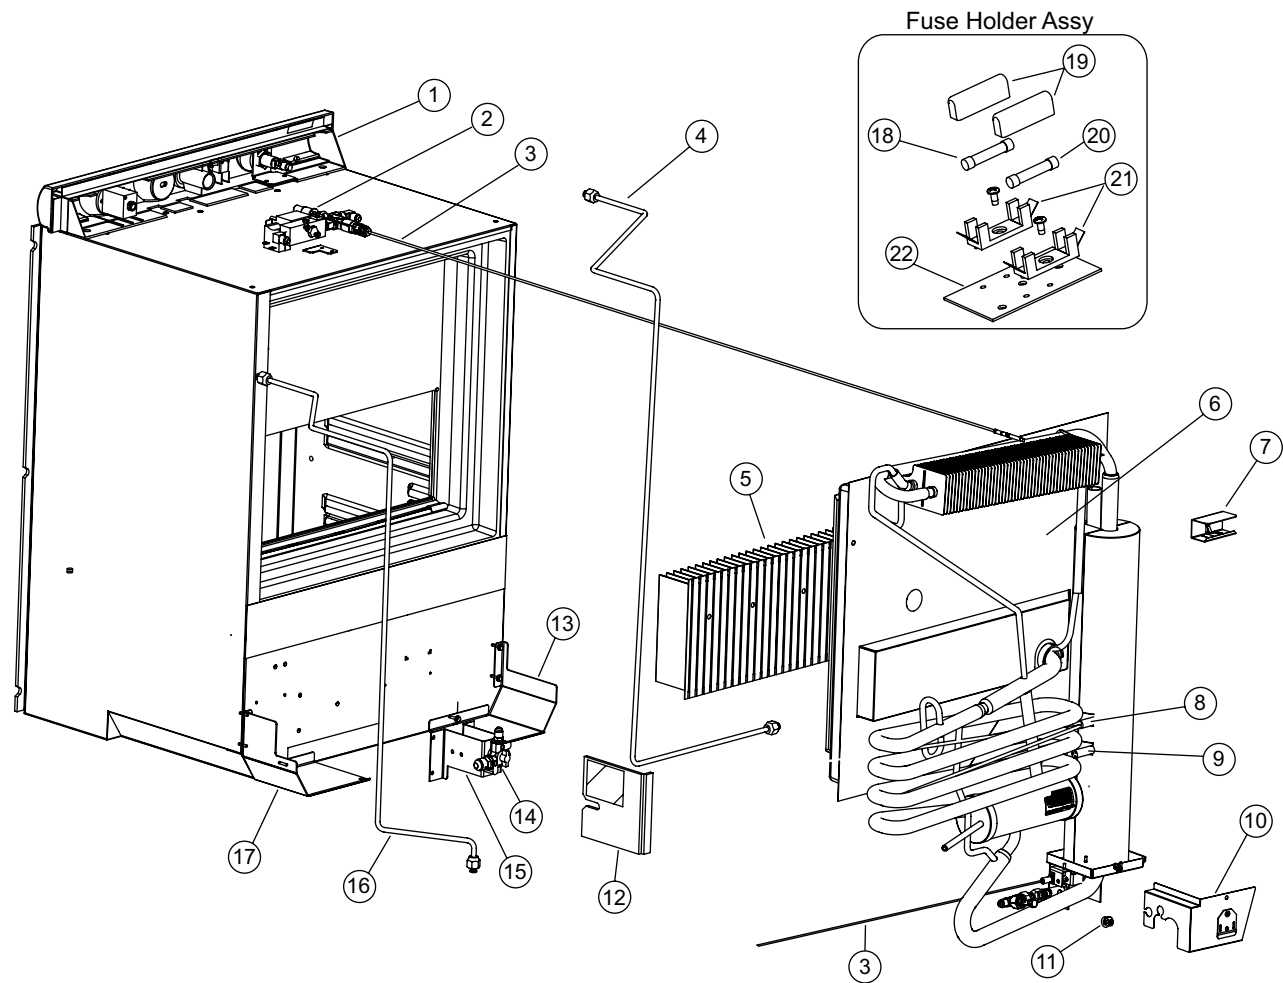


NO.	PART #	DESCRIPTION	N301.3	N304.3
1	630024	CONTROL PANEL ASSY-LT. BROWN	X	
	634024	CONTROL PANEL ASSY-BLACK		X
2	619147	CONTROL ASSY-GAS	X	X
NS	621321	SHROUD-UPPER CONTROL AREA (USE 636839)	X	X
	636839	SHROUD TUBING AND CONTROL	X	X
3	619154	THERMOCOUPLE	X	X
4	621073	BURNER TUBE	X	X
5	619052	FINS	X	X
NS	61728722	CLIP-FIN	X	X
6	632292	SYSTEM PACK-COOLING UNIT (BACKER HTR)-S/N 18411101 AND BELOW (USE 636412)	X	X
	636263	SYSTEM PACK-COOLING UNIT (BACKER HTR)-S/N 18411102 AND ABOVE (USE 636412)	X	X
	636412	KIT SERVICE SYSTEM PACK N304.3LG FLU	X	X
NS	61723522	BAFFLE DIFFUSER-SPIRAL FLAME SPREADER-S/N 18411101 AND BELOW	X	X
	61679022	BAFFLE DIFFUSER-SPIRAL FLAME SPREADER-S/N 18411102 AND ABOVE	X	X
NS	61632010	WIRE-BAFFLE DIFFUSER/FORMED/COOLING UNIT- S/N 18411101 AND BELOW	X	X
	629369	WIRE-BAFFLE DIFFUSER/FORMED/COOLING UNIT -S/N 18411102 AND ABOVE (USE 636207)	X	X
	636207	DIFFUSER WIRE FORMED	X	X
7	619084	CAP-HEAT DEFLECTOR-S/N 18411101 AND BELOW	X	X
	61695022	CAP-HEAT DEFLECTOR-S/N 18411102 AND ABOVE	X	X
8	620451	HEATER-DC/144W/14VDC	X	X
	630808	HEATER-DC (FOR COOLING UNITS WITH BACKER HEATERS)	X	X
9	628773	HEATER-AC/240V	X	X
	630821	HEATER-AC (FOR COOLING UNITS WITH BACKER HEATERS) (USE 638378)	X	X
	638378	KIT SERVICE HEATER REPLACEMENT	X	X
10	61712637	COVER ASSY-BURNER BOX	X	X
11	61606522	BUSHING-OPEN/CLOSED 1/2"	X	X
12	619086	BAFFLE-BLOWOUT	X	X
13	620199	BRACE-CORNER/CABINET/RH	X	X
14	617976	MANUAL SHUTOFF VALVE ASSY	X	X
15	61694022	BRACKET-MOUNTING/MANUAL SHUT OFF VALVE	X	X
16	619157	INLET TUBE-GAS	X	X
17	620198	BRACE-CORNER/CABINET/LH	X	X
18	61440522	FUSE-GLASS/20 AMP	X	X
19	61583322	FUSE COVER	X	X
20	61654622	FUSE-GLASS/3 AMP/32V OR LESS	X	X
21	61584222	FUSE HOLDER	X	X
22	621228	PLATE-FUSE HOLDER	X	X
NS	621313	CORD-AC POWER/50 CYCLE (AUSTRALIAN)	X	X

NS = NOT SHOWN

 NO LONGER AVAILABLE

Cabinet Area - Rear View - N401.3 and N404.3

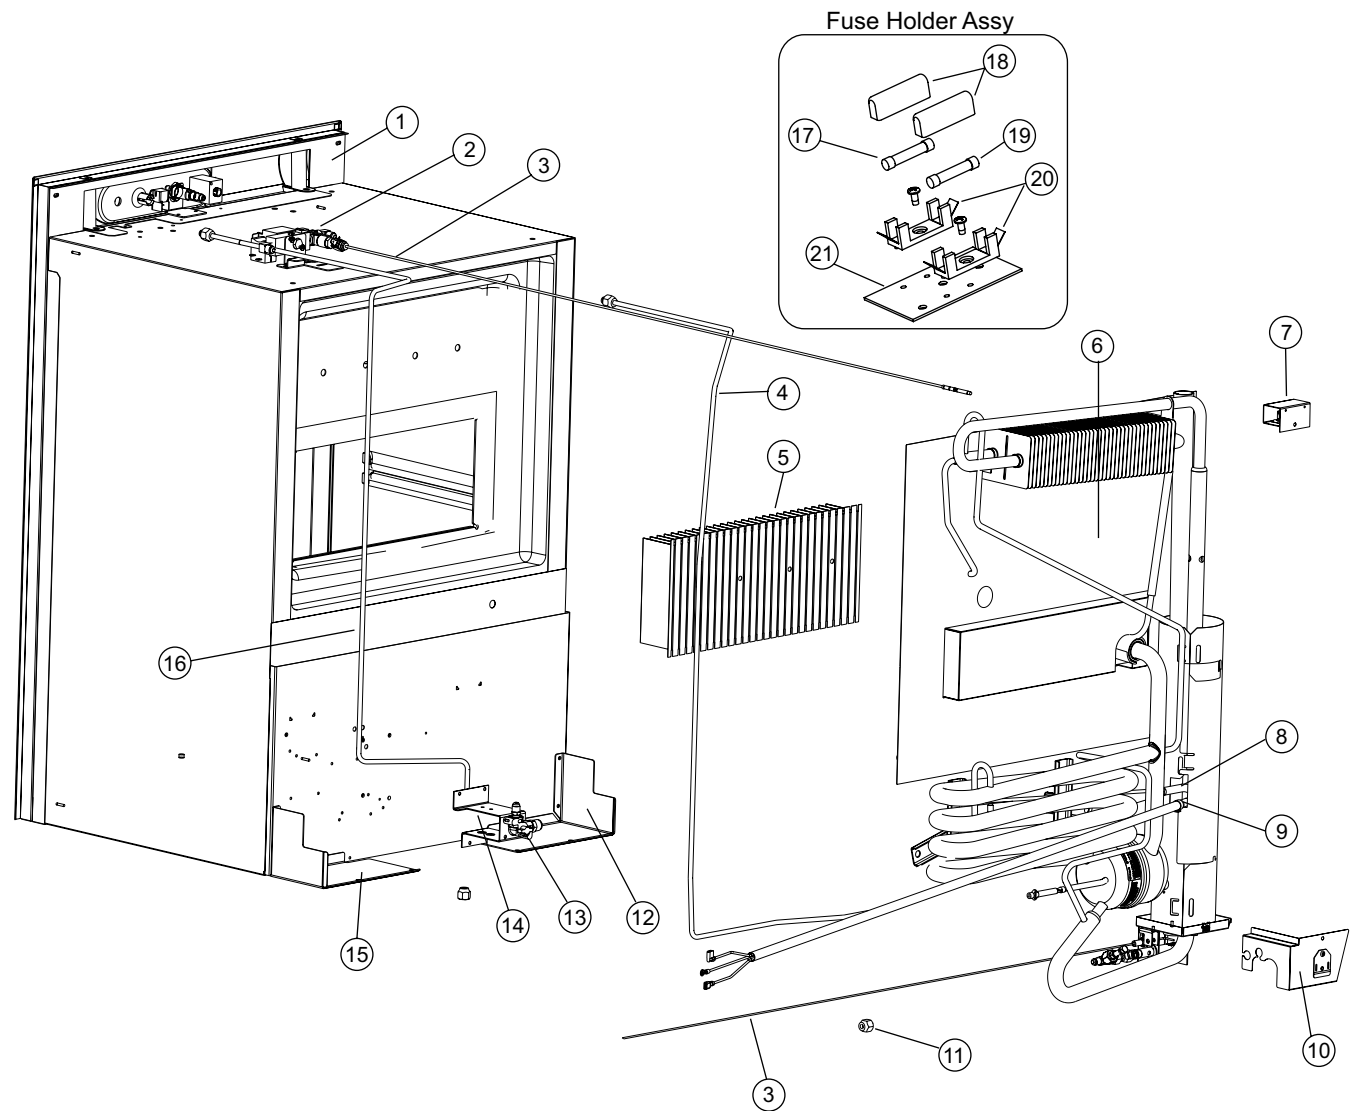


NO.	PART #	DESCRIPTION	N401.3	N404.3
1	630026	CONTROL PANEL ASSY-BLACK	X	
	634029	CONTROL PANEL ASSY-LT BROWN		X
2	620196	CONTROL ASSY-GAS	X	X
NS	620881	SHROUD-UPPER CONTROL AREA	X	X
3	620424	THERMOCOUPLE	X	X
4	620223	BURNER TUBE	X	X
5	61686823	FINS	X	X
NS	61728722	CLIP-FIN	X	X
6	632297	NSC SYSTEM PACK-COOLING UNIT (BACKER HEATER)	X	X
NS	61679022	BAFFLE DIFFUSER-SPIRAL FLAME SPREADER/COOLING UNIT	X	X
NS	629369	WIRE-BAFFLE DIFFUSER/FORMED/COOLING UNIT	X	X
7	61695022	CAP-HEAT DEFLECTOR	X	X
8	620884	HEATER-DC/EG3	X	X
	630810	HEATER-DC/EG3 (FOR COOLING UNITS WITH BACKER HEATERS)	X	X
9	628772	HEATER-AC/240V	X	X
	630820	HEATER-AC (FOR COOLING UNITS WITH BACKER HEATERS) (USE	X	X
	638377	KIT SERVIC HEATER REPLACEMENT	X	X
10	61712637	COVER ASSY-BURNER BOX	X	X
11	61606522	BUSHING-OPEN/CLOSED 1/2"	X	X
12	619124	BRACE-CORNER/CABINET/RH	X	X
13	61692322	MANUAL SHUT OFF VALVE ASSY	X	X
14	61694022	BRACKET-MOUNTING/MANUAL SHUT OFF VALVE	X	X
15	619119	BRACE-CORNER/CABINET/LH	X	X
16	620225	INLET TUBE-GAS	X	X
17	621227	FUSE-GLASS/25 AMP	X	X
18	61583322	FUSE COVER	X	X
19	61654622	FUSE-GLASS/3 AMP	X	X
20	61584222	FUSE HOLDER	X	X
21	621228	PLATE-FUSE HOLDER	X	X
NS	622546	DRIP CUP-REAR/PLASTIC	X	X
NS	622394	DRAIN HOSE ASSY	X	X
NS	621313	CORD-AC POWER/50 CYCLE (AUSTRALIAN)	X	X

NS = NOT SHOWN

 NO ONGER AVAILABLE

Cabinet Area - Rear View - N501.3 and N504.3

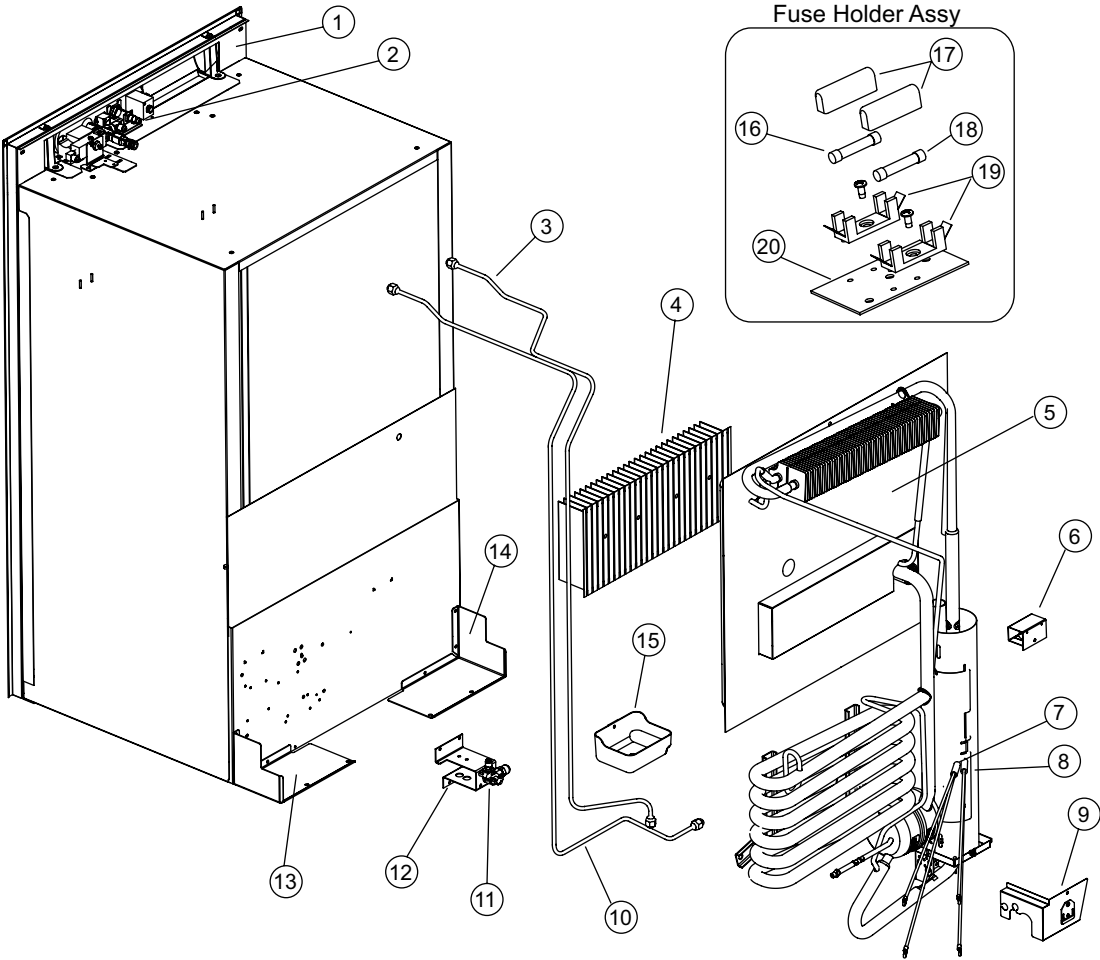

NO.	PART #	DESCRIPTION	N501.3	N504.3
1	629365	CONTROL PANEL ASSY-LT. BROWN	X	
	634033	CONTROL PANEL ASSY-BLACK		X
2	620196	CONTROL ASSY-GAS	X	X
NS	620881	SHROUD-UPPER CONTROL AREA	X	X
3	630106	INLET TUBE-GAS	X	X
4	61686823	FINS	X	X
NS	61728722	CLIP-FIN	X	X
5	632302	NSC SYSTEM PACK-COOLING UNIT (BACKER HEATER)	X	X
NS	61679022	BAFFLE DIFFUSER-SPIRAL FLAME SPREADER/COOLING UNIT	X	X
NS	61632010	WIRE-BAFFLE DIFFUSER/FORMED/COOLING UNIT	X	X
6	61695022	CAP-HEAT DEFLECTOR	X	X
7	620884	HEATER-DC/EG3	X	X
	630810	HEATER-DC/EG3 (FOR COOLING UNITS WITH BACKER HEATERS)	X	X
8	630395	HEATER-AC/240V	X	X
	630822	HEATER-AC/240V (FOR CU WITH BACKER HEATERS)(USE 638379)	X	X
	638379	KIT SERVICE HEATER REPLACEMENT	X	X
9	61712637	COVER ASSY-BURNER BOX	X	X
NS	61606522	BUSHING-OPEN/CLOSED 1/2"	X	X
10	630847	BURNER TUBE	X	X
11	61692322	MANUAL SHUT OFF VALVE ASSY	X	X
12	61694022	BRACKET-MOUNTING/MANUAL SHUT OFF VALVE	X	X
13	619119	BRACE-CORNER/CABINET/LH	X	X
14	619124	BRACE-CORNER/CABINET/RH	X	X
15	622546	DRIP CUP-REAR/PLASTIC	X	X
16	621227	FUSE-GLASS/25 AMP	X	X
17	61583322	FUSE COVER	X	X
18	61654622	FUSE-GLASS/3 AMP/32V OR LESS	X	X
19	61584222	FUSE HOLDER	X	X
20	621228	PLATE-FUSE HOLDER	X	X
NS	622393	DRAIN HOSE ASSY	X	X
NS	621313	CORD-AC POWER/50 CYCLE (AUSTRALIAN)	X	X


NS - NOT SHOWN

 NO LONGER AVAILABLE

LIST OF WIRES BY PART NUMBER/DESCRIPTION


PART #	DESCRIPTION	N301.3	N304.3	N401.3	N404.3	N501.3	N504.3
621313	CORD-AC POWER/50 CYCLE (AUSTRALIAN)	X	X	X	X	X	X
630014	WIRE-10" BLACK-18AWG	X	X				
630012	WIRE-10" BLUE-18AWG	X	X				
630011	WIRE-10" RED-18AWG	X	X				
630013	WIRE-15" BROWN-18AWG	X	X				
629894	WIRE-15" WHITE-12AWG	X	X				
630010	WIRE-35" YELLOW-12AWG	X	X				
629893	WIRE-53" WHITE-12AWG	X	X				
630021	WIRE-45" YELLOW-12AWG			X	X		
630020	WIRE-63" WHITE-12AWG			X	X		
630394	WIRE-50" YELLOW					X	X
630393	WIRE-71" WHITE-12AWG					X	X
630016	WIRE-15" BLUE-18AWG			X	X	X	X
630015	WIRE-15" RED-18AWG			X	X	X	X
630018	WIRE-20" BLACK-18AWG			X	X	X	X
630017	WIRE-5" BROWN-18AWG			X	X	X	X
630019	WIRE-5" WHITE-12AWG			X	X	X	X
632842	WIRE-8" YELLOW-12AWG	X	X	X	X	X	X

GAS CONTROL ASSEMBLY AREA-N301.3/N304.3

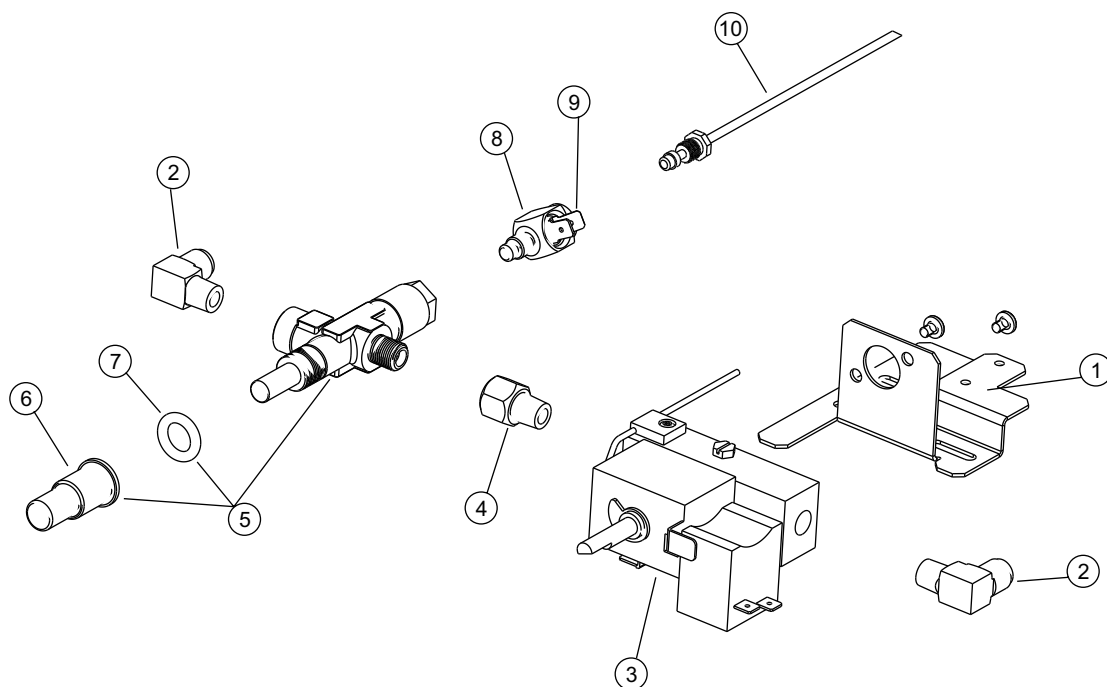


NO.	PART #	DESCRIPTION	N301.3	N304.3
	619147	CONTROL ASSY-GAS / RED	X	
	634023	CONTROL ASSY-GAS / BLACK		X
1	617952	BRACKET-MOUNTING/THERMOSTAT/GAS VALVE	X	X
2	61621622	BRASS ELBOW-UNION TUBE	X	X
3	623297	GAS VALVE-THERMOSTAT CONTROL	X	X
4	619055	ADAPTOR-PIPE	X	X
5	622746001	KIT-SAFETY VALVE/RED EXTENSION PLUG	X	
	622746002	KIT-SAFETY VALVE/BLACK EXTENSION PLUG		X
6	619044	PLUG-SAFETY VALVE EXTENSION-RED (USE 622746001)	X	
	633999	PLUG-SAFETY VALVE EXTENSION-BLACK (USE 622746002)		X
7	623249	O RING-SAFETY VALVE	X	X
8	621737	INTERRUPTER	X	X
9	619073	TAB ADAPTER-INTERRUPTER	X	X
10	619154	THERMOCOUPLE	X	X

GAS CONTROL ASSEMBLY AREA-N401.3/N404.3/ N501.3/N504.3

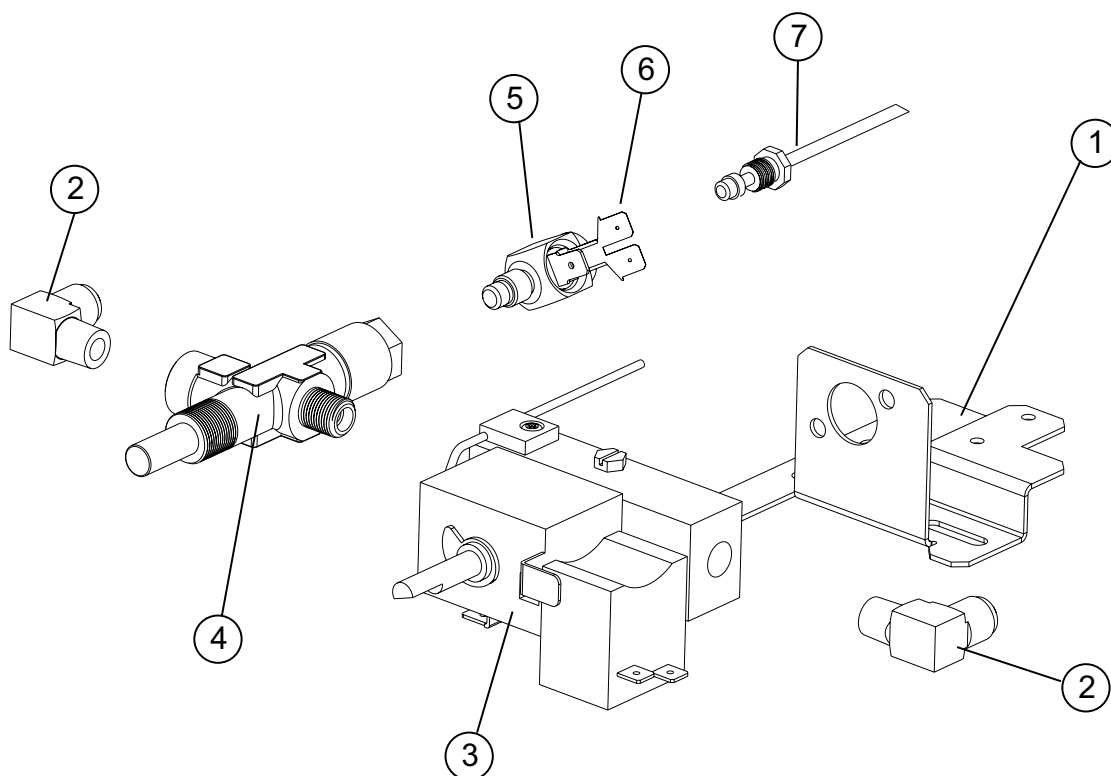


NO.	PART #	DESCRIPTION	N401.3	N404.3	N501.3	N504.3
	620196	CONTROL ASSY-GAS / RED	X		X	
	634030	CONTROL ASSY-GAS / BLACK		X		X
1	617952	BRACKET-MOUNTING/THERMOSTAT/GAS VALVE	X	X	X	X
2	61621622	BRASS ELBOW-UNION TUBE	X	X	X	X
3	621298	GAS VALVE-THERMOSTAT CONTROL	X	X	X	X
4	622746001	KIT-SAFETY VALVE/EXTENSION PLUG-RED	X		X	
	622746003	KIT-SAFETY VALVE/BLACK		X		X
5	621737	INTERRUPTER	X	X	X	X
6	619073	TAB ADAPTER-INTERRUPTER	X	X	X	X
7	620424	THERMOCOUPLE	X	X	X	X

BURNER ASSEMBLY AREA-N301.3/N304.3/N401.3/N404.3/ N501.3/N504.3

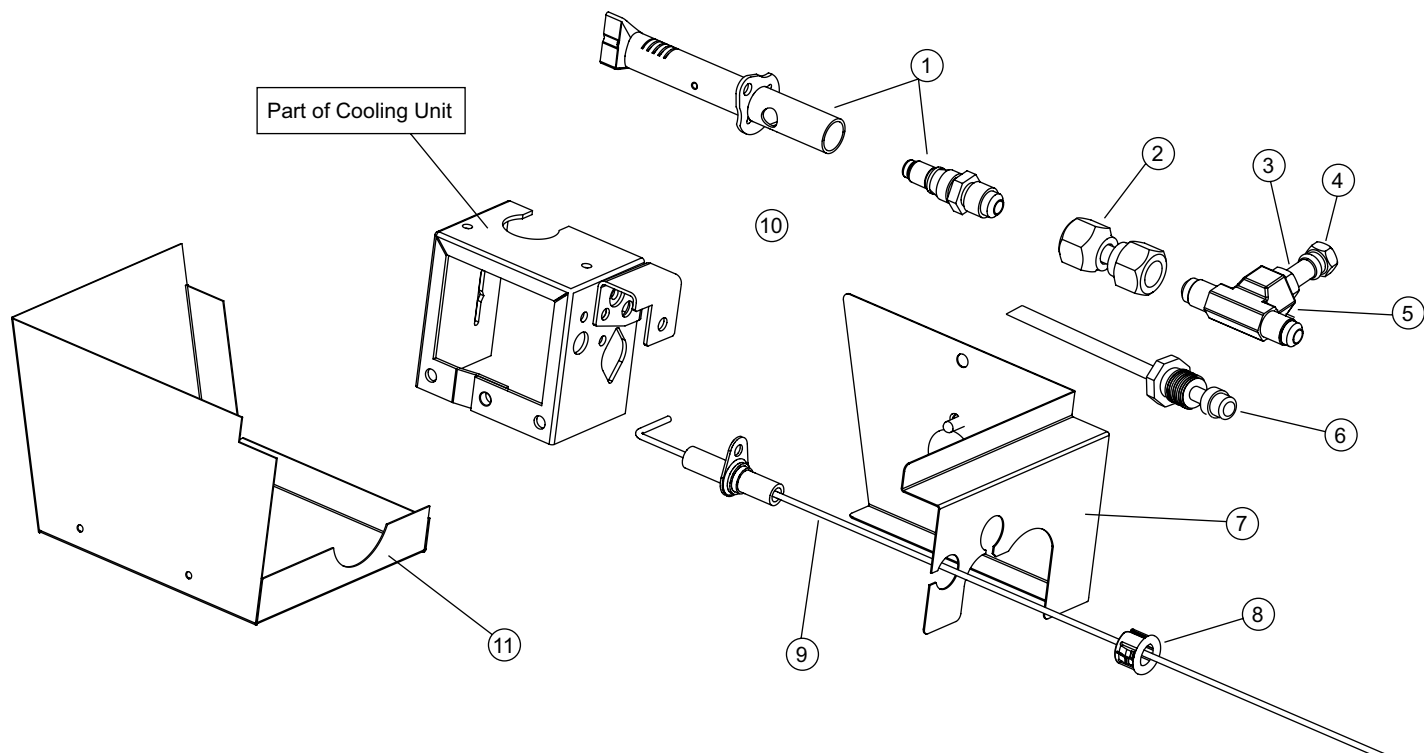

NO.	PART #	DESCRIPTION	N301.3	N304.3	N401.3	N404.3	N501.3	N504.3
1	621953	KIT-BRNR/ORIFICE ADPT ASSY-S/N 18411101 AND BELOW	X	X				
	636930	KIT-BRNR/ORIFICE ADPT ASSY-S/N 18411102 AND ABOVE	X	X				
	621955	KIT-BURNER/ORIFICE ADPT ASSY			X	X	X	X
2	621079	CONNECTOR-SWIVEL NUT	X	X	X	X	X	X
3	621761	FITTING-GAS PRESSURE T PORT	X	X	X	X	X	X
4	621763	PLUG-FOR PRESSURE TAP	X	X	X	X	X	X
5	621054	PRESSURE TAP TEE	X	X	X	X	X	X
6	619154	THERMOCOUPLE	X	X				
	620424	THERMOCOUPLE			X	X	X	X
7	61712637	COVER ASSY-BURNER BOX	X	X	X	X	X	X
8	61606522	BUSHING-OPEN/CLOSED 1/2"	X	X	X	X	X	X
9	619153	ELECTRODE-SPARK IGNITION ASSY	X	X				
	620227	ELECTRODE-SPARK IGNITION ASSY			X	X		
	630400	ELECTRODE-SPARK IGNITER					X	X
10	622547	BRACKET-THERMOCOUPLE	X	X	X	X	X	X
11	61695322	BASE-BURNER BOX	X	X	X	X	X	X

CONTROL PANEL ASSEMBLY AREA-N301.3/N304.3

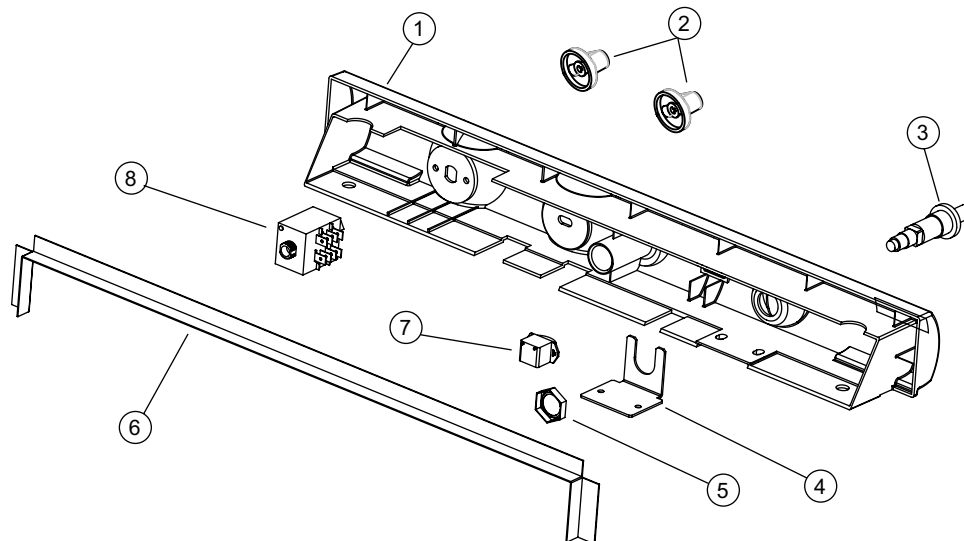


NO.	PART #	DESCRIPTION	N301.3	N304.3
	630024	CONTROL PANEL ASSY-LT. BROWN	X	
	634024	CONTROL PANEL ASSY-BLACK		X
1	630025	CONTROL PANEL-LT. BROWN	X	
	634001	CONTROL PANEL-BLACK		X
2	629357	KNOB-SELECTOR/WARM GRAY	X	
	634044	KNOB-SELECTOR/BLACK		X
3	61645622	SPARK IGNITOR-MANUAL-RED	X	
	633998	SPARK IGNITOR-MANUAL-BLACK		X
4	619152	BRACKET-SPARK IGNITOR	X	X
NS	630849	BRACKET-SPARK IGNITER	X	X
5	623972	SPEED NUT-SPARK IGNITER	X	X
6	619087	COMBUSTION SEAL STRIP	X	X
7	61481322	METER-FLAME INDICATOR(USE 638632)	X	X
	638632	KIT SERVICE FLAME METER REPLACEMENT	X	X
NS	619203	RETAINER-FLAME METER	X	X
8	620863	SWITCH-SELECTOR	X	X

NS = NOT SHOWN

NO LONGER AVAILABLE

CONTROL PANEL ASSEMBLY AREA-N401.3/N404.3/ N501.3/N504.3

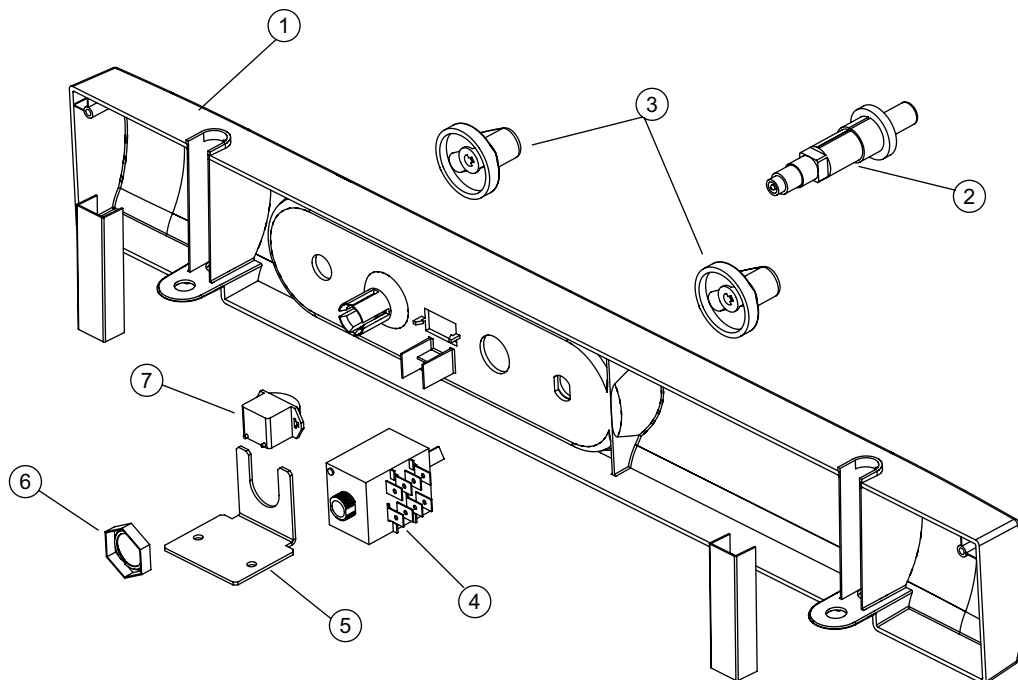


NO.	PART #	DESCRIPTION	N401.3	N404.3	N501.3	N504.3
	630026	CONTROL PANEL ASSY-LT. BROWN	X			
	634029	CONTROL PANEL ASSY-BLACK		X		
	629365	CONTROL PANEL ASSY-LT. BROWN			X	
	634033	CONTROL PANEL ASSY-BLACK				X
1	629368	CONTROL PANEL-LT. BROWN	X		X	
	634002	CONTROL PANEL-BLACK		X		X
2	61645622	SPARK IGNITOR-MANUAL-RED	X		X	
	633998	SPARK IGNITOR-MANUAL-BLACK		X		X
3	629357	KNOB-SELECTOR/WARM GRAY	X		X	
	634044	KNOB-SELECTOR/BLACK		X		X
4	620863	SWITCH-SELECTOR	X	X	X	X
5	619152	BRACKET-SPARK IGNITOR	X	X	X	X
NS	630849	BRACKET-SPARK IGNITER	X	X	X	X
6	623972	SPEED NUT-SPARK IGNITER	X	X	X	X
7	61481322	METER-FLAME INDICATOR (USE 638632)	X	X	X	X
	638632	KIT SERVICE FLAME METER REPLACEMENT		X	X	X
NS	619203	RETAINER-FLAME METER	X	X	X	X

NS = NOT SHOWN


NO LONGER AVAILABLE

**EVAPORATOR DOOR ASSEMBLY AREA-N301.3/N304.3/N401.3/N404.3/N501.3/
N504.3**

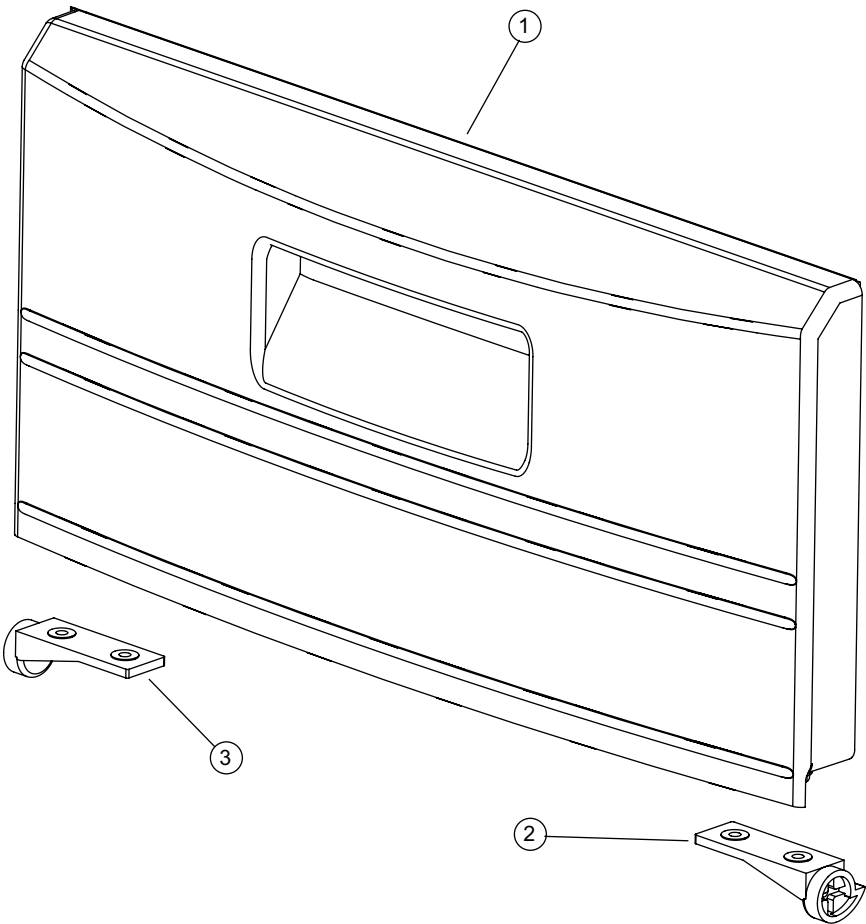

NO.	PART #	DESCRIPTION	N301.3	N304.3	N401.3	N404.3	N501.3	N504.3
1	619117	EVAPORATOR DOOR ASSY (FREEZER)	X	X	X	X	X	X
2	61632930	MOUNTING CLIP-RH/WHITE/EVAPORATOR DOOR	X	X	X	X	X	X
3	61633030	MOUNTING CLIP-LH/WHITE/EVAPORATOR DOOR	X	X	X	X	X	X


DOOR ASSEMBLY AREA-N301.3/N304.3

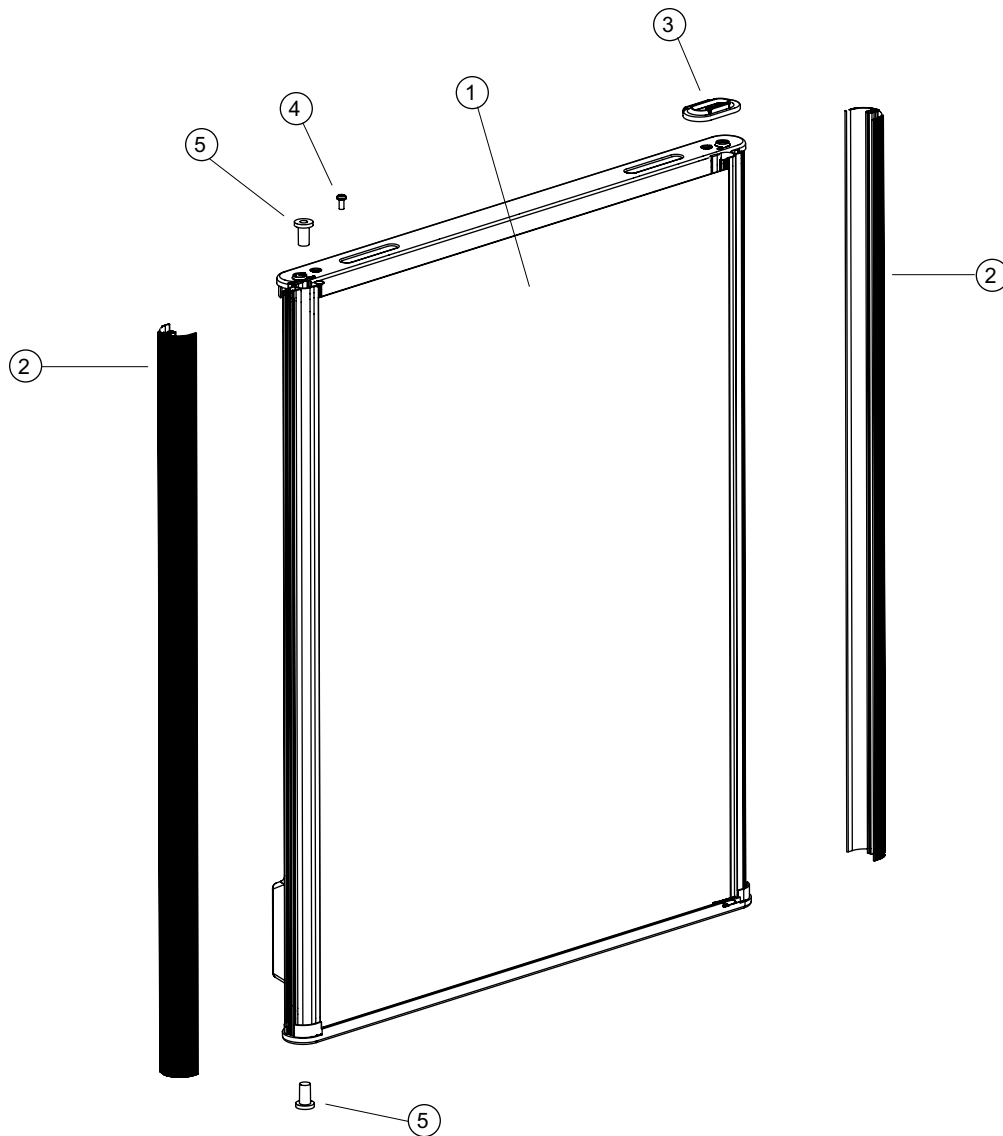

NO.	PART #	DESCRIPTION	N301.3	N304.3
1	619030	DOOR ASSY-CABINET-LT. BROWN	X	
	627461	DOOR ASSY-CABINET-BLACK		X
2	621980	PANEL RETAINER-LT. BROWN (USE 638823)	X	
	638823	KIT SERVICE PANEL RETAINER REPLACEMENT	X	
	626712	PANEL RETAINER-BLACK (USE 638826)		X
	638826	KIT SERVICE PANEL RETAINER REPLACEMENT		X
3	619104	LATCH PLATE-DOOR	X	
	627571	LATCH PLATE-DOOR		X
4	619048	PLUG-HANDLE SCREW	X	
5	61742022	HINGE BUSHING		X

NO LONGER AVAILABLE

DOOR ASSEMBLY AREA-N401.3/N404.3/N501.3/N504.3

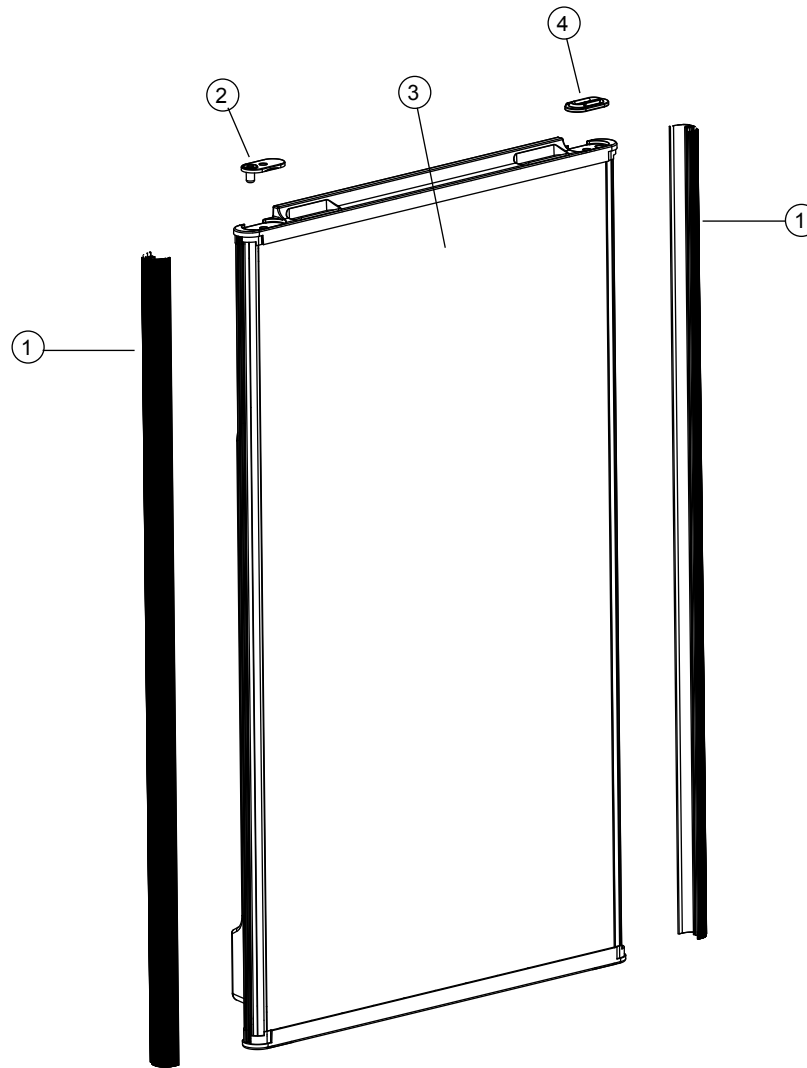

NO.	PART #	DESCRIPTION	N401.3	N404.3	N501.3	N504.3
1	621982	PANEL RETAINER-LT. BROWN	X			
	626725	PANEL RETAINER-BLACK		X		
	621981	PANEL RETAINER-LT. BROWN			X	
	626735	PANEL RETAINER-BLACK				X
2	619104	LATCH PLATE-DOOR	X		X	
	627571	LATCH PLATE-DOOR		X		X
3	620164	DOOR ASSY-CABINET-LT. BROWN	X			
	627465	DOOR ASSY-CABINET-BLACK		X		
	620125	DOOR ASSY-CABINET-LT. BROWN			X	
	627472	DOOR ASSY-CABINET-BLACK				X
4	620200	PLATE-FILLER/DOOR ASSY	X		X	
	627572	PLATE-FILLER/DOOR ASSY		X		X