


070-7100 10mm Striker Pin

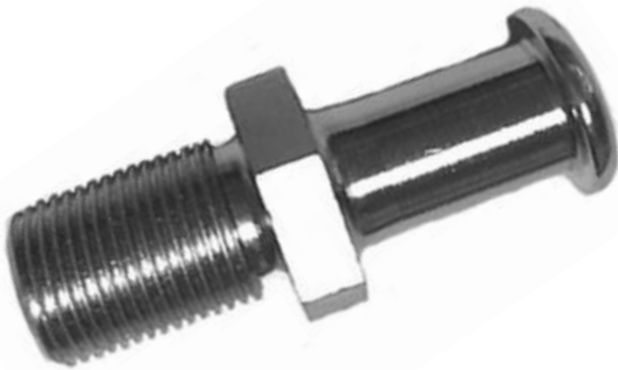

Designed as a companion part for use with single rotor latches that requires a 10mm (.394") diameter striker pin and compliance to FMVSS 206 (ECE R11).

Global Locations:

TriMark Corporation
500 Bailey Avenue
P.O. Box 350
New Hampton, Iowa 50659
United States
Tel: 641-394-3188
Fax: 641-394-2392
1-800-447-0343
www.trimarkcorp.com

TriMark Europe
Cedar Court
Walker road
Bardon Hill
Coalville LE67 1TU
United Kingdom
Tel: +44(0)1530 512460
Fax: +44(0)1530 512461
www.trimarkeu.com

TriMark (Xuzhou)
Building A5 Jingwu Road
Xuzhou Economic
Development Zone
Xuzhou, Jiangsu
221004 PR China
Tel: +86 516 8773 0018
Fax: +86 516 8773 0058
www.trimarkcn.com



TriMark. Interactive. Product. Selector



TriMark



TriMark Corporation

MATERIAL/FINISH:

- Typical materials include 212M36 (En8M) steel (or equivalent)
- Zinc and clear passivate

INSTALLATION:

- M12 x 1.0 thread - torque to 113 N-m (85 ft-lbs) minimum depending upon surface conditions

Individual part dimensions are for reference only. Refer to individual part drawings for complete dimensions, specifications, and installation procedures. Engineering assistance and application drawings are available.

Note: 070-7100 10mm Striker Pin is designed and tested to meet or exceed FMVSS 206 (ECE R11) safety requirements only when used with TriMark's corresponding FMVSS 206 (ECE R11) compliant latches.

STRIKER INSTALLATION:

- Install striker pin in door frame
- Close door carefully and check for interference between head of striker pin and latch components
- Add or remove shims under striker pin as required (outside diameter of shim should be larger than outside diameter of striker pin)
- Adjust striker pin vertically so door is not guided upward or downward while being closed
- CHECK TO DETERMINE THAT BOTH SECONDARY AND PRIMARY LATCHING POSITIONS ARE USABLE
- Door should be latched but not "closed" in secondary position with respect to adjacent surfaces in primary position
- If both primary and secondary positions are not evident, readjust striker pin
- After installation, check door alignment and door seal pressures


For more information visit
www.trimarkcorp.com

PART NO.	DIM 'A'	DIM 'B'	DIM 'C'	DIM 'D'
4713-127	41.5 [1.64]	19.5 [0.77]	17.5 [0.69]	16 AF [0.63]
4713-127-171				
4722-127	49.0 [1.93]	19.5 [0.77]	25.0 [0.98]	
4747-127	49.5 [1.95]	27.5 [1.08]	17.5 [0.69]	
4756-127	60.0 [2.36]	35.0 [1.38]	20.5 [0.81]	19 AF [0.748]
4756-127-790				

②

②

②

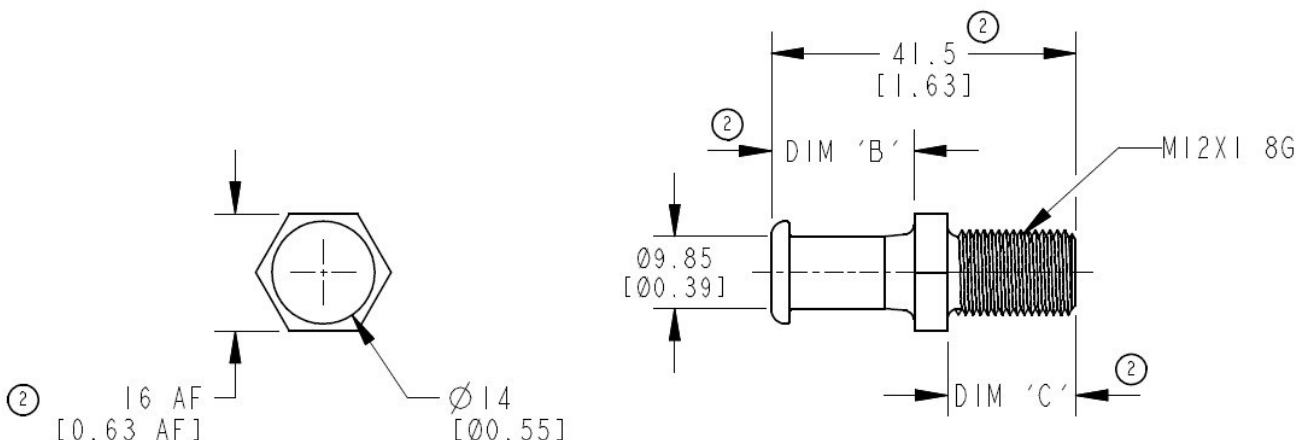



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.