


GLASS REPLACEMENT INSTRUCTION

**** READ ALL INSTRUCTIONS FIRST BEFORE PROCEEDING ****

CAUTION: Always wear eye and hand protection when replacing glass.

- 1) Locate appropriate mirror clip depending if your replacing flat glass or convex glass as shown in view A-A.
- 2) Manually rotate mirror glass to better expose mirror clip and pry off clip with small screw driver at both ends of clip as shown below. Discard clip.
- 3) Remove broken glass (if held in with stick pads) by prying out with screw driver being carefull of sharp edges.
- 4) Once glass is removed, unclip heating element wires located at back of glass taking care that wires do not slip back inside of mirror housing.
- 5) Attach heating element wires to new glass and assemble glass into mirror housing being sure that glass is placed under retaining lip at opposite end of mirror clip as shown below.
- 6) Assemble mirror clip (included in kit) to end of glass housing as shown in view C-C by inserting clip into receiver until clip snaps into place.

Note: Mirror glass clips can be removed as described above or if clip retainer is exposed as shown in view B-B, pinch hooks together with needle nose pliers at points indicated by arrows and pull glass clip out. Follow steps 4 thru 6.

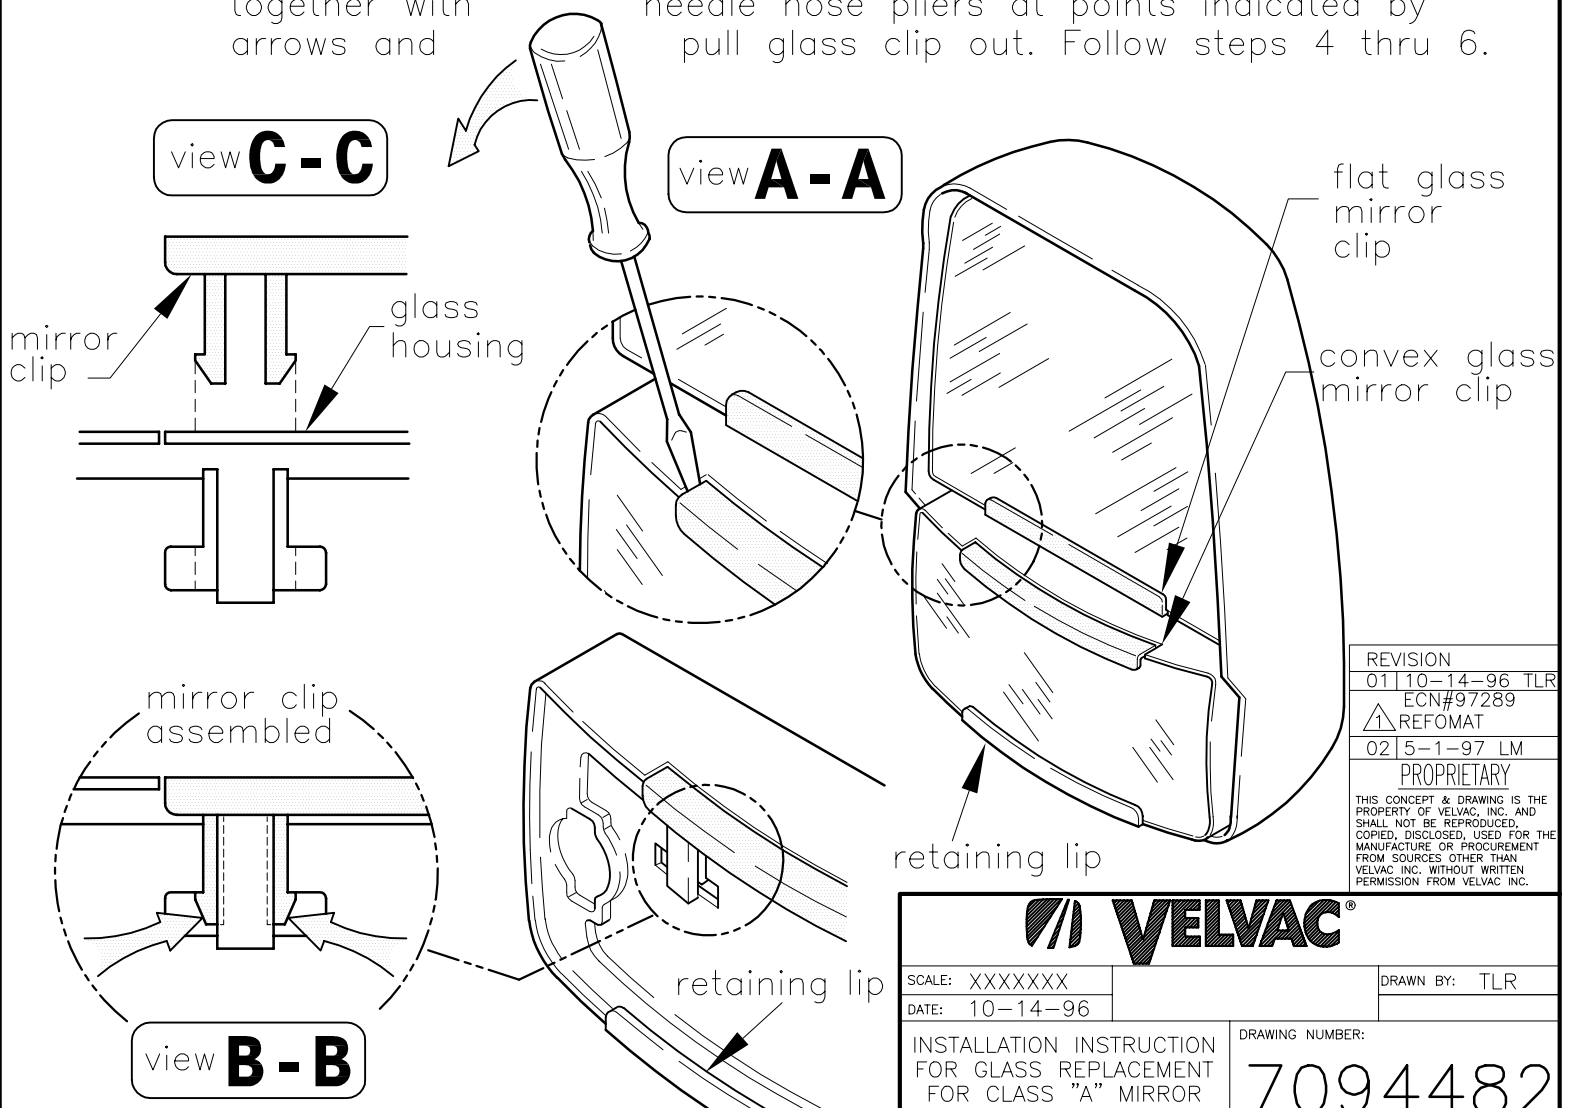



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.