



**OPERATION AND MAINTENANCE
INSTRUCTIONS
FOR
ROOF TOP MARINE AIR CONDITIONERS
AND CEILING PLENUMS**

**MODE D'EMPLOI ET UTILISATION
CLIMATISEUR MARINE
DE TOIT
ET PLENUM DE PLAFOND**

TABLE OF CONTENTS

I.	General Information	2
II.	Standard Ceiling Plenum Control Panel	2
III.	Standard Ceiling Plenum Operation	3
IV.	Maintenance	4
V.	Wall Thermostat Identification And Operation	6
VI.	Warranty Service	8

SECTION I - GENERAL INFORMATION

NOTE

The optional Elect-A-Heat heating assembly is intended to take the chill out of the indoor air when the air is a few degrees too cool for comfort. The heating assembly is an effective “chill chaser”. It is not a substitute for a furnace.

These roof mount air conditioners were designed to operate from a 115 VAC, 60 HZ, 1 Phase power supply. Anytime an air conditioner is not operating properly, the power supply should be examined by a qualified technician to verify that the air conditioner is receiving the proper power supply.

When searching for a qualified technician, please reference your RV Products Authorized Service Center List. The servicers listed are familiar with your recreation vehicle product. If the air conditioner is still under warranty, an authorized servicer must be used for any repair required on the air conditioner. Using an unauthorized servicer may void your warranty.

This is due to the limited electrical power normally available in most trailer parts and/or economic limitations on the use of generators with enough capacity to handle large air conditioners. If more than 1 ton of cooling is desired, then the use of two air conditioners is recommended.

The ability of the air conditioner to maintain the desired inside temperature depends on the heat gain of the recreational vehicle.

The size of the vehicle, amount of window area, amount of insulation, direct exposure to the sun, outside temperature and the number of people in the recreational vehicle may increase the heat gain to such an extent that the capacity of the air conditioner is exceeded.

As a general rule, air entering the air conditioner will be cooled about 15 to 20 degrees, depending on the outside temperature and humidity conditions.

For example, if the air entering the return air grilles in the air conditioner is 80 degrees F, the air leaving the discharge grilles in the air conditioner will be 60 to 65 degrees F.

As long as this temperature difference is being maintained between the return air and discharge air, the air conditioner is operating at its capacity. If the desired inside temperature (normally 80 degrees F) cannot be maintained, then the heat gain of the RV is too great for the capacity of the air conditioner.

Parking the vehicle in a shaded area, keeping windows and doors shut and avoiding the use of heat producing appliances in the vehicle will help to reduce the heat gain. When possible, the addition of insulation and tinted glass (especially in uninsulated vans) should be considered.

SECTION II - CONTROL PANEL

If your RV air conditioner is operated from the control panel located in the ceiling assembly, then there are three controls on the ceiling assembly that help you control the air conditioner. They are as follows:

A. The Selector Switch - The selector switch determines which mode of operation the air conditioner will be in. By rotating the selector switch, the operator can obtain any system function desired. System functions vary depending upon options of both the

roof top unit and ceiling assembly. Figure 1 shows selector switch location and lists all available functions by model.

The “Operation” section explains the operational characteristics of each mode of operation.

B. The Thermostat (temperature control) - In the cooling mode, the thermostat regulates the “ON” and “OFF” temperature setting at which the

compressor will operate.

For “Heat/Cool” models, the thermostat also controls the “ON” and “OFF” temperature settings of the heater assembly (See Figure 1).

- C. Louvers - The louvers are located at both ends of the ceiling assembly shroud and are used in directing the discharge air from the unit.

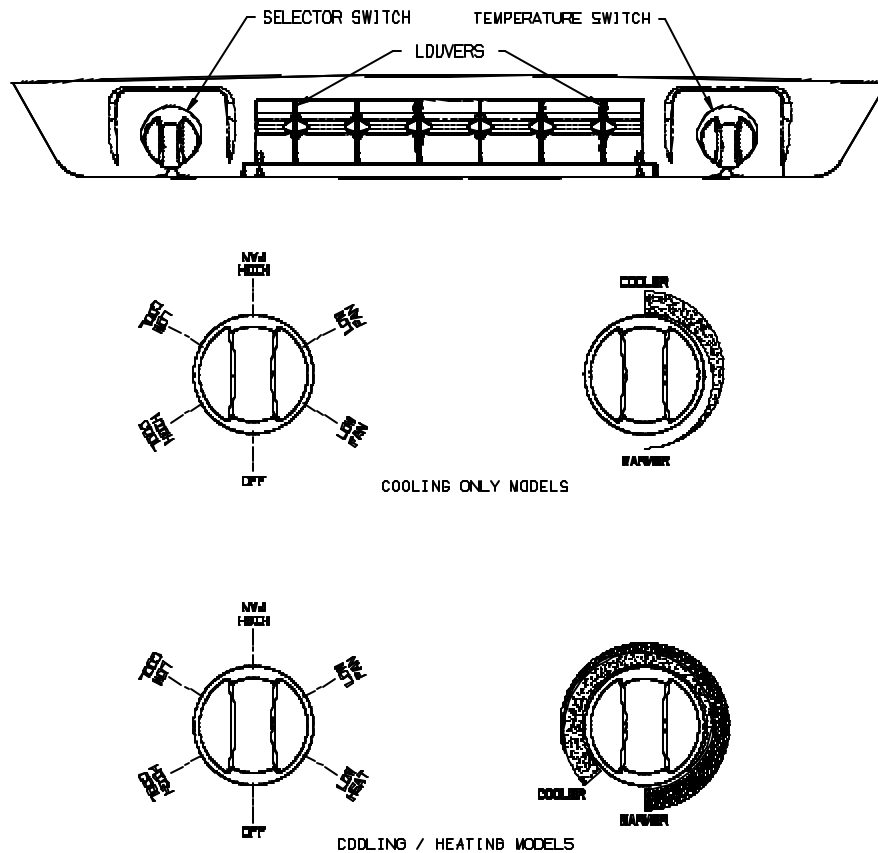


FIGURE 1

SECTION III - OPERATION

I. For Cooling (Refer to Figure 1, Page 3)

- A. Turn the selector switch to the “LOW COOL” or “HIGH COOL” position.
- B. Rotate the thermostat (temperature control) to the position that is the most comfortable to you. The thermostat will turn the compressor on when the temperature of the air entering the air conditioner rises a few degrees above the setting you have selected. When the temperature of the air entering the air conditioner drops below the selected setting, the thermostat will turn the compressor off. The air conditioner, while in the cooling mode, will continue to cycle the compressor on and off in the above mentioned fashion until the selector switch is turned to another mode of operation.

- C. Position the louvers to the desired direction the discharge air is to flow.

II. Operation During Cooler Nights (Cooling Operation)

It is important, when the outdoor temperature drops in the evening or during the night to below 75 degrees F, that the thermostat (temperature control) be set at a midpoint between “Warmer” and “Cooler”. If the setting is at “cooler”, the cooler (evaporator) coil may become iced-up and stop cooling. During the day when the temperatures have risen above 75 degrees F, reset the thermostat switch to the desired setting.

NOTE

Should icing-up occur, it is necessary to let the cooling (evaporator) coil defrost before normal cooling operation is resumed. During this time, operate the unit in the “HIGH FAN” position with the system at maximum air flow. When increased or full air flow is observed, the cooling coil should be clear of ice.

III. Short Cycling

When an air conditioner is in operation, its compressor circulates refrigerant under high pressure. Once off, it will take two to three minutes for this high pressure to equalize.

The air conditioning compressor is unable to start against high pressure. Therefore, once the air conditioner is turned off, it is important to leave it off for two to three minutes before restarting.

IV. For Heating (“Elect-A-Heat” Ceiling Assembly Model Only) Refer to Figure 1, Page 3)

NOTE

The optional Elect-A-Heat heating assembly is intended to take the chill out of the indoor air when the air is a few degrees too cool for comfort. The heating assembly is an effective “chill chaser”. It is not a substitute for a furnace.

Do not expect the heating coil on your heater to glow. Because the fan draws in cold air and forces it over the coil, the coil will not turn red. A hint of red may occur where the moving air does not directly touch the coil.

- A. Turn the selector switch to the “LOW HEAT” position. At “LOW HEAT”, the fan operates on low speed with heat output at maximum.

- B. Rotate the thermostat (temperature control) switch to the position that is the most comfortable to you. The thermostat will turn the heater on when the temperature of the air entering the air conditioning unit drops below this setting a few degrees and automatically turns off when the temperature of the air entering the air conditioner rises a few degrees above this setting. The heater will continue to cycle on and off in this fashion until the selector switch is turned to another mode of operation.

- C. Position the louvers to the desired direction the discharge air is to flow.

Discharge air temperature can be controlled to some extent by opening or closing the louvers.

When the louvers are closed, the warmest localized discharge air is achieved. Fully opened louvers will throw the warm discharge air to the back and front of the vehicle for more efficient circulation and faster warm-up. Although the air temperature is lower with the louvers fully opened, the heating capacity is still the same.

For Air Circulation Only (Refer to Figure 1, Page 3)

- A. Turn the selector switch for “LOW FAN” or for maximum air flow, to “HIGH FAN”.
- B. Position the louvers to the desired direction the discharge air is to flow.

NOTE

When the selector switch is in the “LOW FAN” or “HIGH FAN” position, the blower motor will operate continuously.

SECTION IV - MAINTENANCE

1. Owner

One of the biggest advantages to your new RV Products air conditioner is that the maintenance needed to keep the unit in good care is minimal. In fact about the only thing you, the owner, must take care of is the cleaning and replacement of the filters.

Filters are made from long life natural fibers which can be cleaned and reused, and which completely filter the circulated air when the air conditioner is in operation. If the filters are not cleaned at regular intervals, they may become partially clogged with lint, dirt, grease, etc. A clogged filter will product a loss of air volume and may eventually cause an icing-up of the cooling (evaporator) coil.

IMPORTANT

Do not operate your air conditioner for extended periods of time without the filter installed.

An even more serious condition occurs when the air conditioner is operated without a filter. When this happens the lint, dirt, grease, etc. that are normally stopped by the filter are now accumulating in the cooling coil. This not only leads to a loss of air volume and a possible icing-up of the cooling coil, but could also result in serious damage to the operating components of the air conditioner.

We recommend that the filters be cleaned or changed at least every two weeks when the air conditioner is in operation.

Cleaning and/or changing the filters:

1. Disengage the two 1/4-turn fasteners that secure the ceiling assembly grille to the ceiling assembly (See Figure 2).
2. Lower the grille and filters from the ceiling assembly.
3. Take filters out and either clean or exchange with other filters (See Figure 2).
4. If the vehicle is equipped with a flush mount ceiling assembly, remove the four return air grill screws (See Figure 5, Page 7).
5. Remove filter from grill and either clean or exchange with new filter.

NOTE

If replacement filters are necessary, the filters can be purchased from most RV Products Authorized Service Centers. It is recommended that spare filters be carried with the RV at all times to replace worn, torn or deteriorated filters.

II. Service Person

- A. Electrical - All electrical work and/or inspection should be performed only by qualified service personnel. Contact your nearest RV Products Service Center if electrical problems should arise.

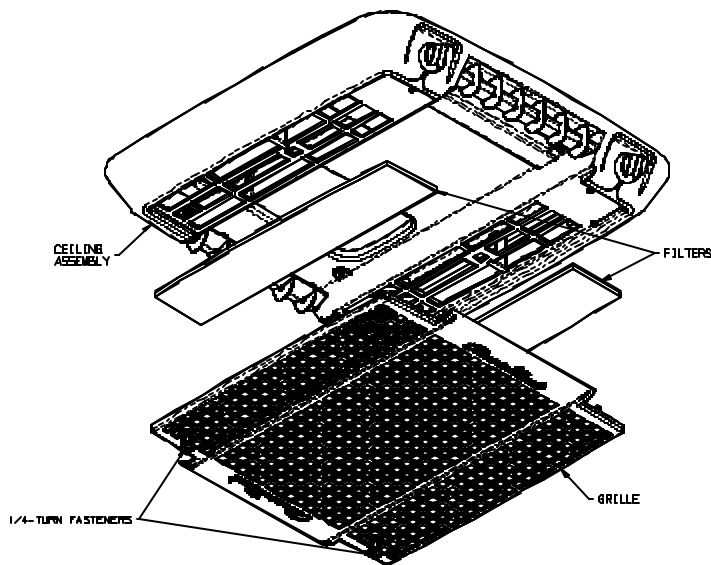


FIGURE 2

- B. Check Points - Failure to start or to cool the air are sometimes problems with air conditioning units. The RV Products air conditioner is designed to operate on 115 volt electrical power. If the compressor on the air conditioner fails to start, check with your RV Products Service Center to determine that the proper wire size is connected to the unit, the proper circuit breakers are installed as protection devices on the electrical circuit and the proper sized extension cord is being used for the distance covered from the utility outlet to the RV. The required minimum wire size is #12 AWG for lengths up to 25 feet (larger wire size for greater distances). Each air conditioning unit must be protected with a 20 amp time delay fuse or circuit breaker.

If the air conditioner continues to trip off the circuit breakers, have an electrician check the starting amperage and running amperage on the unit. If the circuit breaker continues to trip off and the electrical consumption is found to be normal, it will require the replacement of the faulty circuit breaker.

If all electrical power to the air conditioner is normal but neither the fan or the compressor will operate, the connector plug located behind the ceiling assembly control box should be checked to determine whether it is faulty.

On the heating-cooling air conditioner models, if all electrical power to the unit is normal and the fan runs but you never get any heated air, then the electrical plug to the heating unit should be checked for a secure connection. If this does not correct the malfunction, the heating thermostat or limit switch may be faulty.

- C. Mechanical Integrity - The air conditioner should be inspected periodically to be sure that the bolts which secure the unit to the roof are tight and in good shape. Also, an examination of the plastic shroud covering the air conditioner on the top of the roof should be made periodically. Be sure the four mounting screws and washers are snug and holding the shroud to the air conditioner. Also examine the shroud to be sure it is not developing cracks or has suffered damage from impact.
- D. Lubrication

ANGER


DISCONNECT THE POWER SUPPLY TO THE UNIT BEFORE SERVICING TO PREVENT A SHOCK HAZARD OR POSSIBLE INJURY FROM MOVING PARTS.

The blower drive motor on some units may include oiling cups at the top of the motor. There is no requirement to oil the journals under normal operating conditions.

However, if lubrication to the unit is desired, use only SAE 20 non-detergent type oil. DO NOT OVER OIL - three to four drops in each oil hole once a year is sufficient.

SECTION V. WALL THERMOSTAT IDENTIFICATION
AND OPERATION

ELECTRONIC SINGLE STAGE HEAT/COOL THERMOSTAT

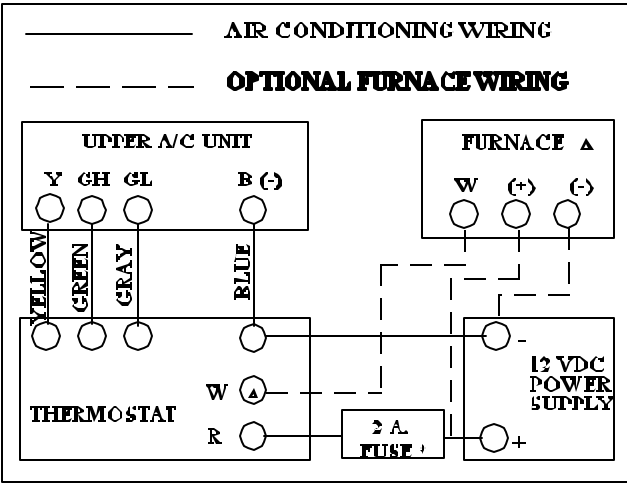

† Suggested Fuse To Protect Wiring Leading To Thermostat.

Δ Not Found In “Cool Only” Applications.

FIGURE 3

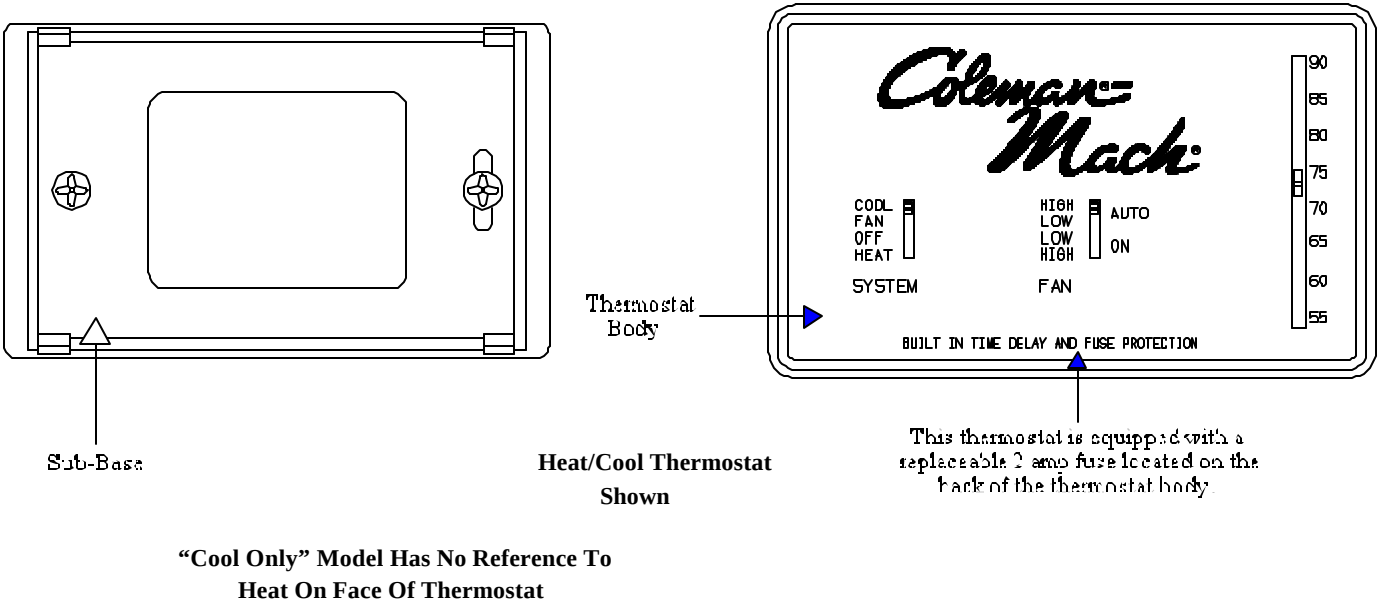


FIGURE 4

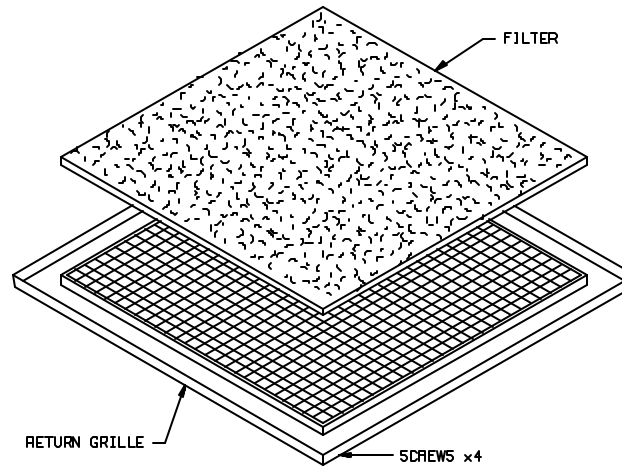


FIGURE 5

OPERATION

The chart below shows the system functions with the “Heat/Cool” thermostat. After the entire air conditioning system (and furnace system) is installed, check each position function. Disregard references to heat functions when using the “Cool Only” thermostat.

SHOWS POSITION OF SWITCH								OPERATION
SYSTEM				FAN				
* HEAT	COOL	OFF	FAN	AUTO HI	LO	ON LO	HI	
☐	☐	☒	☐	☐	☐	☐	☐	No functions occur
☐	☐	☐	☒	☐	☐	☐	☐	Air conditioner fan runs at high speed continuously regardless of fan switch setting or setpoint. No other functions occur.
☐	☒	☐	☐	☒	☐	☐	☐	Air conditioner compressor and high speed fan cycle to satisfy setpoint.
☐	☒	☐	☐	☐	☒	☐	☐	Air conditioner compressor and low speed fan cycle to satisfy setpoint.
☐	☒	☐	☐	☐	☐	☒	☐	Air conditioner compressor cycles to satisfy setpoint. Air conditioner low speed fan runs continuously.
☐	☒	☐	☐	☐	☐	☐	☒	Air conditioner compressor cycles to satisfy setpoint. Air conditioner high speed fan runs continuously.
☒ *	☐	☐	☐	☒	☐	☐	☐	Furnace and furnace high speed blower cycle to satisfy setpoint. Furnace blower operates from sequencer or time delay in furnace. Air conditioning fan does not run.
☒ *	☐	☐	☐	☐	☒	☐	☐	
☒ *	☐	☐	☐	☐	☐	☒	☐	
☒ *	☐	☐	☐	☐	☐	☐	☒	

All cooling functions controlling to setpoint have a short cycle protection time delay of 3 minutes. There will be no delay if the cycle **OFF** time exceeds 3 minutes.

* There is no heat switch or furnace function available with the “Cool Only” thermostat.

SECTION VI - WARRANTY SERVICE

Let's face it. Sometimes even the best products may need service. To obtain warranty service on your RV Products air conditioner, please contact your selling dealer, or you may access our web site on the Internet at www.rvcomfort.com for answers to the most frequently asked questions and service center locations.

RV Products support help may be accessed by E-mail at RVPSupport@Airxcel.com.

All written correspondence should be directed to:

**RV Products
A Division of Airxcel, Inc.
P.O. Box 4020
Wichita, KS 67204**

IMPORTANT

4. Carefully read your limited two year product warranty which is packed with the product.
5. An optional three year extended parts only contract is available at an additional cost of \$89.95. To obtain this optional three year parts contract, fill out the application card stapled to the front of this envelope. Please mail the card and a check or money order to the address above. Applications must be made **within ninety (90) days** of the original purchase.
6. Inquiries about your RV Products air conditioner must include the model and serial numbers and the date of purchase. The model and serial numbers can be found on the I.D. label located on the air conditioner basepan return air opening at the bottom of the roof unit. This information may also be found on the air conditioner rating plate.

TABLE DES MATIÈRES

I.	Renseignements généraux	8
II.	Panneau de contrôle du plenum de plafond standard	9
III.	Fonctionnement du plenum de plafond standard	9
IV.	Entretien	10
V.	Fonctionnement et identification du thermostat mural	12
VI.	Service de garantie	12

SECTION I. RENSEIGNEMENTS GÉNÉRAUX

REMARQUE

Le montage de chauffage Elect-A-Heat optionnel est conçu pour couper le froid de l'air à l'intérieur du véhicule qui est un peu trop frais pour le confort. Le système de chauffage est efficace pour "enlever le froid" et non pas pour remplacer l'appareil de chauffage.

Ces climatiseurs de toit furent conçus pour fonctionner à partir d'une source d'alimentation de 115 V. c.a., 60 hz, 1 phase. Lorsqu'un climatiseur ne fonctionne pas correctement, l'alimentation électrique doit être examinée par un technicien qualifié afin de vérifier que le climatiseur reçoit la bonne alimentation de courant.

Se reporter à la liste de centres de service autorisés de RV Products pour trouver un technicien qualifié. Les centres

connaissent votre produit de véhicule récréatif. Si le climatiseur est encore sous garantie, il faut utiliser un agent autorisé pour toute réparation nécessaire. Le fait d'utiliser un agent non-autorisé peut annuler votre garantie.

Ceci peut provenir du fait qu'il y a des sources limitées d'alimentation électrique disponibles dans la plupart des parcs de caravanes et/ou des limites économiques quant à l'utilisation de génératrices ayant une capacité suffisante pour de gros climatiseurs. S'il faut plus d'une tonne de refroidissement, alors il est recommandé d'utiliser deux climatiseurs.

La capacité du climatiseur de maintenir la température intérieure voulue dépend du gain de chaleur du véhicule récréatif.

La taille du véhicule, le nombre de fenêtres, la quantité d'isolant, l'exposition directe au soleil, la température extérieure ainsi que le nombre de personnes dans le véhicule peuvent tellement augmenter la chaleur que la capacité du climatiseur est dépassée.

En règle générale, l'air qui entre dans le climatiseur sera refroidi d'environ 15 à 20 degrés selon la température et l'humidité de l'extérieur.

Par exemple, si l'air qui entre dans les grilles d'entrée d'air du climatiseur est de 80 degrés F (24 degrés C), l'air quittant les grilles de sortie d'air du climatiseur sera de 60 à 65 degrés F (13 à 16 degrés C).

Aussi longtemps que cette différence de température est maintenue entre l'entrée et la sortie d'air, le climatiseur fonctionne à sa capacité. Si l'on ne peut conserver la température intérieure voulue (normalement 80 degrés F (24 degrés C)), alors le gain de chaleur du VR est trop élevé pour la capacité du climatiseur.

Le fait de stationner le véhicule à l'ombre, de garder les fenêtres et les portes fermées et d'éviter d'utiliser des appareils dégagant de la chaleur aidera à réduire le gain de chaleur. On peut aussi considérer ajouter de l'isolant et des verres teintés (tout particulièrement dans les caravanes non-isolées).

SECTION II. PANNEAU DE CONTRÔLE

Si votre climatiseur de VR fonctionne à partir d'un panneau de contrôle au plafond, il y a alors trois commandes au plafond pour aider à contrôler le climatiseur. Les voici:

- A. Le sélecteur - Le sélecteur détermine le mode de fonctionnement du climatiseur. En le tournant, l'opérateur peut obtenir toute fonction du système voulue. Celles-ci varient selon les options de l'unité du toit et du plafond. Le figure 1 illustrent l'emplacement du sélecteur et énumèrent toutes les fonctions disponibles par modèle.

La section "fonctionnement" explique les caractéristiques de fonctionnement de chaque mode.

- B. Le thermostat (contrôle de température) - sous le mode de refroidissement, le mode de refroidissement, le thermostat contrôle le réglage de température "ON" (marche) et "OFF" (arrêt) du chauffage.

Pour les modèles "chaleur/refroidissement", le thermostat contrôle aussi les réglages de température "ON" (marche) et "OFF" (arrêt) du radiateur. Voir figure 1.

- C. Aérateurs - Les aérateurs se trouvent aux deux extrémités du couvercle du plafond et servent à diriger la décharge d'air de l'appareil.

SECTION III. FONCTIONNEMENT

I. Pour le refroidissement (se reporter aux figure 1, page 3)

- A. Placer le sélecteur à la position "LOW COOL" (refroidissement faible) ou à "HIGH COOL" (refroidissement fort).
- B. Faire tourner le thermostat (contrôle de température) à la position la plus confortable. Le thermostat met le compresseur en marche lorsque la température de l'air qui entre dans le climatiseur augmente de quelques degrés au-dessus du réglage choisi. Lorsque la température de l'air qui entre dans le climatiseur tombe sous ce réglage, il arrêtera le compresseur. Le climatiseur, en mode de refroidissement, continuera à mettre le compresseur en marche puis à l'arrêter de la manière indiquée précédemment jusqu'à ce que le sélecteur soit placé dans un autre mode de fonctionnement.
- C. Placer les aérateurs dans la direction voulue pour

l'écoulement de l'air déchargé.

II. Fonctionnement durant les nuits plus froides (fonctionnement de refroidissement)

Il est important, lorsque la température extérieure descend au cours de la soirée et la nuit sous 75 degrés F, de régler le thermostat (contrôle de température) à un point central entre "Warmer" (plus chaud) et "Cooler" (plus frais). Si le réglage est à "Cooler", le serpentin du refroidisseur (évaporateur) peut accumuler de la glace et cesser de refroidir. Durant le jour, lorsque les températures dépassent 75 degrés F, régler le commutateur du thermostat au réglage voulu.

REMARQUE

S'il y a de la glace qui s'accumule, il est alors nécessaire de laisser le serpentin du refroidisseur (évaporateur) dégeler avant de reprendre le fonctionnement de refroidissement normal. Durant ce temps, faire fonctionner l'appareil en position "HIGH FAN" (ventilateur fort) avec le système au

maximum de la circulation d'air. Lorsque cette circulation augmente ou fonctionne au maximum, le serpentin du refroidisseur ne devrait pas avoir de glace.

III. Fonctionnement en courts cycles

Lorsqu'un climatiseur fonctionne, son compresseur fait circuler le réfrigérant sous haute pression. Arrêté, il faut deux à trois minutes pour que cette haute pression s'égalise.

Le compresseur du climatiseur est incapable de démarrer contre une haute pression, donc, lorsque le climatiseur est arrêté, il est important de le laisser arrêter pendant deux à trois minutes avant de le faire redémarrer.

IV. Pour chauffer (modèle de plafond "Elect-A-Heat" seulement) (se reporter aux figure 1, page 3)

REMARQUE

Le montage de chauffage Elect-A-Heat optionnel est conçu pour couper le froid de l'air à l'intérieur du véhicule qui est un peu trop frais pour le confort. Le système de chauffage est efficace pour "enlever le froid", mais non pas pour remplacer l'appareil de chauffage.

Ne pas s'attendre à ce que le serpentin de chauffage de votre appareil de chauffage produise de l'incandescence. Puisque le ventilateur aspire de l'air froid et le fait passer sur le serpentin, celui-ci ne peut devenir rouge. Il peut y avoir une incandescence lorsque l'air passe directement sur le serpentin.

- A. Placer le sélecteur à "LOW HEAT" (faible chaleur) et le ventilateur fonctionne à vitesse réduite la sortie de chaleur au maximum.
- B. Faire tourner le thermostat (contrôle de température) à la position la plus confortable. Le thermostat met le compresseur en marche lorsque la température de l'air qui entre dans le climatiseur diminue de quelques degrés sous le réglage choisi. Lorsque la

température de l'air qui entre dans le climatiseur augmente au-dessus de ce réglage, il arrêtera le compresseur. Le chauffage continuera à passer de marche à arrêt de la manière indiquée précédemment jusqu'à ce que le sélecteur soit placé dans un autre mode de fonctionnement.

- C. Placer les aérateurs dans la direction voulue pour l'écoulement de l'air déchargé. La température de décharge d'air peut être contrôlée jusqu'à un certain point en ouvrant ou en fermant les aérateurs.

Lorsque les aérateurs sont fermés, l'on peut atteindre l'air de décharge le plus chaud. Les aérateurs entièrement ouverts déchargeront l'air chaud vers l'arrière et l'avant du véhicule pour une circulation plus efficace et un réchauffement plus rapide. Bien que la température de l'air soit moins élevée lorsque les aérateurs sont entièrement ouverts, la capacité de chauffage sera encore la même.

Pour la circulation d'air seulement (se reporter aux figure 1, page 3)

- A. Placer le sélecteur à "LOW FAN" (ventilateur faible) ou pour une circulation d'air maximale, à "HIGH FAN" (ventilateur fort).
- B. Placer les aérateurs dans la direction voulue pour l'écoulement de l'air déchargé.

REMARQUE

Lorsque le sélecteur est en position "LOW FAN" ou "HIGH FAN", le moteur à soufflerie fonctionne continuellement.

SECTION IV. ENTRETIEN

1. Propriétaire

Un des plus grands avantages de votre nouveau climatiseur de RV Products est que l'entretien nécessaire pour conserver votre appareil en bon état est minime. En fait tout ce que vous avez à faire, comme propriétaire, est de nettoyer et de remplacer les filtres.

Les filtres sont fabriqués de fibres naturelles de longue durée que l'on peut nettoyer et réutiliser, et qui filtrent entièrement l'air circulé lorsque le climatiseur fonctionne. Si les filtres ne

sont pas nettoyés à intervalles réguliers, ils peuvent être bloqués partiellement par de la poussière, de la graisse, de la peluche, etc. Un filtre bloqué provoquera une perte de volume d'air et pourra éventuellement être responsable de l'accumulation de glace sur le serpentin du refroidisseur (évaporateur).

IMPORTANT

Ne pas faire fonctionner votre climatiseur pendant de longues périodes sans filtre.

Lorsque le climatiseur fonctionne sans filtre, il peut y avoir un problème plus grave car la poussière, la graisse, la peluche, etc. arrêtées normalement par le filtre s'accumulent maintenant dans le serpentin du refroidisseur. Ceci provoque une perte de volume d'air et une accumulation possible de glace sur le serpentin du refroidisseur, mais cela peut aussi provoquer de graves dommages aux composants du climatiseur.

Nous recommandons de nettoyer ou de changer les filtres au moins toutes les deux semaines lorsque le climatiseur fonctionne.

Nettoyer et/ou changer les filtres:

1. Retirer les deux vis qui retiennent le couvercle du montage du plafond. Voir figure 2.
2. Abaissez la grille et les filtres de l'assemblage du plafond.
3. Sortir les filtres et nettoyer ou échanger avec d'autres filtres (voir figure 2).
4. Si le véhicule est doté d'un montage de plafond affleurant, retirez les quatre vis des grilles de reprise d'air (voir la figure 5, page 7).
5. Retirez le filtre de la grille et nettoyez-le ou remplacez-le avec un nouveau filtre.

REMARQUE

Si des filtres de remplacement sont nécessaires, on peut se les procurer auprès de la plupart des Centres de service autorisés RV Products. Il est recommandé de toujours avoir des filtres de rechange dans votre VR en tous temps pour remplacer les filtres détériorés, usés ou déchirés.

II. Responsable de l'entretien

- A. Électricité - Tous les travaux et/ou inspections électriques ne doivent être effectués que par un personnel d'entretien qualifié. S'adresser au Centre d'entretien RV Products s'il y a des problèmes.
- B. Points de contrôle - Les climatiseurs ont quelquefois des problèmes de démarrage ou de refroidissement. Le climatiseur RV Products est conçu pour fonctionner sur un courant électrique de 115V. Au cas où le compresseur du climatiseur refuserait de démarrer, s'adresser au Centre d'entretien RV Produits pour déterminer si le climatiseur est alimenté par un câblage de calibre adéquat, si la protection du circuit électrique est assurée par des disjoncteurs appropriés et si le calibre du câble de

rallonge, raccordant la prise de secteur du véhicule, est aussi adéquat. Jusqu'à 7,6 m, le calibre minimum de fil requis est 1,5 mm (#12 AWG). Un calibre plus fort est requis pour une distance plus longue. Chaque climatiseur doit être protégé par un fusible à action différée ou par un disjoncteur.

Si le climatiseur fait déclencher continuellement le disjoncteur, faire vérifier par un électricien l'ampérage de démarrage et de marche. Si le déclenchement du disjoncteur se poursuit alors que la consommation électrique reste normale, il sera nécessaire de remplacer le disjoncteur défectueux.

Si, alors que l'alimentation électrique du climatiseur est normale, ni le ventilateur ni le compresseur ne fonctionnent, vérifier la connexion de la prise située à l'arrière de la boîte de commande du module.

Si l'alimentation en électricité du module est normale et le ventilateur fonctionne, mais si vous ne recevez pas d'air chaud, vérifier la connexion de la fiche du fil de raccordement du module de chauffage pour s'assurer que le contact est bien établi. Si ceci ne corrige pas le problème, il se peut que le thermostat ou le disjoncteur de sécurité soit défectueux.

- C. Intégrité mécanique - Le climatiseur devrait être inspecté régulièrement pour s'assurer que les boulons qui retiennent l'appareil au toit sont serrés et en bon état. Il serait aussi utile de faire un examen du couvercle de plastique couvrant le climatiseur sur le toit. S'assurer que les quatre vis de montage et les rondelles sont bien en place et retiennent le couvercle au climatiseur. Examiner aussi le couvercle pour s'assurer qu'il n'y a aucune fissure ou de dommages suite à un choc.
- D. Lubrification

DANGER

DÉBRANCHER LA SOURCE D'ALIMENTATION À L'APPAREIL AVANT TOUT ENTRETIEN POUR ÉVITER LES DANGERS DE CHOC ÉLECTRIQUE OU LA POSSIBILITÉ DE BLESSURES CAUSÉES PAR LES PIÈCES MOBILES.

Le moteur d'entraînement de la soufflerie de certains appareils peut inclure des godets graisseurs au sommet du moteur. Il n'y a aucune raison d'huiler les tourillons sous des conditions normales de fonctionnement. S'il faut toutefois lubrifier l'appareil, utiliser seulement de l'huile du type non-détergent SAE 20. NE PAS METTRE TROP D'HUILE - trois à quatre gouttes dans chaque trou d'huile, une fois par an, suffisent.

SECTION V. FONCTIONNEMENT ET IDENTIFICATION DU THERMOSTAT MURAL

FONCTIONNEMENT

Le tableau suivant illustre les fonctions du système avec thermostat «chaleur/refroidissement». Après l'installation complète du système de climatisation (et du système de

chauffage), vérifiez chaque fonction de position. Ignorez les références aux fonctions de chaleur en utilisant le thermostat de «refroidissement seulement».

VI. GARANTIE

Il convient de le dire, même les produits de la plus haute qualité ont parfois besoin d'être réparés. Pour vous prévaloir de réparations sous garantie pour votre climatiseur RV Products, veuillez communiquer avec votre détaillant. Vous pouvez également visiter notre site Web à l'adresse www.rvcomfort.com pour consulter les réponses aux questions les plus fréquemment posées ainsi que les adresses des centres de service.

De même, vous pouvez entrer en contact avec le service de soutien à la clientèle par courrier électronique au RVPSupport@Airxcel.com.

Toute correspondance écrite doit être envoyée à l'adresse suivante:

RV Products
A Division of Airxcel, Inc.
P.O. Box 4020
Wichita, KS 67204

IMPORTANT

1. Lisez soigneusement la garantie limitée de deux ans, laquelle est emballée avec le produit.
2. Vous pouvez également vous procurer un contrat prolongé de trois ans couvrant uniquement les pièces détachables moyennant un supplément de 89,95 \$US. Pour ce faire, remplissez la carte de demande agrafée à l'avant de cette enveloppe. Veuillez envoyer la carte et un chèque ou un mandat à l'adresse mentionnée ci-dessus. Les demandes doivent être **faites dans les quatre-vingt-dix (90) jours** suivant l'achat initial.
3. Pour tout renseignement à propos de votre climatiseur de RV Products, vous devez indiquer le nom du modèle, les numéros de série et la date d'achat. Le nom du modèle et les numéros de série sont inscrits sur l'étiquette de l'identification placée sur l'orifice de reprise dans le plateau situé à la partie inférieure du climatiseur de toit. Ces informations figurent aussi sur la plaque signalétique du climatiseur.

RV Products
A Division of Airxcel, Inc.
P.O. Box 4020
Wichita, KS 67204



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.