



An AIRXCEL Brand

AMERICAN SERIES WINDSHIELD SHADE SYSTEM

Thank you for your interest in the MCD Windshield Shade System as an aftermarket installation in your Class A motorcoach. The Windshield Shade is designed to be used as a full side-to-side visor while you are driving and includes a safety feature that will automatically stop the shade before it impacts the driver's visibility. Both the day and night shades include this option. When the ignition is in the off position, both shades have full range of motion from the top to the dash.

The American Series Windshield Shade is a state-of-the-art system that includes the MCD Clearview II™ Solar Screen, which is the best on the market and provides ultimate heat and UV protection, excellent daytime privacy, and superior outward daytime visibility. The night shade is comprised of 100% privacy/light blocking materials and is available in a variety of styles and colors.

For a complete Class A Cockpit retrofit in the American Duo® Series, pricing will typically range between \$1,300-\$1,500 depending on the sizes of the driver, passenger and door windows. This price range includes a powered windshield shade, manual driver and passenger side shades, manual Solo® night shade for the door window, and a screen door pull-up shade.

**This price does not include installation or shipping charges.
Installation at MCD generally takes between four to six hours.**

MCD highly recommends that you have your cockpit shades installed at our manufacturing headquarters in McKinney, TX or by one of our factory-trained and certified MCD dealers. A complete listing of MCD dealers can be found on the website at www.mcdinnovations.com.

However, if you choose to go forward with your own installation please read the attached information on the details of the MCD American Series Windshield Shade System.

When you are ready to place your order please e-mail the order form to customerservice@mcdinnovations.com or you can fax it to 972-542-4881.

Allow 2 weeks of production for your order.

**All MCD shades are custom built to the measurements you provide and are NON-REFUNDABLE.
No REMAKES will be made under any circumstances.**

Please take care when placing your order.



A Division of AIRXCEL



An AIRXCEL Brand

AMERICAN SERIES WINDSHIELD SHADE SYSTEM

WHAT TO LOOK FOR WHEN ORDERING A MCD WINDSHIELD SHADE:

In order to install a one-piece windshield shade across the front of the coach, you must have a clear and straight line from your passenger A-pillar cover to your driver A-pillar cover. If you cannot envision a 2"x4" board on edge going across that space, then you will need to modify your cabinetry so you can put a one-piece shade there. The shade assembly dimensions are approximately 2"x4". The bottom edge of the material will be slightly below the 4" dimension. If you need to have a flap at the bottom of the material, that will increase the drop length below the roller mechanism.

AS YOU PROCEED, THERE ARE SEVERAL THINGS TO KEEP IN MIND:

- You must have an accurate measurement, which means removing the A-pillar covers and knowing just how wide you can make the overall shade assembly.
- Determine which way the material needs to roll off the roller and if you will need to have a stacked or side-by-side mount.
- When measuring the drop height you will need to see if you require a flap to accommodate the dash hump.
- Running electric for the ignition wire that allows for a secondary stop point while the ignition is on.
- A-pillar modification may be needed to create a flat surface for the material to roll down on.
- Trim boards may be needed to cover the roller mechanism once your shades are installed.

A-PILLAR MODIFICATION:

- What you want to accomplish with the A-pillar modification is to create a flat surface for the shade to roll down on. Your A-pillars may be different and will need another form of modification.
- Another option is to build a channel of sorts extending towards the inside of the coach for the shade to roll down on. Some use a stained trim board for a finished look and attach it to the inside of the existing A-pillar cover.





MATERIAL ROLL DIRECTION:

- You will have to determine if the shades should roll in towards the coach or if they should roll towards the windshield.
- You may also consider whether the shade should be a side-by-side mount, with the shades rolling in towards the center of the mechanism.

Duo® Day/Night Roller Shade Specs:

O=Night Shade
●=Day Shade

Solo® Night Roller Shade Specs:

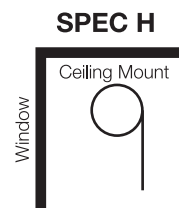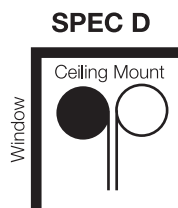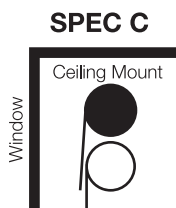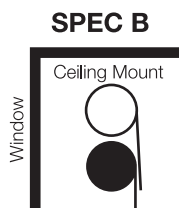

A Division of AIRXCEL



An AIRXCEL Brand

AMERICAN SERIES WINDSHIELD SHADE SYSTEM

DETERMINE IF YOU NEED AN ENCLOSED ROD OR AN ENCLOSED ROD WITH FLAP:

Looking side to side, does the dash hump encroach on that straight line from one side of the front of the A-pillar cover to the other front side?

- If it does, you will need a flap on the bottom of your shade to allow for some flex to move around the dash hump.
- If not, you can just use an enclosed rod at the bottom of your windshield shade.

MEASURING FOR FLAP HEIGHT, IF NEEDED:

- When you measure your drop, you will measure from where the shade will be mounted down to the top of the dash.
- For the flap height. Determine where the shade will touch your dash hump. Measure from that point to the top of the flat part of your dash. You will tell us that measurement separately, but it is included in the overall length of the shade.

DRIVER, PASSENGER AND DOOR ROLLER SHADES:

If you would like to install a full set of MCD Day/Night Roller Shades for the cockpit area of your coach, the driver, passenger, and door shades are available in manual, remote, or switch electric operations.

Below are some things to look for when measuring and ordering shades for the below window locations:

DRIVER WINDOW

- When measuring for the driver window please take into consideration the installation of the windshield shade. You will need to make sure that you do not measure too far forward and run into the windshield shade system.
- If you have an angled driver window look across the bottom of the window and at the furthest point closest to the windshield look up and see if there is enough room to mount the roller shade mechanism at the top of the driver window.
- If there is not enough room, you will need to reduce the size of the shade so it will fit across the top.
- If you have an angled driver window and unable to get full coverage with the roller shade you can create a blackout piece so you can have 100% privacy when needed.

PASSENGER WINDOW:

MCD recommends that you install two separate shades for the passenger window and the door.

DOOR:

- MCD offers a Screen Door Pull-Up Shade that mounts to the screen door of your coach. Mounting to the screen door allows you the ability to go in and out of your coach without having to raise and lower your shade.
- The Pull-Up Shade is available in the MCD Clearview II™ Day screen material or the 100% Privacy/Light Blocking vinyl material.
- If you purchase a Pull-Up Shade in the MCD Clearview II™ Day Screen Material you will need to purchase a separate Solo Night Shade to use for privacy.



A Division of AIRXCEL



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.