

MTS-ZB

RENOGY Photovoltaic Module
Z-Bracket Mounting System



RENOGY
THE FUTURE OF CLEAN ENERGY

2775 E Philadelphia St, Ontario, CA 91761
1-800-330-8678

Important Safety Instructions

Please save these instructions.

This manual contains important safety, installation, and operating instructions for the Renogy Z-Bracket Mount hardware system. The following symbols are used throughout the manual to indicate potentially dangerous conditions or important safety information.

 **WARNING:** Indicates a potentially dangerous condition. Use extreme caution when performing this task.

CAUTION: Indicates a critical procedure for safe and proper operation of the system.

NOTE: Indicates a procedure or function that is important to the safe and proper operation of the system.

General Safety Information

- Read all of the instructions and cautions in the manual before beginning the installation.
- Installation should be completed by a professional contractor to avoid damages that may be incurred due to improper sealing.
- Do **NOT** substitute parts from other manufacture ring sources, doing so may void the warranty and/or result in an unstable system
- This system is **NOT** possess any compliance with residential structural codes and should not be used in place of a system that is, if so required by local regulations

Installer Responsibilities

- Installation compliance with any applicable codes which are in force at the installation site
- Installation compliance and compatibility with all system components and the environment including but not limited to roofing, system components, etc.
- Verification that all project information is accurate

Table of Contents

General Information	4
Identification of Parts	5
Installation	7
Mating Brackets to Panel Frame.....	9
Install of Panel to General Mounting Surface	13
Install of Panel to RV Roofs.....	18
Z-Bracket Dimensions	25
Compatibility	27






General Information



The Renogy Z-Bracket Mount System is designed to support the installation of single panel units, generally in off-grid installations. These units are ideal for installation on RV roofs and non-inhabited dwellings such as sheds or garages. It is also suited as attachment to a user made structure such as a wooden frame. The system comes complete with all fasteners to secure the system to the installation surface. This system makes the installation of small solar systems easy, affordable and quick.

Key Features

- Lightweight
- Aluminum corrosion-free construction
- Ideal for RV's and boats
- Ease of installation
- 1-year material warranty

Identification of Parts

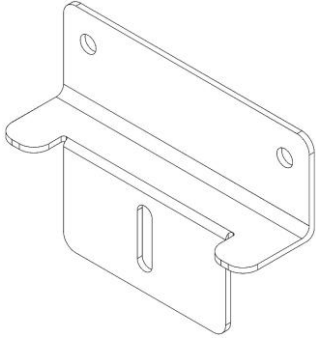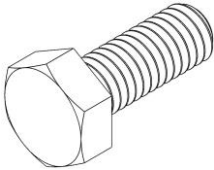
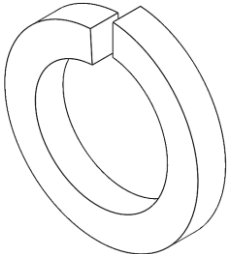
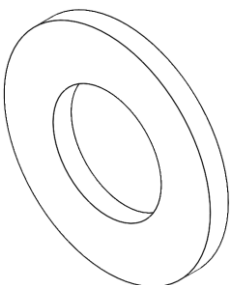
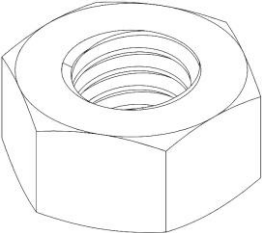
Image	Component	Description
	Z-Bracket	Main component. Secures panels to mounting surface using the included fasteners.
	M6-16 Hex Cap Bolt	Fastener used to secure panel to Z-Bracket.
	M6 Split Lock Washer	Deformable washer which creates a spring force from deformation. Provides the necessary preload to cap bolt.
	M6 Flat Washer	Normal flat washer used to prevent surface marring on components from the use of the Lock Washers.
	M6 Hexagonal Nut	Used to tighten down joint between Z-Bracket and panel.


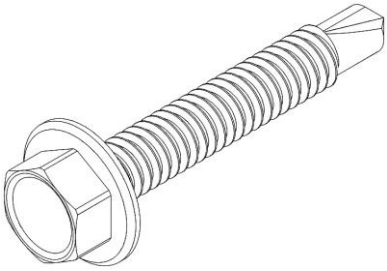
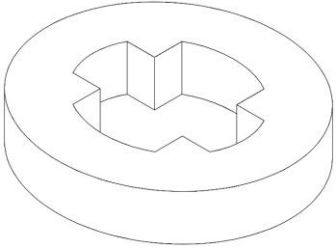
	#11 Self-Drilling Cap Screw	Screw capable of self-drilling into the mounting surface. Used to secure the Z-Bracket to the mounting surface.
	Plastic Retaining Ring	Placed between the self-drilling screws and the Z-Bracket. Should come threaded over self-drilling screws in package.

Installation

Recommended tools to have before installation:



The following tools and equipment are highly recommended to have available to assist with installation but are in no way a comprehensive list of tools that can ease installation. Installers feel free to substitute comparable equipment where appropriate.

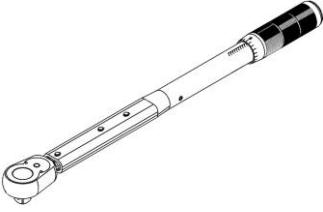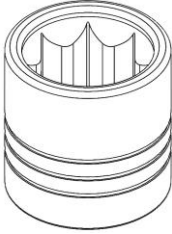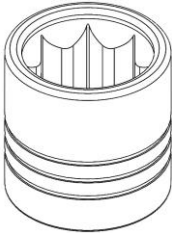

Image	Component	Description
	Ratchet/Torque Wrench	Allows for tightening of fasteners. Torque wrench allows for careful monitoring of torque value to prevent overtightening.
	6mm Socket Drive	Used with ratchet to tighten down bolted joint between panel and Z-Bracket.
	5/32" Socket Drive	Used with ratchet to drive screw into mounting surface and secure Z-bracket to it.
	Center Punch	Indents mounting surface to reduce screw wandering during initial drive.
	Crescent Wrench	Used to prevent rotation of the nut during joint tightening until split lock washer has effectively engaged.

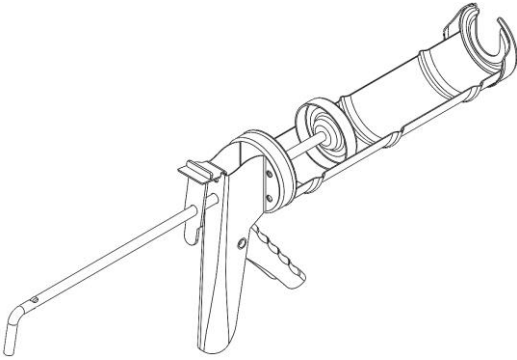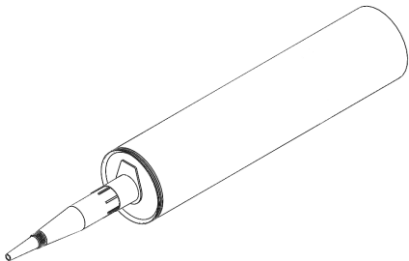
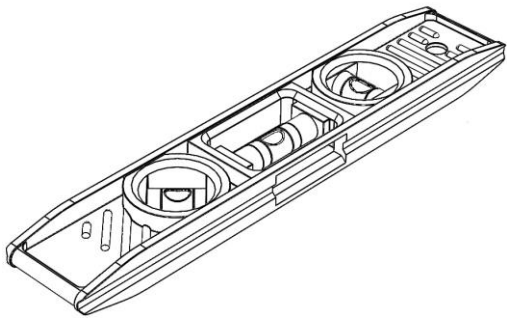
	Tape Measure	May be useful in planning Z-Bracket configuration and positioning.
	Caulking Gun	Used to direct sealant into penetrations to avoid leaking.
	Compatible Sealant	Sealant compatible with your specific installation.
	Spirit Level	Used to ensure panel is level and/or plumb to the mounting surface and orientation.

⚠ WARNING: Installation on shingle roofs is not recommended. System is not designed with these roof types in mind. Fasteners will not penetrate framing deep enough and will likely cause heavy issues with leaking.


Mating Brackets to Panel Frame

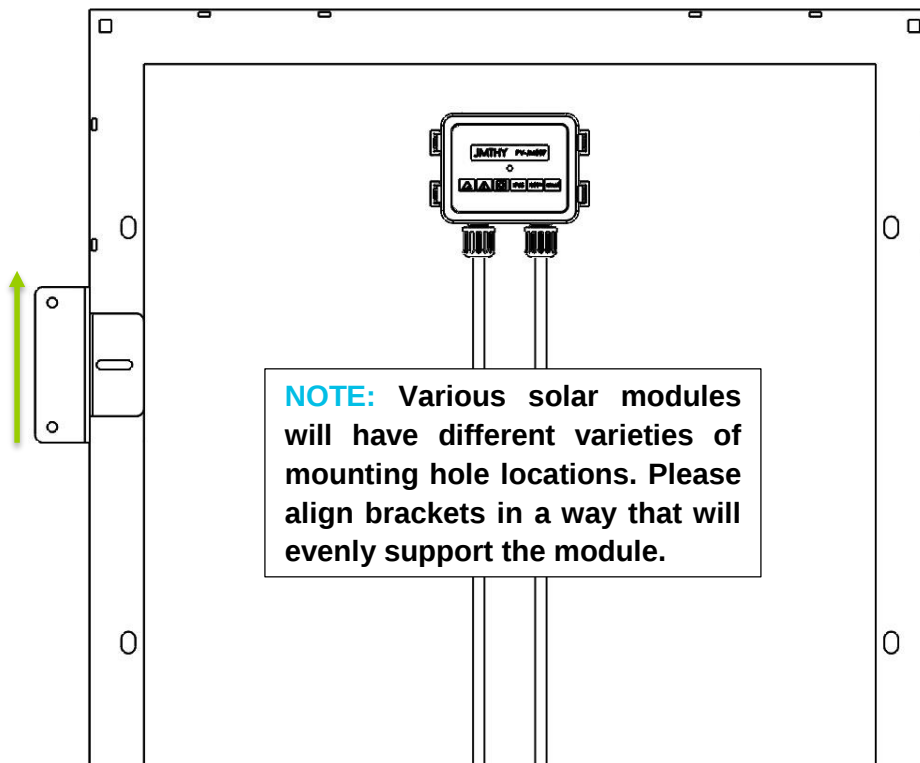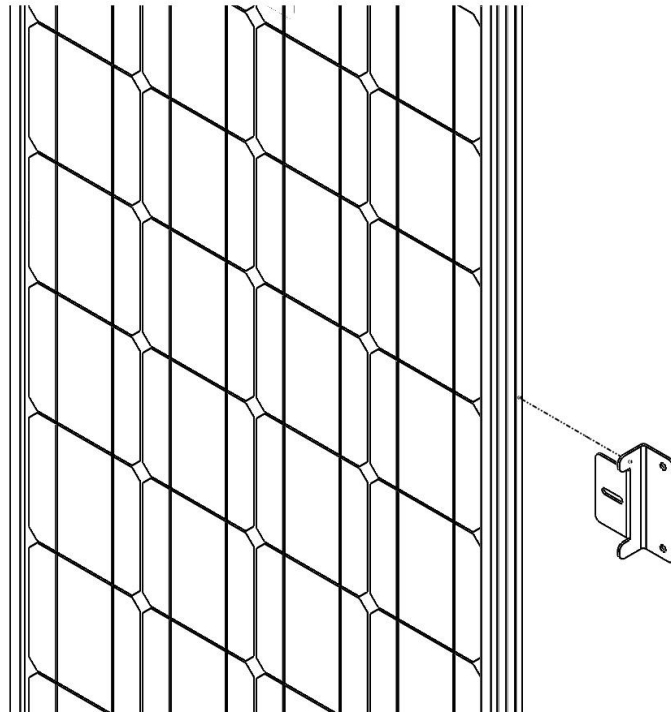

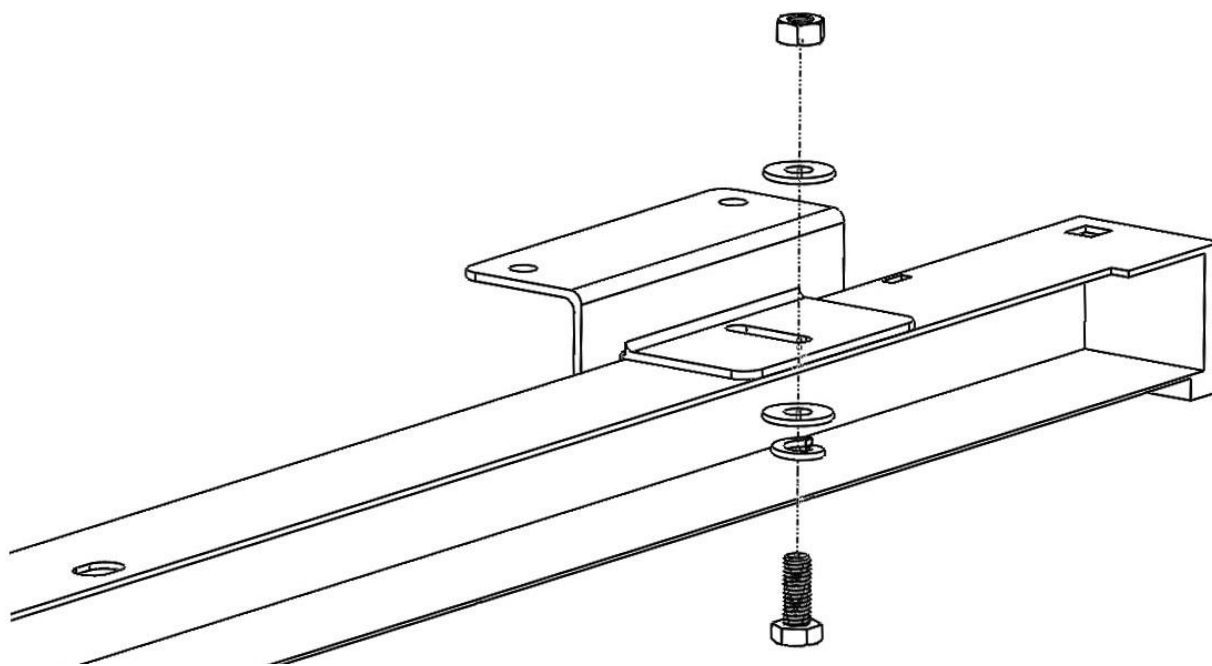
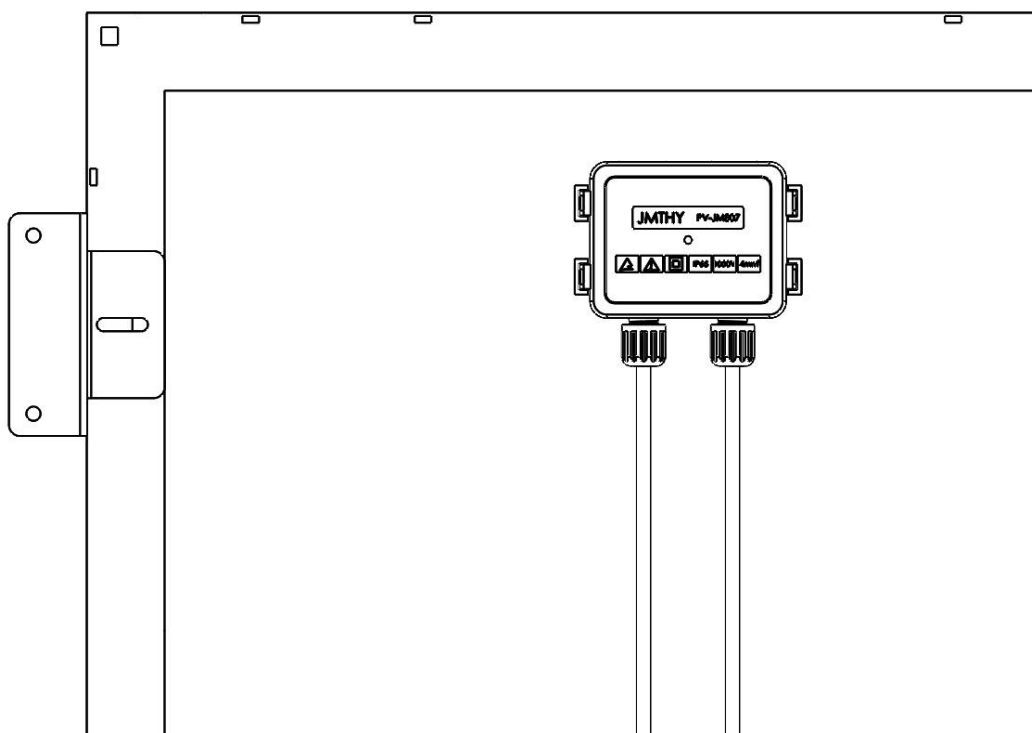


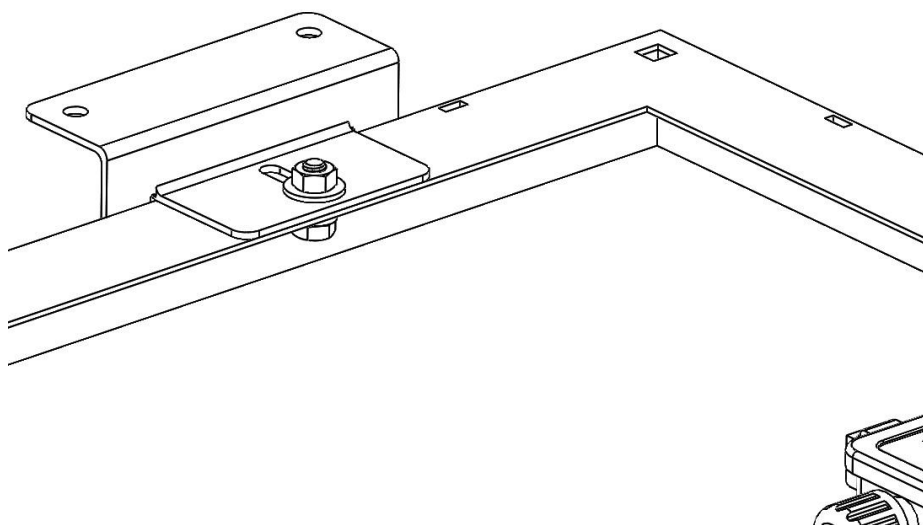
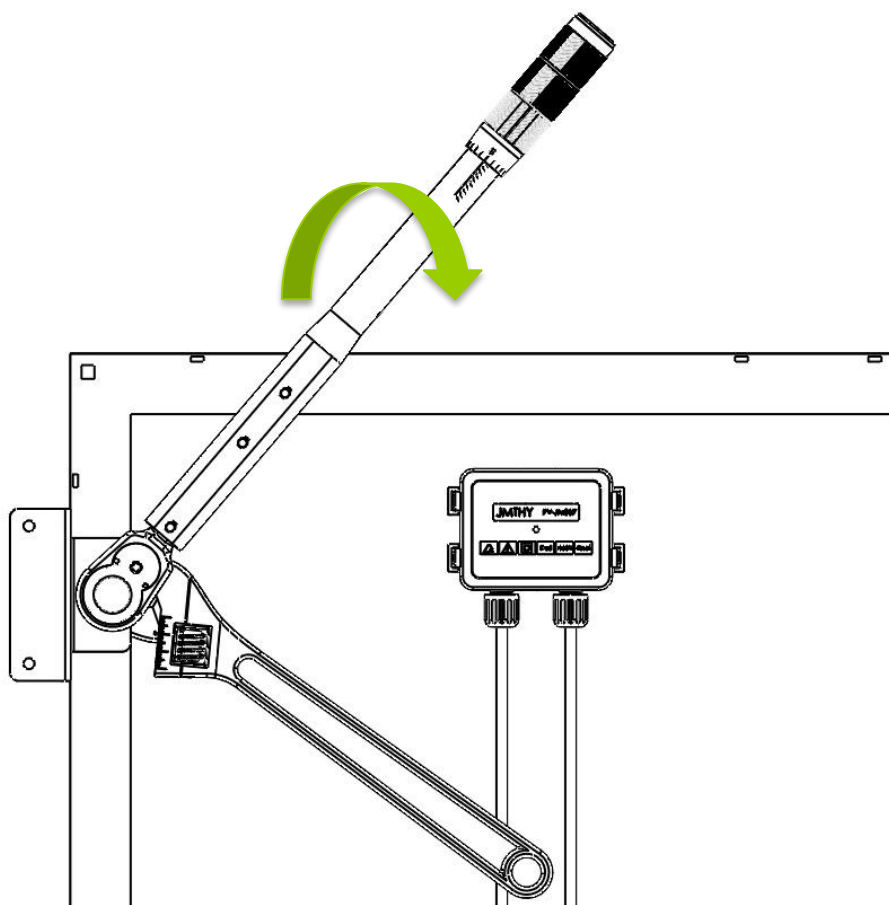



Repeat for each Z-Bracket in the set at each corner.

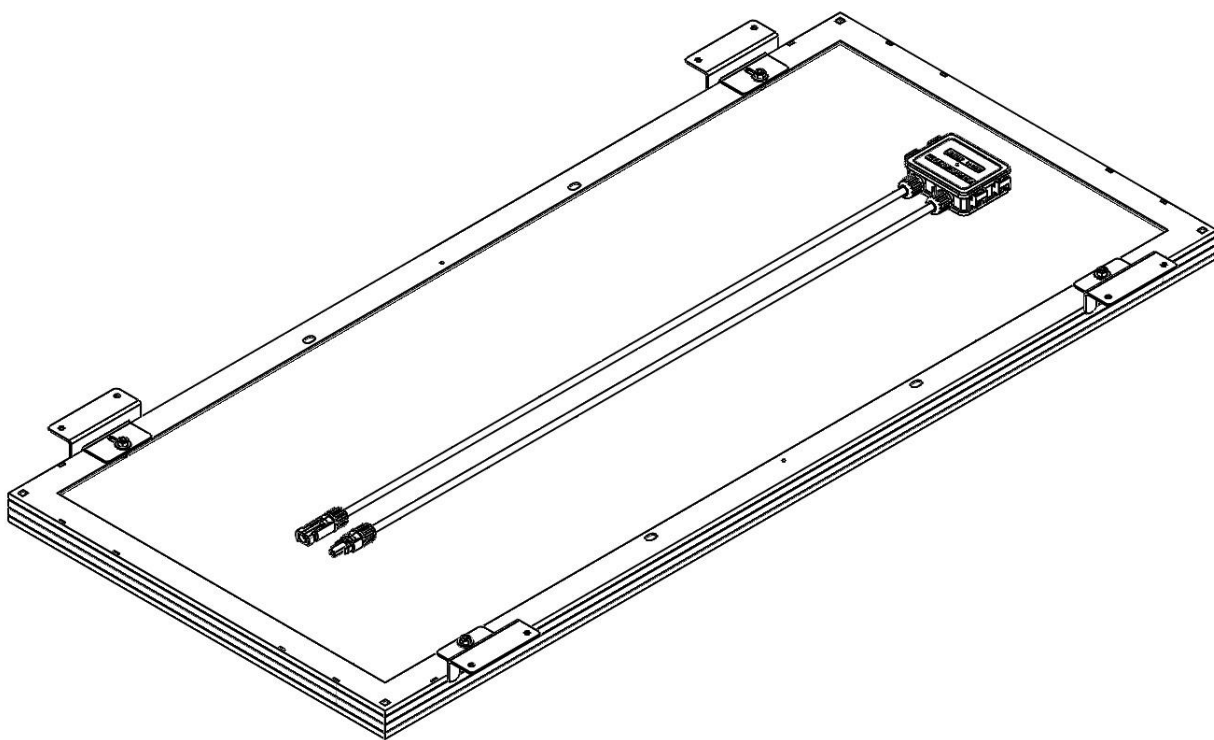


Install of Panel to General Mounting Surface

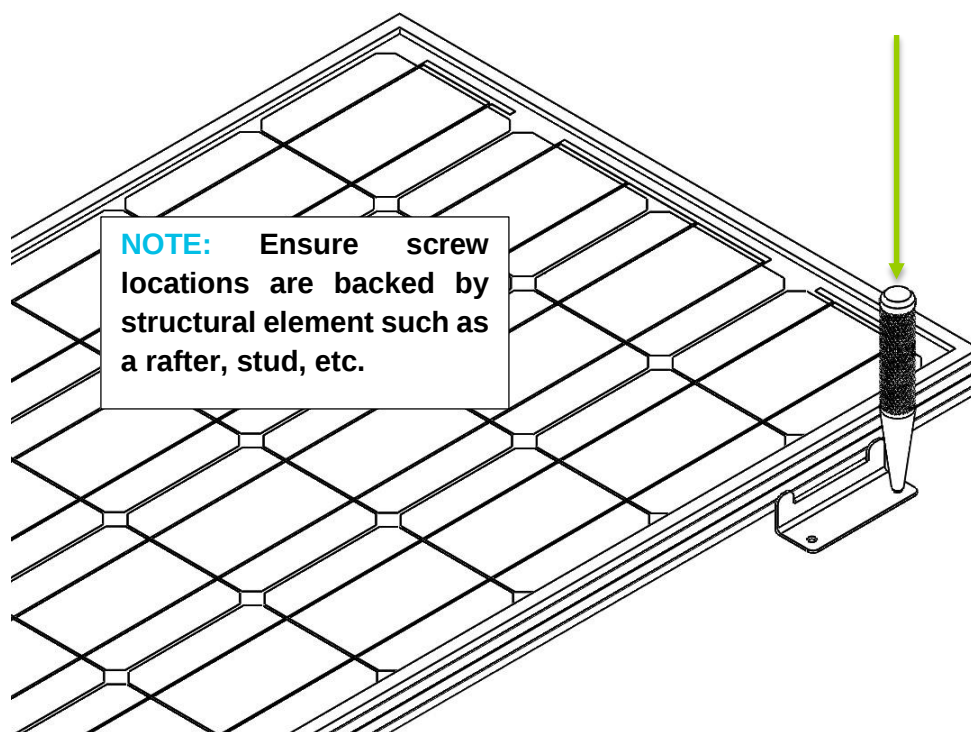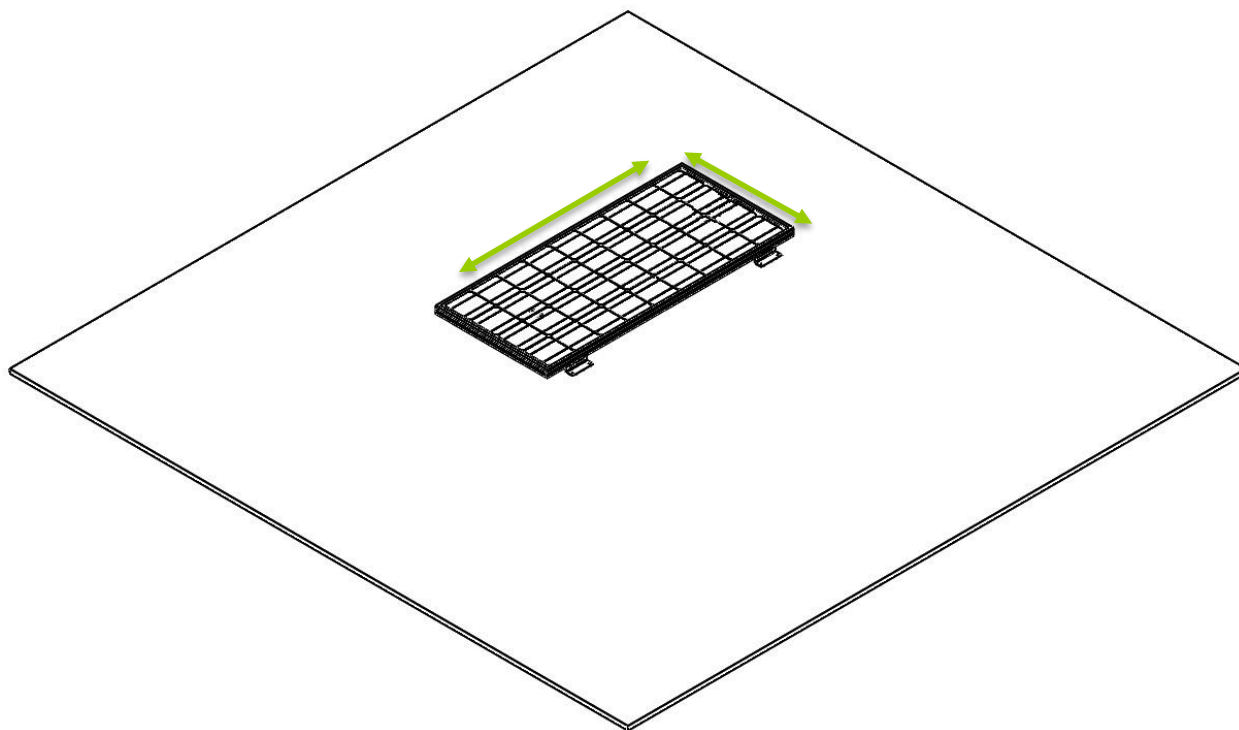


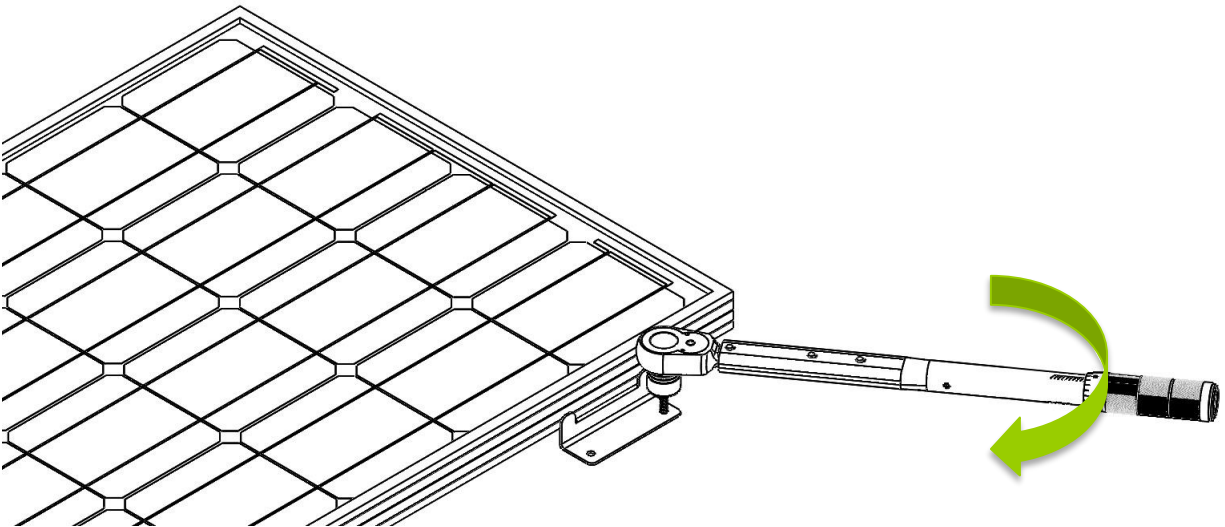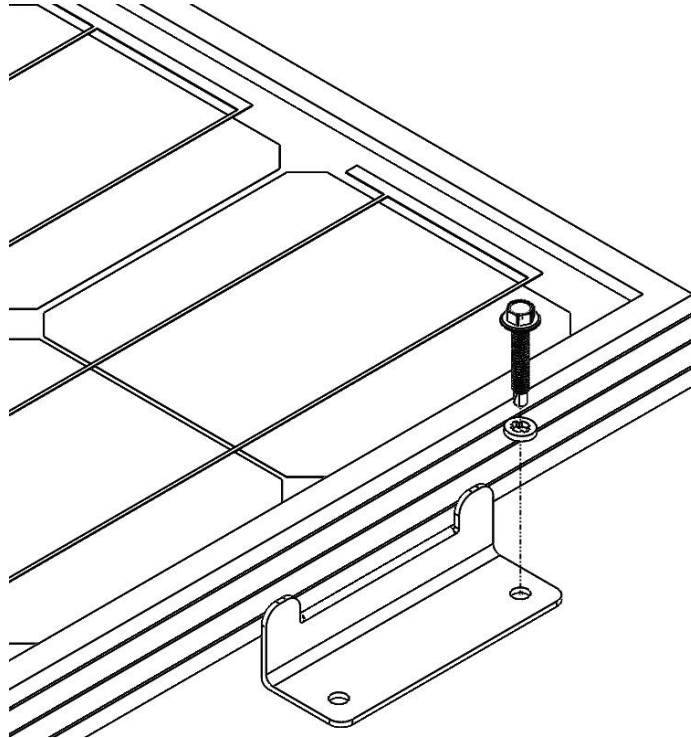

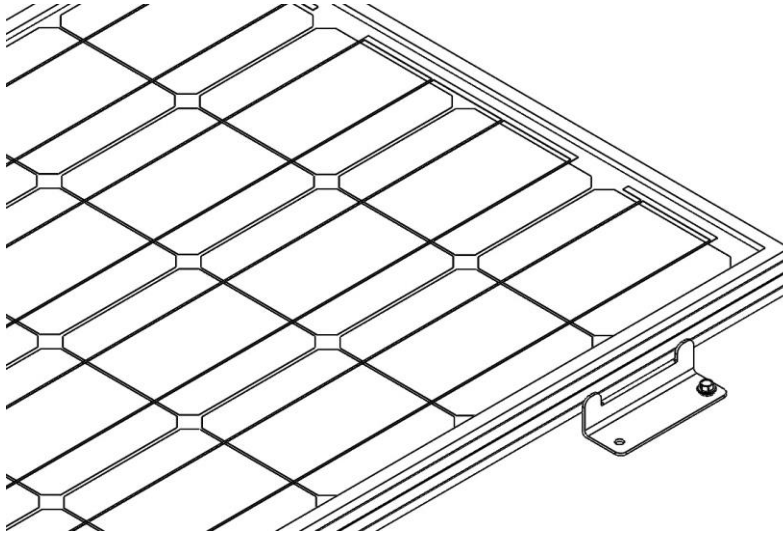


NOTE: Orient panel in level/plumb layout as desired before fixing in position.

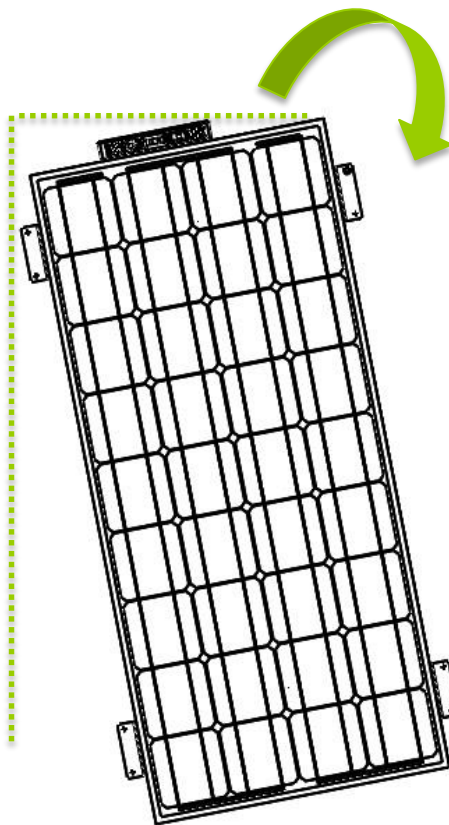


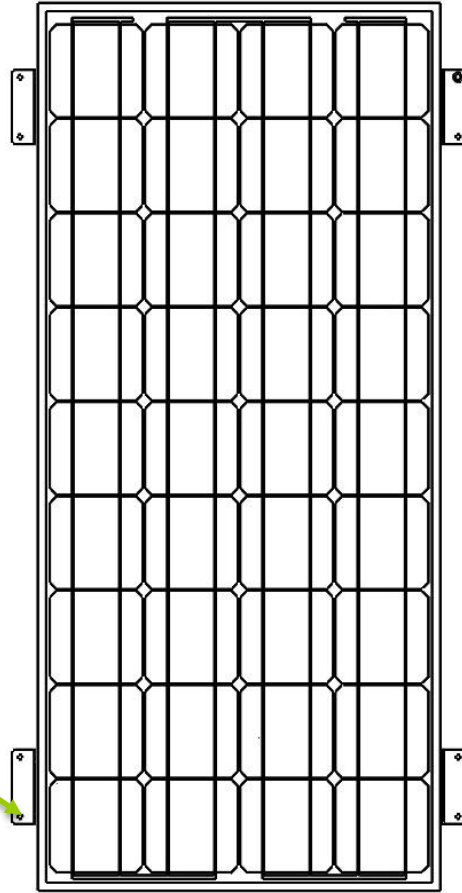


NOTE: Begin new fastener at indicated location first to secure panel in level plumb/level layout.

Repeat for all fastener locations.

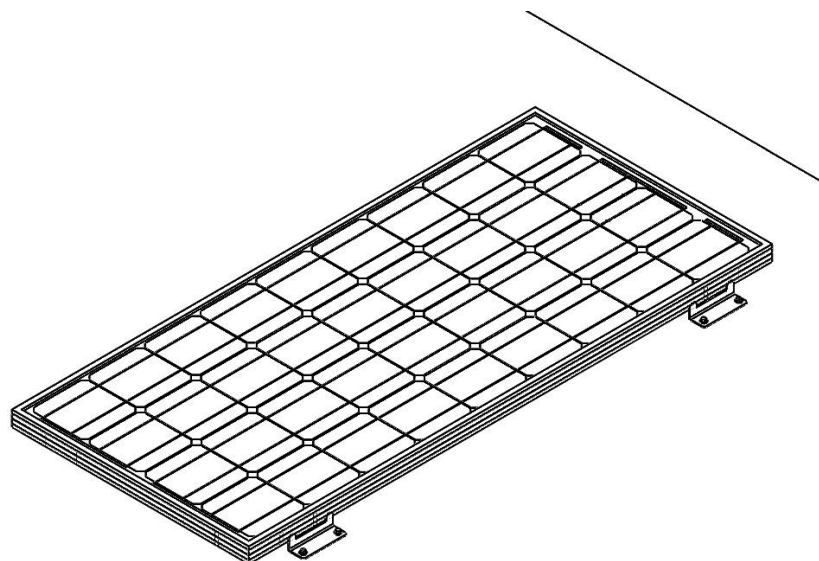

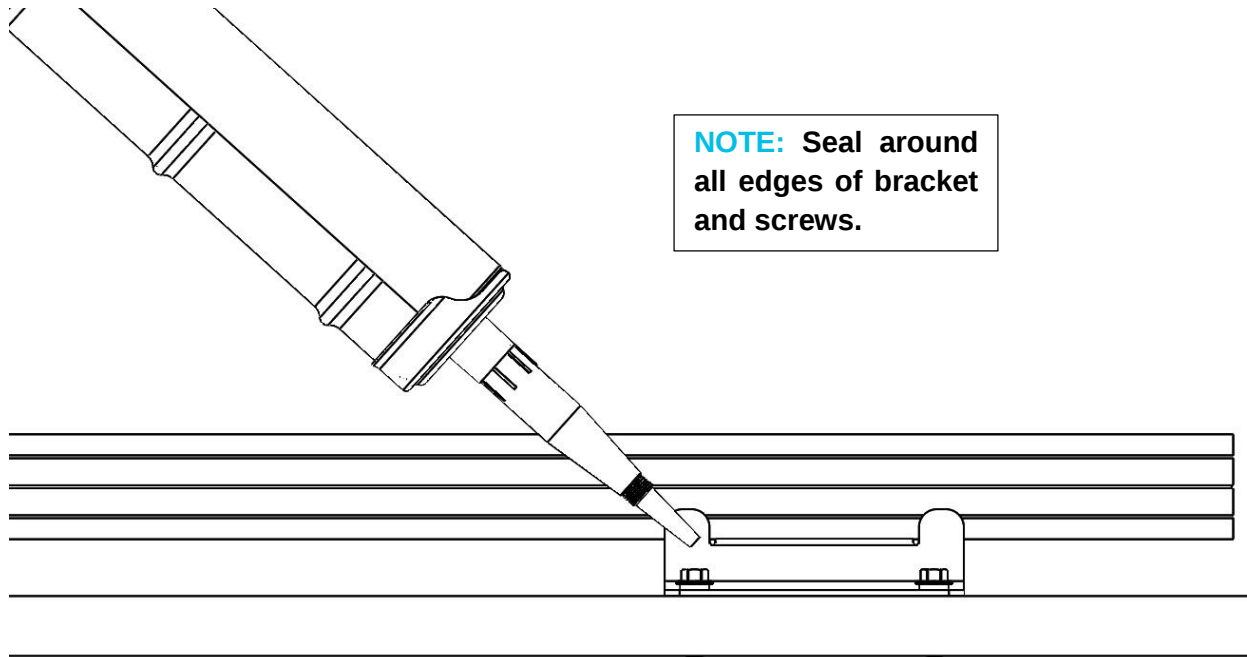

Repeat for all brackets.



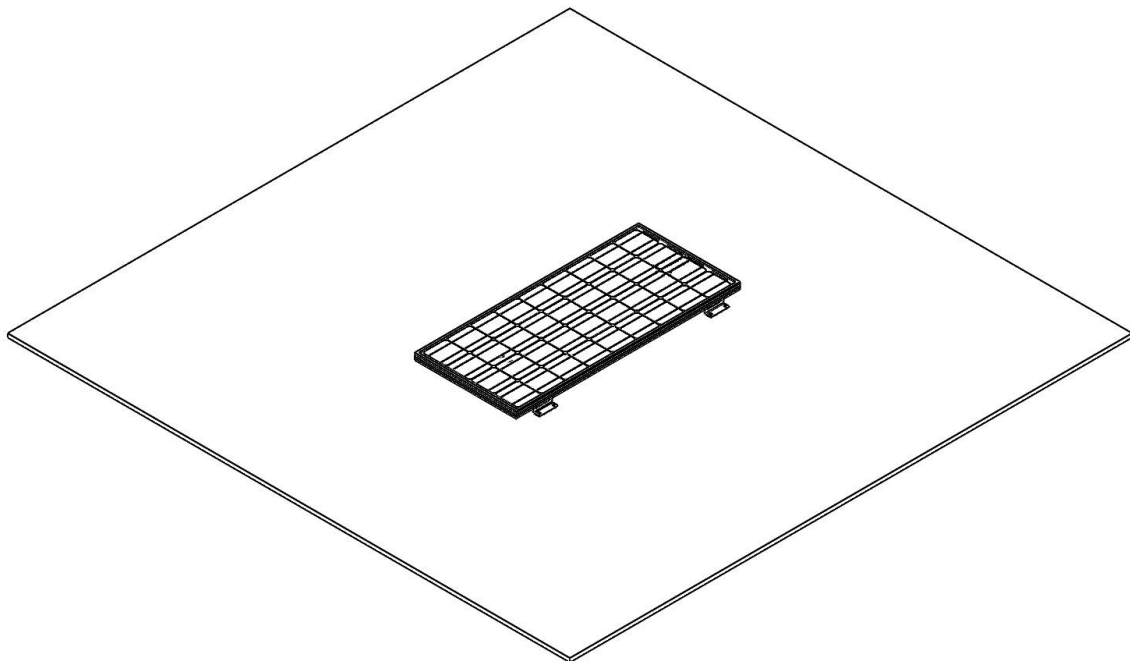



Install of Panel to RV Roofs



Installation on to the roofs of RV's typically requires more specialized instruction due to the nature of construction of most commercially available RV roofs. Please note that this section includes the use of a fastener type **NOT** included in the Z-Bracket kit. This section is included for convenience of customers installing to an RV roof. The instructions listed in this section are a modification of the normal installation, all other steps are to be completed normally.



NOTE: A minimum roof thickness of 3/8" is recommended for this type of installation.



Additional components and tools required for this section:

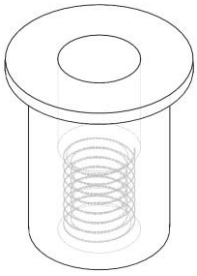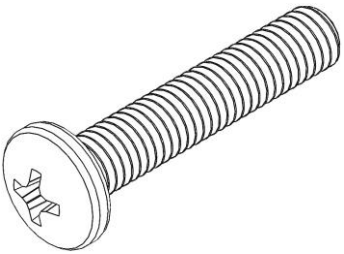Image	Component	Description
	Well Nut	Special recessed fastener which expands as the internal fastener is tightened. Allows for fastener to seal within mounting surface and embed itself tightly. Need variety with at least #10-32 internal thread, material thickness supporting roof thickness, and 3/8" hole size. A fastener with suggested features can be found here: http://www.mcmaster.com/#93495a190/=xfp203 http://www.homedepot.com/p/Everbilt-10-32-tpi-x-5-8-in-Brass-Expansion-Nut-814358/204276054
	Machine Screw	Used to secure Z-Brackets to surface with well nut. Must be compatible with chosen well nut by having the same internal thread and not longer than the length of the well nut. Must also purchase compatible flat and lock washers.
	Phillips Head Screw Driver	Used to secure machine screw into well nut.

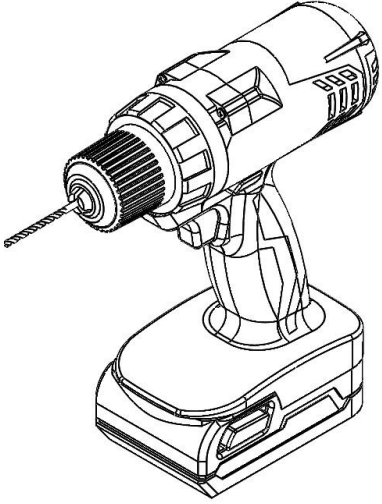	Cordless Drill	Used to drill clearance holes for well nuts in roof top.
	Drill Bit	Used with Cordless Drill to create clearance holes for the well nuts. Must be matched to the well nut's outer diameter. Recommended variety requires 3/8" bit.

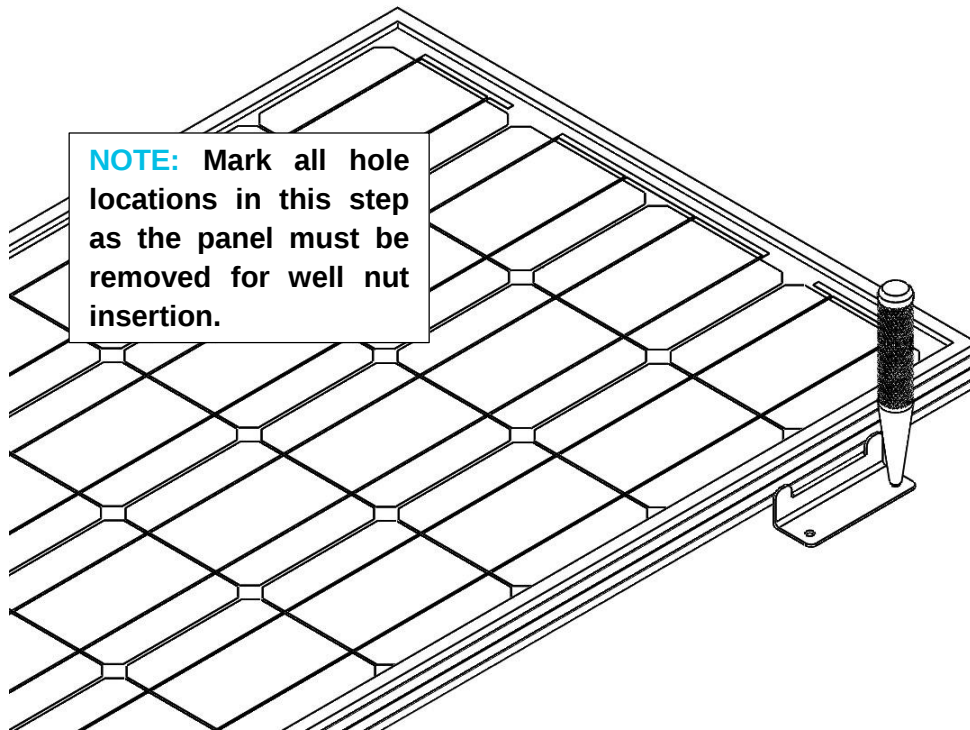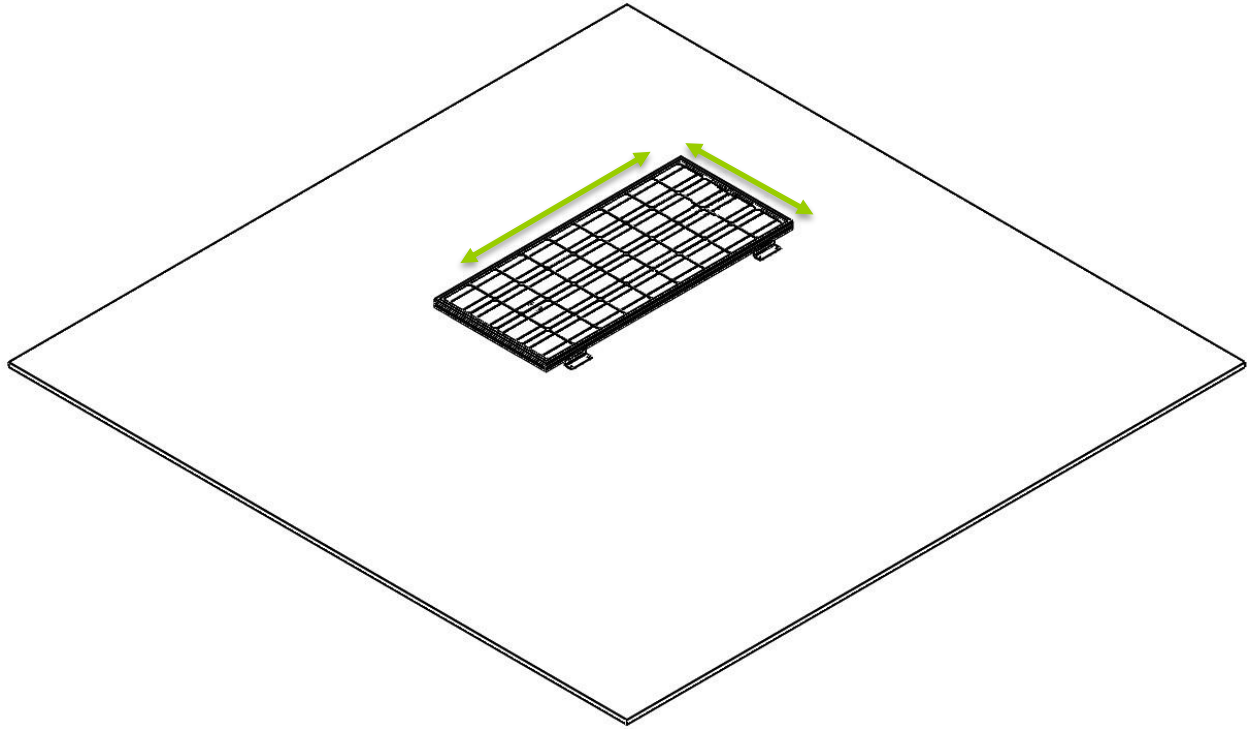

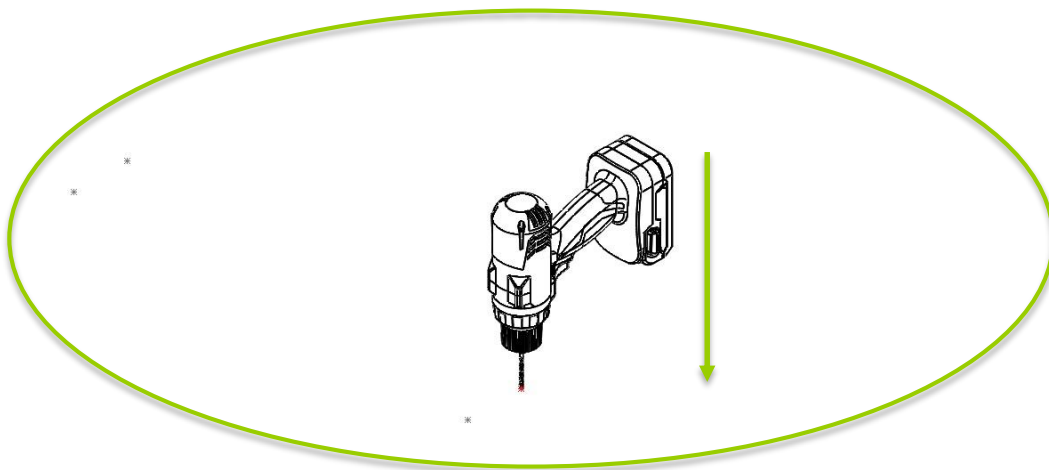
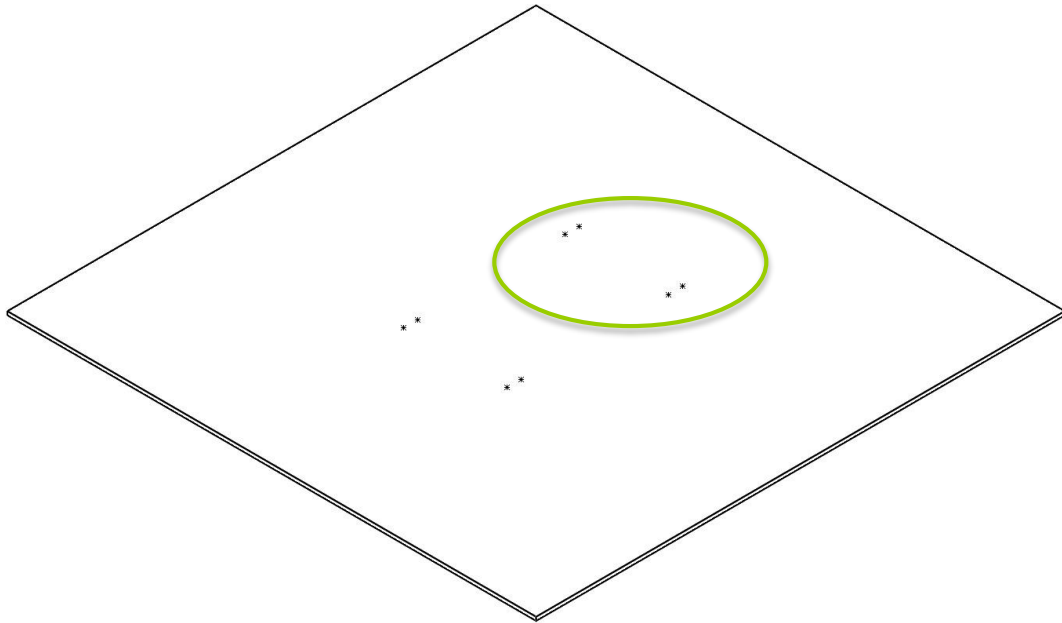


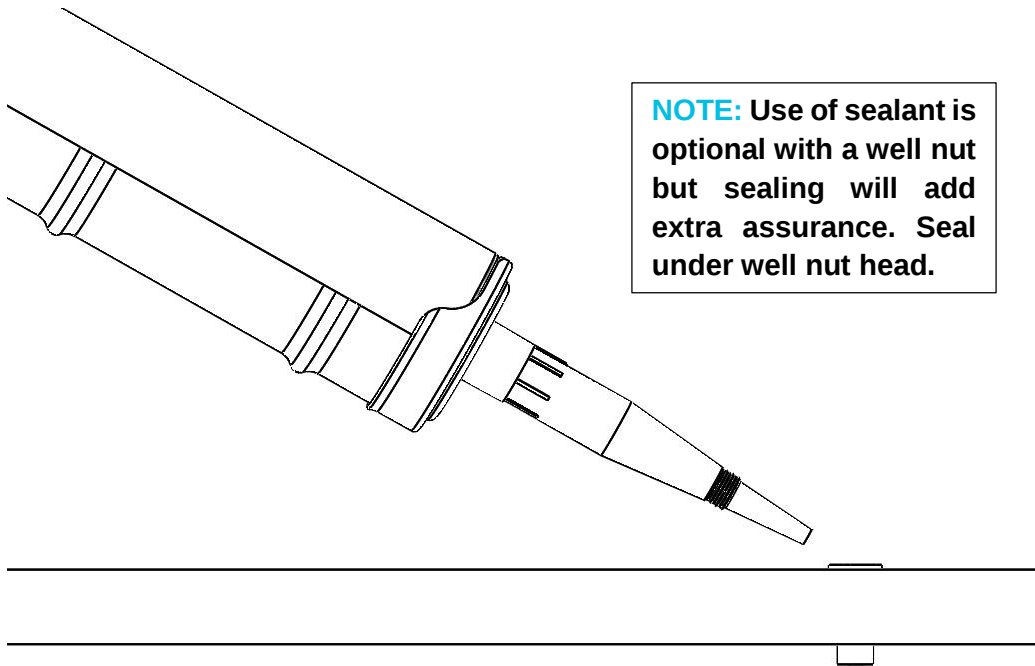
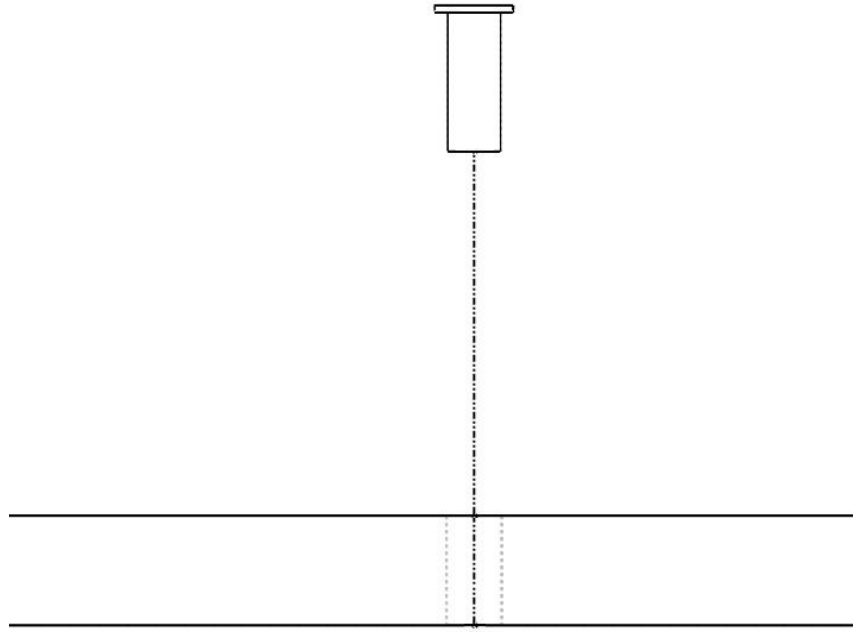


NOTE: Use of sealant is optional with a well nut but sealing will add extra assurance. Seal under well nut head.

Repeat for all holes.

NOTE: Orient panel in level/plumb layout as desired before fixing in position.

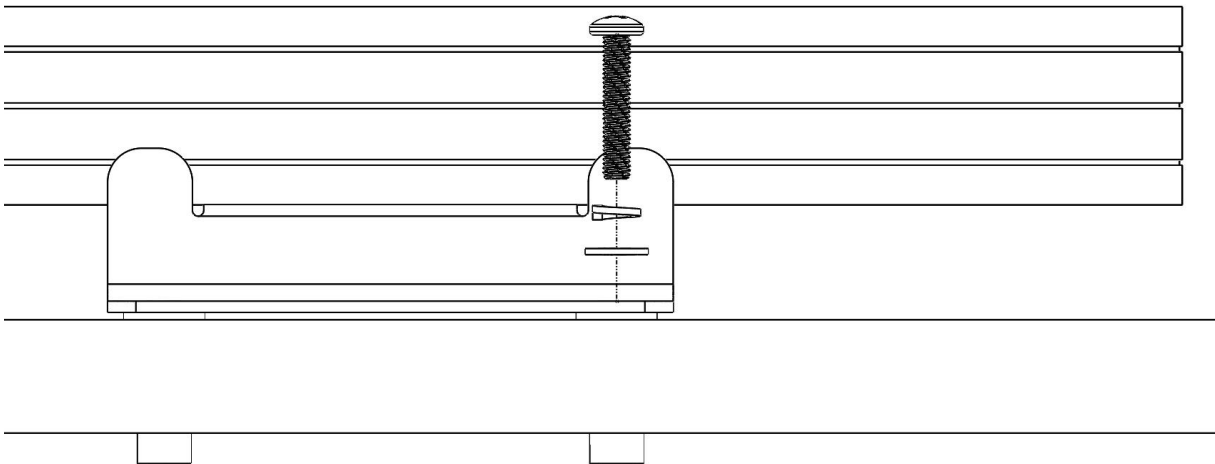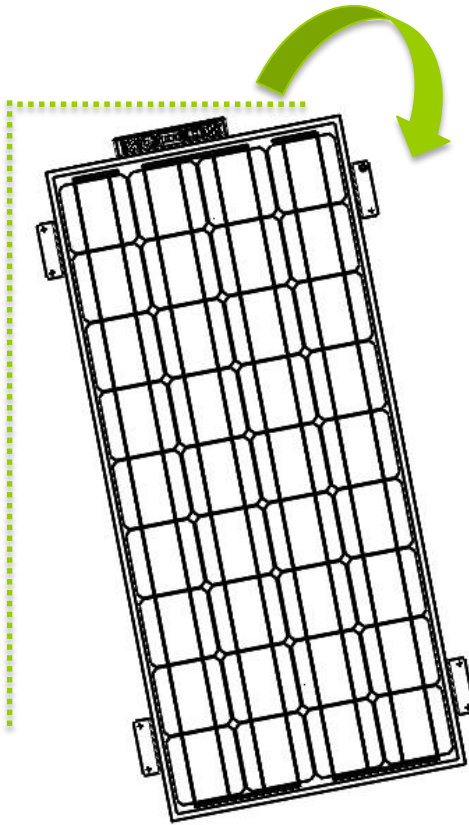


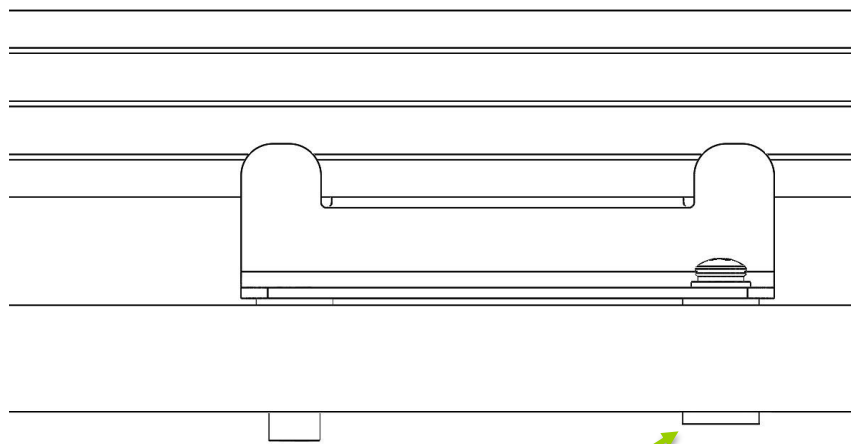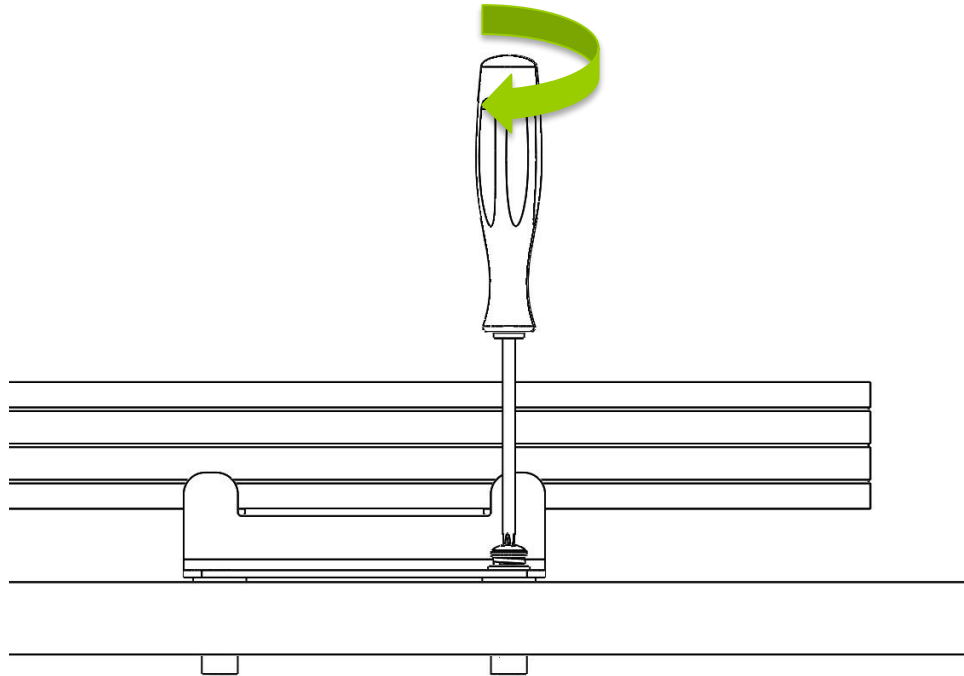


NOTE: Screw has compressed and expanded the well nut, binding into the roof material.


Repeat for all fasteners.

Z-Bracket Dimensions

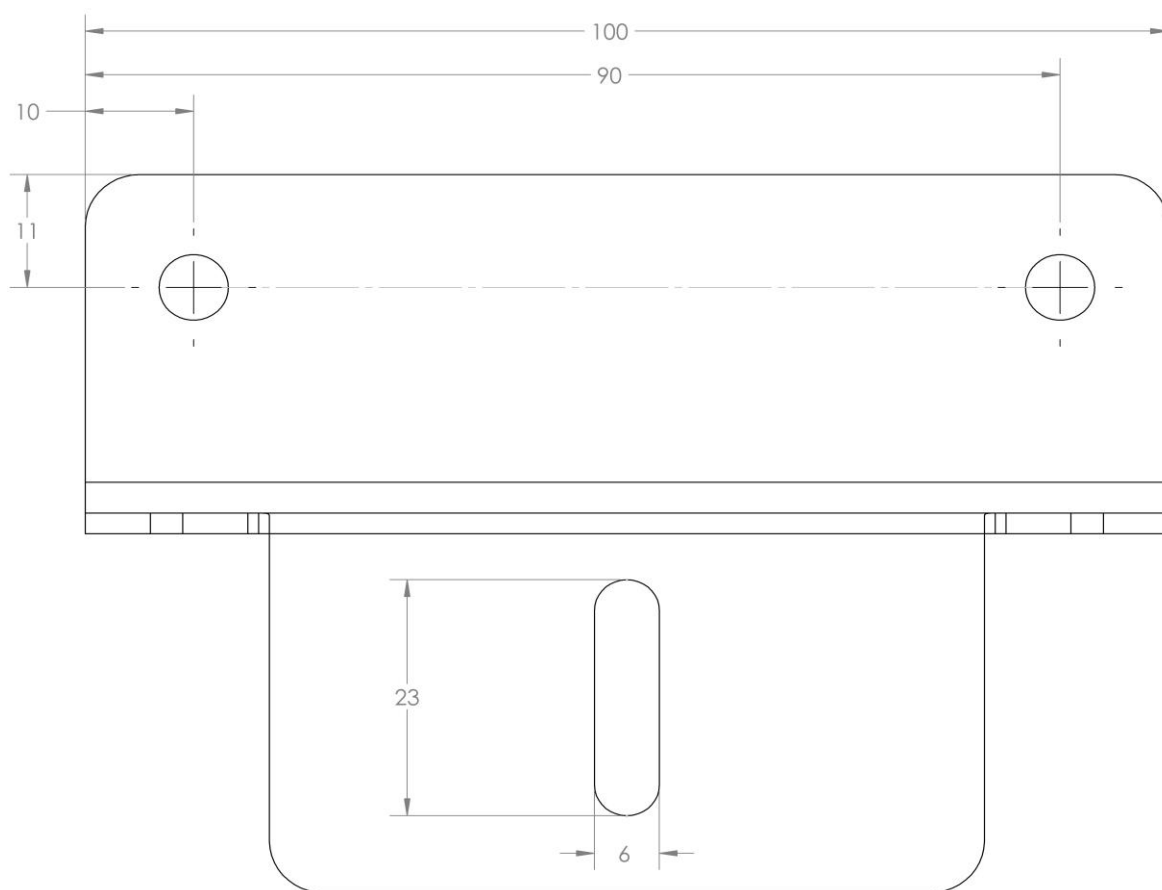


NOTE: Dimensions in millimeters.

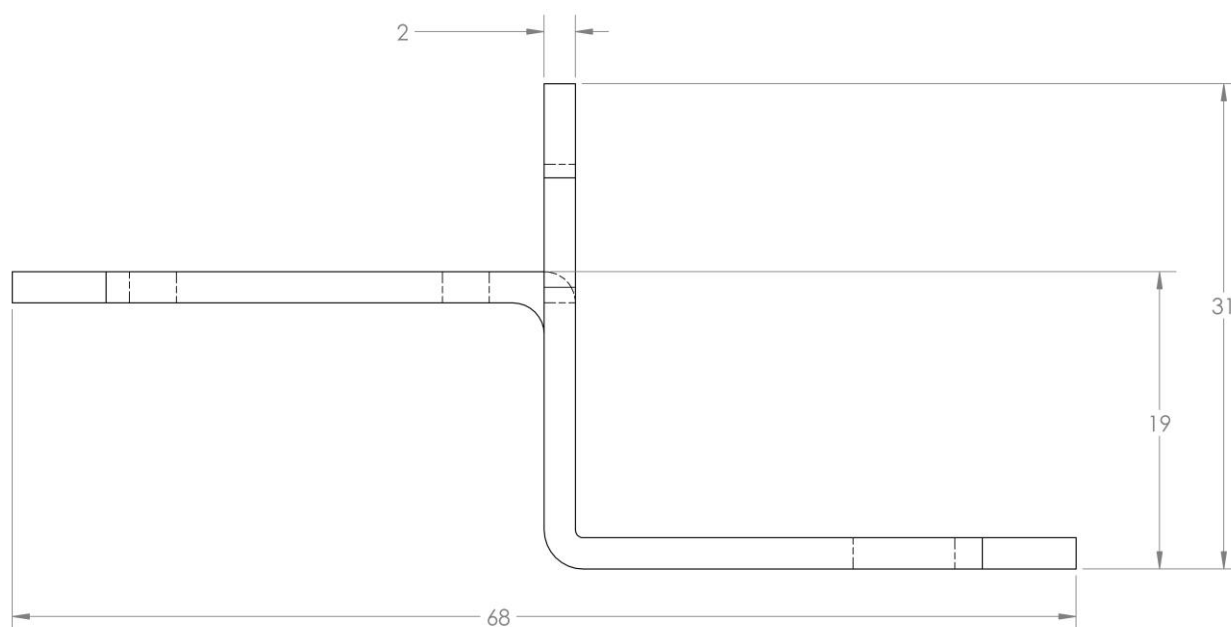

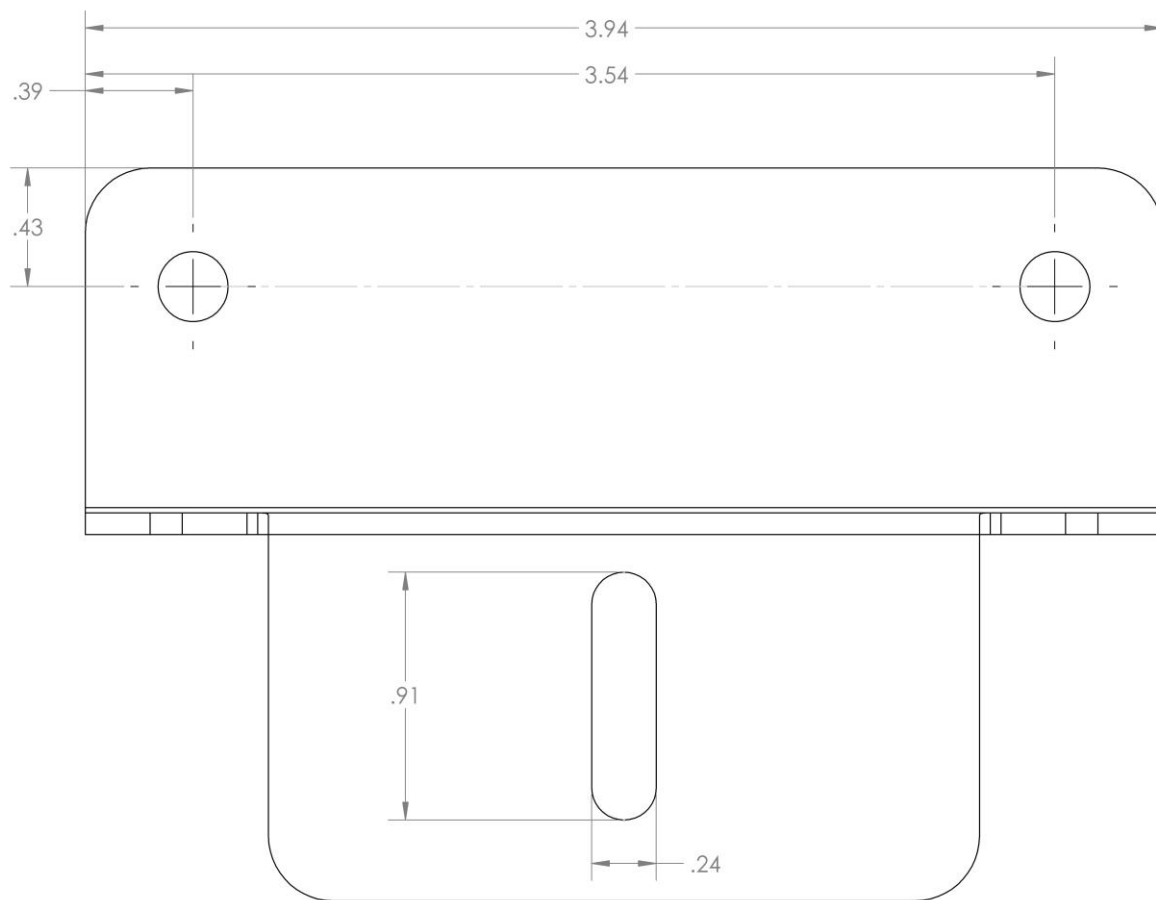

NOTE: Dimensions in inches.

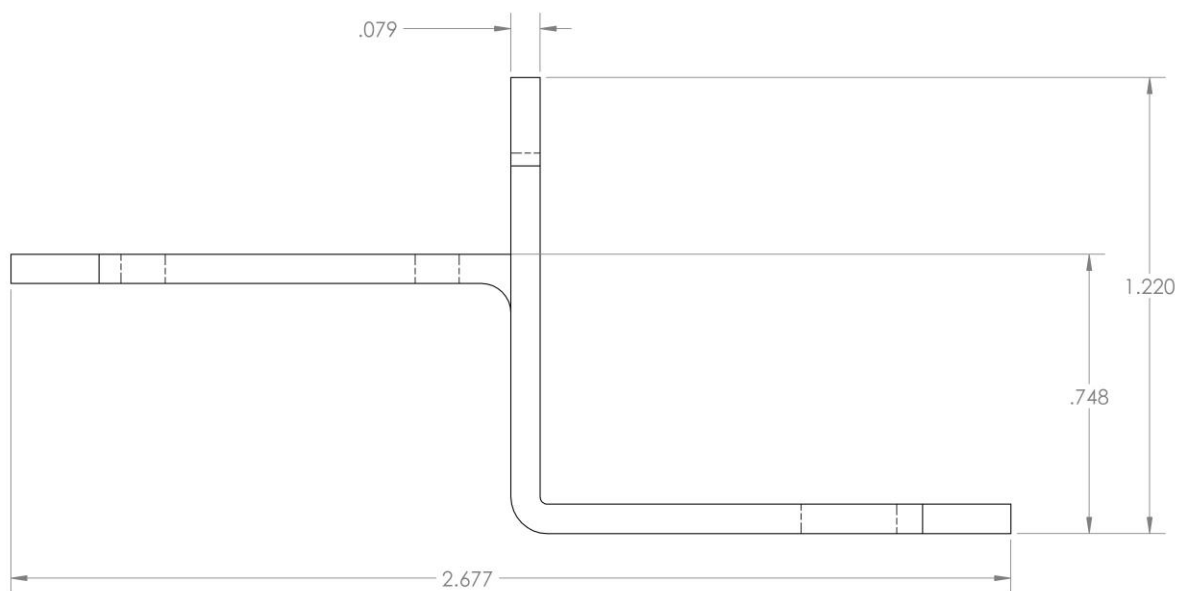

Compatibility

RENOGY Solar Module	Compatibility*
RNG-10D	COMPATIBLE
RNG-20D	COMPATIBLE
RNG-30D	COMPATIBLE
RNG-50D	COMPATIBLE
RNG-100D	COMPATIBLE
RNG-150D	COMPATIBLE
RNG-250D	COMPATIBLE**
RNG-50DB	INCOMPATIBLE
RNG-100DB	INCOMPATIBLE
RNG-50P	COMPATIBLE
RNG-100P	COMPATIBLE
RNG-250P	COMPATIBLE**
RNG-300P	COMPATIBLE**

*This list is not comprehensive and is intended for an “at-a-glance” look at which solar modules provided by Renogy are compatible with the Z-Bracket Mounting System. Modules provided by other manufacturers may work with the Z-Bracket Mounting System provided the follow conditions are met:

- 1) Solar module weight does not exceed 88 lbs (40 kg) or total load per bracket does not exceed 22 lbs (10 kg).
- 2) Solar module framing material is constructed of an aluminum alloy.
- 3) If using a panel oriented such that the distance between Z-Brackets along an edge exceeds 39 in (1 m), it is advisable to add Z-Brackets for mid-span support. Lack of mid-span support can cause excessive stress in the module under load and may result in solar module damage. Consult with your solar module manufacturer if you are unsure of the compatibility.

**These modules require the installation of 2 Z-Bracket sets to ensure the modules do not excessively flex in their mid-span (a total of 8 Z-Brackets per module).



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.