


Isolator Relay Delay - Diesel

Intellitec's Battery Isolator Relay Delay-Diesel™ offers a new approach to charging, isolating and jump starting dual batteries in an RV which has a diesel engine requiring up to 800 amps of starting current. Unlike conventional diode isolators, this system provides the engine driven alternator with the opportunity to begin charging the chassis battery before connection the coach battery. This allows the use of self-exciting alternators and lets the engine briefly warm up prior to placing the load of an heavily discharging of the coach battery when heavy chassis current is being supplied. A remote (dash mounted) switch can be added for a coach battery "Jump Start" feature.

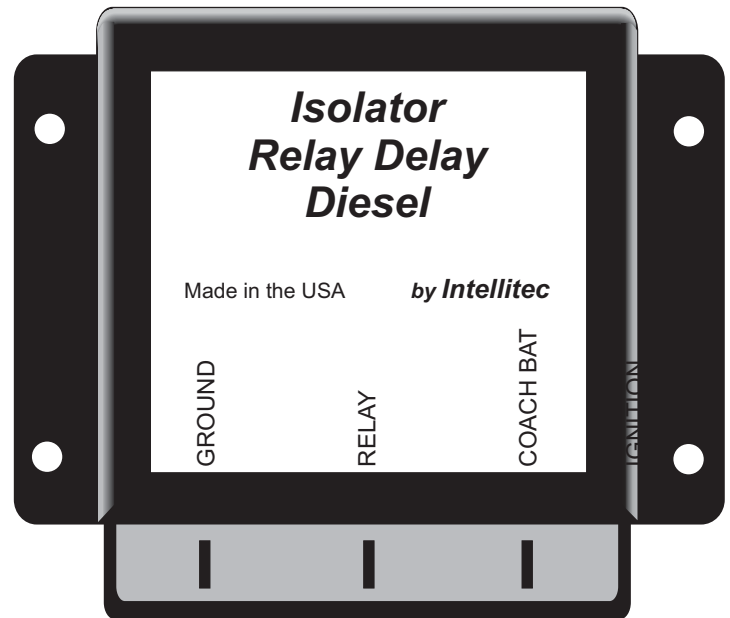

The unit is enclosed in a plastic housing for mounting in the engine compartment. It operates in combination with an intermittent duty cycle isolator relay, similar to ones used as diesel starter solenoids. There are three (3) wires to connect to the delay unit, one from an ignition switched 12 volt source, a ground and the isolator relay coil.

It operates by sensing the level of voltage on the chassis 12 volt system. When this voltage goes above 13.3 volts for approximately 12 seconds, as happens when the engine is running normally (normal alternator output voltage is approximately 14.4 volts), it will close the isolator relay providing charging current to the coach battery. The

controller engages the relay at full voltage and then reduces it allowing an intermittent duty cycle relay to be used continuously. When the ignition switch is turned off, the relay will open immediately. If the voltage should drop below 12 volts for more than two seconds while running, the relay will dropout. This might happen when the alternator is not able to supply sufficient current to all of the loads.

If the chassis voltage goes above 13.3 volts again, the relay will again close in about two (2) seconds to re-try and charge the battery. The resultant flickering of lights would alert the owner of the system overload.



Intellitec

1485 Jacobs Rd.
Deland, FL 32724
386.738.7307


P/N 53-00265-000 Rev. B 032119

Isolator Relay Delay - Diesel

Specifications:

Part Number:	00-00265-000
Pull-in Voltage:	13.3 +/- 0.3 volts
Pull-in Time:	14 +/- 4 seconds
Drop-out Voltage:	12.0 +/- 0.3 volts
Drop-out Time:	2 +/- 0.4 seconds
Ambient Temperature Range:	-40°C to +85° C (-40°F to +185° F)
Coil Resistance:	2.2 ohms minimum
Solenoid Type:	Eaton-Cutler/Hammer 6041H105 or equivalent

Typical Installation Diagram

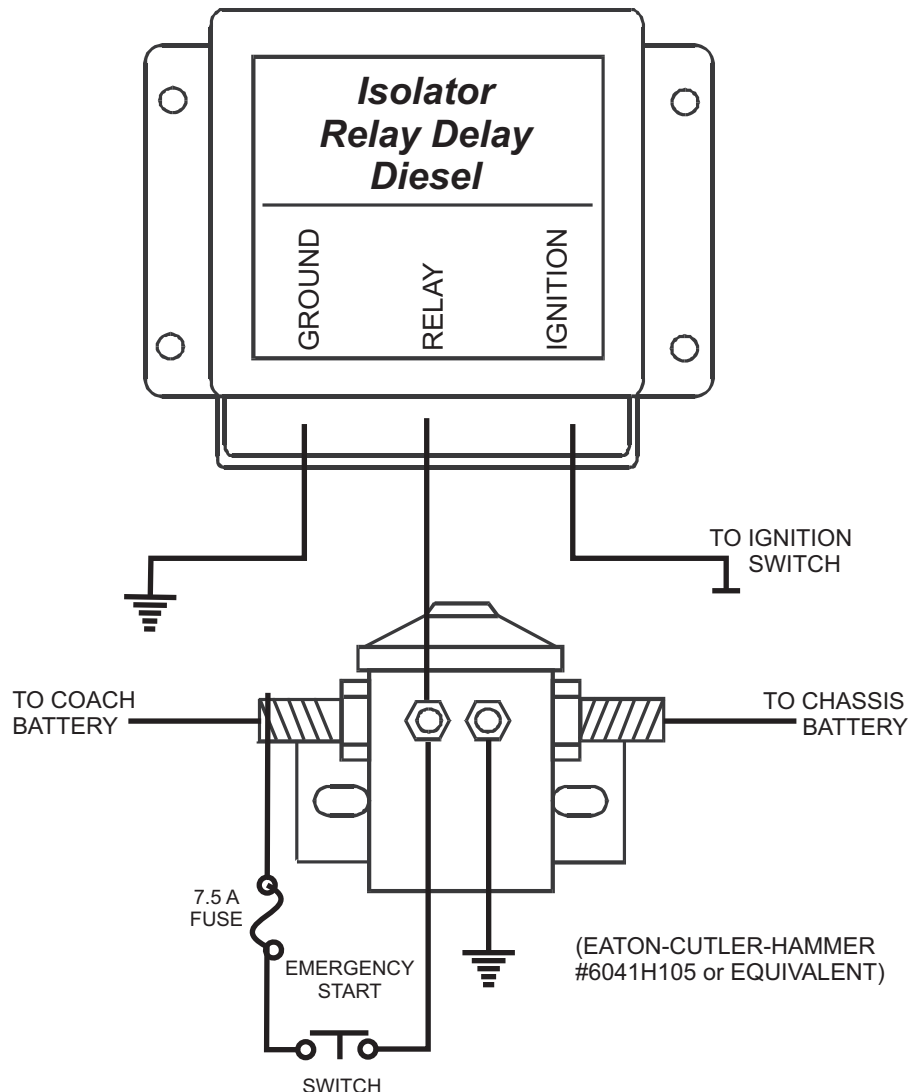

 **Intellitec**
1485 Jacobs Rd.
Deland, FL 32724
386.738.7307

P/N 53-00265-000 Rev. B 032119



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.